

UNI ON/OFF SERIE

INDOOR UNITS: ASCU-**A, ASDU-**A, ASFU-**A

OUTDOOR UNITS: ASGE-A**



CONTENTS

PRODUCT	2
1 MODELS LIST	2
1.1 Outdoor Unit	2
1.2 Indoor Unit	3
2 NOMENCLATURE	4
3 FUNCTION	5
4 PRODUCT DATA	6
4.1 Product Data at Rated Condition	6
4.2 Operation Range	18
4.3 Electrical Data	19
5 PIPING DIAGRAM	20
CONTROL	22
1 OPERATION FLOWCHART	22
1.1 Cooling/Dry Operation	22
1.2 Heating Operation	23
2 MAIN LOGIC	24
2.1 Cooling	24
2.2 Dry Mode	25
2.3 Heating Mode	26
2.4 Defrosting	27
2.5 Fan Mode	28
3 WIRELESS REMOTE CONTROLLER	29
3.1 Operation View	29
3.2 Display View	31
4 WIRED REMOTE CONTROLLER	32
4.1 Operation View	32
4.2 Display View	34
4.3 Dimension	35
4.4 Installation	35
5 CENTRALIZED CONTROLLER	37
5.1 Centralized Controller-not with week timer	37
5.2 Centralized Controller-week timer	38
5.3 Field Setting	42
5.4 Control Wiring Design	43
INSTALLATION	45
1 INDOOR UNIT INSTALLATION	45
1.1 Installation of Duct Type	45
1.2 Installation of Ceiling Type	54
1.3 Installation of Cassette Type	59
2 OUTDOOR UNIT INSTALLATION	70
2.1 Refore Installation	70

2.2 Installation Site	70
2.3 Caution for Installation	70
2.4 Dimension Data	71
2.5 Installation Clearance Data	72
3 REFRIGERATION PIPING WORK	73
3.1 Refrigeration Piping Work Procedures	73
3.2 Caution in Connecting Pipes	76
3.3 Specification of Connection Pipe	77
4 ELECTRIC WIRING WORK	78
4.1 Wiring Principle	78
4.2 Electric Wiring Design	82
4.3 Specification of Power Supply Wire and Air Switch	85
MAINTENANCE	88
1 TROUBLE TABLE	88
2 FLOW CHART OF TROUBLESHOOTING	92
3 WIRING DIADRAM	102
3.1 Wiring Diagram-Outdoor Units	102
3.2 Wiring Diagram-Indoor units	110
4 DISASSEMBLY AND ASSEMBLY PROCEDURE OF MAIN PARTS	112
4.1 Outdoor Unit	112
4.2 Indoor Unit	138
5 EXPLODED VIEWS AND PART LIST	159
5.1 Outdoor Unit	159
5.2 Indoor Unit	175

PRODUCT

PRODUCT

1 MODELS LIST

1.1 Outdoor Unit

Model	Nominal Capacity Cooling/Heating (Btu/h)	Ref.	Power Supply	Appearance
ASGE-09A	8870/9720	R410a	220-240~,1,50	
ASGE-12A	11940/12283	R410a	220-240~,1,50	
ASGE-18A	17060/19448	R410a	220-240~,1,50	
ASGE-24A	23884/27296	R410a	220-240~,1,50	
ASGE-36A	34120/37532	R410a	380-415~,3,50	
ASGE-42A	40944/47768	R410a	380-415~,3,50	
ASGE-48A	47768/52886	R410a	380-415~,3,50	

Note:1Ton =12000Btu/h = 3.517kW

1.2 Indoor Unit

Туре	Model	Nominal Capacity Cooling/Heating (Btu/h)	Ref.	Power Supply	Appearance
	ASDU-09A	8870/9720			
ASDU-12A ASDU-18A Duct ASDU-24A Type ASDU-36A ASDU-42A ASDU-48A	11940/12283			The same of the sa	
	17060/19448				
	23880/27300	R410a	220-240~ 1Ph		
	ASDU-36A	33437/37500	- K410a	50Hz	
	ASDU-42A	42000/48000			
	ASDU-48A	48000/53000			30
ASI Floor- ASI	ASFU-09A	8870/9720	R410a		
	ASFU-12A	11940/12283			
	ASFU-18A	17060/19448		220-240~	•
	ASFU-24A	23880/27300		1Ph	
Type	ASFU-36A	33437/36781		50Hz	
	ASFU-42A	42000/48000			
	ASFU-48A	48000/53000			
	ASCU-09A	11940/12283			
	ASCU-12A	17060/19448			
Cassette	ASCU-24A	23201/25590	R410a	220-240~ 1Ph	
Type	ASCU-36A	36000/37500		50Hz	
	ASCU-42A	42000/48000			
	ASCU-48A	48000/53000			

Note:1Ton = 12000Btu/h = 3.517kW

NOTES:

The universal outdoor units means that the customer can choose any of three kind of indoor unit to match the outdoor unit without any change with it

2 NOMENCLATURE

A S C U - 09 A 1 2 3 4 5 6

NO.	Description	Options
1	Airconditioner	
2	Sinclair	
		D=Duct Type
		C=Cassette Type
3 Product Type	F= Floor & Ceiling Type	
	-	G=Outdoor unit
		H=Wall mounted Type
		U=Uni On/Off Series
4	Series Type	E=External unit
5	Nominal Cooling Capacity	Nominal Cooling Capacity =Number×1000Btu/h
6	Refrigerant	A=R410A

3 FUNCTION

Function	Description
Mamary function	when unit restart after power off, it will run on former status, the mode and
Memory function	parameter are kept the same
Remote control function	wireless controller and remote controller can be opted, and the maximum
Remote control function	control distance of remote controller is 10m.
Timing function	it can timing ON/ OFF separately, meanwhile, it can also can timing on
Timing function	circularly
Salf diagnosis with alarm function	once unit has malfunction, the malfunction code will be indicated and alarm
Self-diagnosis with alarm function	ring immediately
Sleep function	it can self control for saving energy in energy saving mode.
A 4 4 : - C 4 :	the fan of indoor unit can adjust fan speed automatically based on actual
Automatic function	demand when cooling or heating under automatic mode
	the fan starts only when the temperature of indoor unit heat exchanger is higher
Cool air proof function	than indoor temperature under heating mode
	Centralized Control and Week Timer Functions: The centralized controller and
	the weekly timer are integrated in the same wire controller. The system has both
	the centralized control and the week timing functions. Up to 16 sets of units can
W. 11 m.	be controlled simultaneously by the centralized controller (weekly timer). The
Weekly Time	weekly timer has the function of invalidating the lower unit. The weekly timing
	function is able to realized four timing ON/OFF periods for any unit every day,
	so as to achieve fully automatic operation. No timing control can be set for
	holidays.
III-1-//	when suction pressure is too low or discharge pressure is too high, compressor
High/low pressure protection	will stop and unit display malfunction code
	compressor has its own overheat protection, once the temperature of compressor
Overload protection	is higher than allowable level, compressor will stop and only when temperature
	recovery, compressor restart
0	once the current of compressor is higher that normal level, compressor will stop
Over current protection	and unit display malfunction code
Discharge high	once the discharge temperature of compressor is higher than allowable value,
temperature protection	compressor will stop and unit display malfunction code
Davanca (aman) mhasa mustaatian	once the phase sequence of power supply is incongruent or the phase is absent,
Reverse (open) phase protection	unit can't work and display malfunction code
Anti-high	once the heat exchanger temperature of indoor unit is too high, compressor stop
temperature protection	and unit display malfunction code.
Timing ON/OFF display	display and timing turn ON/OFF time
Fan speed display	display the speed (high, medium, low) of fan
Function model display	cooling mode, dehumidifying mode, heating mode, fan mode
Testing display	display testing mode
Temperature display	display room temperature and set temperature
- * *	1

4 PRODUCT DATA

4.1 Product Data at Rated Condition

4.1.1 Duct Type

Nominal Cooling kW 2.6 3.5 5.0	0 60 7 48 1 8 3.22 I-18A
Nominal Capacity Heating kW 2.85 3.6 5.7	60 7 48 1 1 8 3.22 J-18A ×2
Nominal Capacity	7 48 1 8 3.22 I-18A ×2 0
Heating Btu/h 9720 12283 1944	48 1 8 3.22 J-18A ×2
Btu/h 9720 12283 1944	3.22 J-18A ×2
Input	33.22 I-18A ×2
EER/COP W/W 2.6/2.94 2.92/3.55 2.38/3 Indoor Unit ASDU-09A ASDU-12A ASDU-12A Power Supply — 220-240V~/1 Ph/50HZ Heat Exchange — Cross Fin Coil Fan Type — Centrifugal fan Drive — Direct Driver Fan Motor Output kW 0.02×2 0.02×2 0.07×2 Air Flow m³/h 550 600 840 Ext. Static Pressure Pa 25 25 40 Sound Pressure Level (H/M/L) dB(A) 37/36/34 40/38/36 42/40 Air Filter — Standard washable synthetic	3.22 f-18A ×2
Indoor Unit ASDU-09A ASDU-12A ASDU-09A Power Supply — 220-240V~/1 Ph/50HZ Heat Exchange — Cross Fin Coil Type — Centrifugal fan Drive — Direct Driver Fan Motor Output kW 0.02×2 0.02×2 0.07×2 Air Flow m³/h 550 600 840 Ext. Static Pressure Pa 25 25 40 Sound Pressure Level (H/M/L) dB(A) 37 / 36 /34 40/38/36 42/40 Air Filter — Standard washable synthetic	×2 0
Power Supply − 220-240V~/1 Ph/50HZ Heat Exchange − Cross Fin Coil Type − Centrifugal fan Drive − Direct Driver Fan Motor Output kW 0.02×2 0.02×2 0.07× Air Flow m³/h 550 600 840 Ext. Static Pressure Pa 25 25 40 Sound Pressure Level (H/M/L) dB(A) 37 / 36 /34 40/38/36 42/40 Air Filter − Standard washable synthetic	×2 0
Heat Exchange − Cross Fin Coil Type − Centrifugal fan Drive − Direct Driver Fan Motor Output kW 0.02×2 0.02×2 0.07×2 Air Flow m³/h 550 600 840 Ext. Static Pressure Pa 25 25 40 Sound Pressure Level (H/M/L) dB(A) 37 / 36 /34 40/38/36 42/40 Air Filter − Standard washable synthetic	0
Fan Type — Centrifugal fan Brive — Direct Driver Fan Motor Output kW 0.02×2 0.02×2 0.07× Air Flow m³/h 550 600 840 Ext. Static Pressure Pa 25 25 40 Sound Pressure Level (H/M/L) dB(A) 37 / 36 /34 40/38/36 42/40 Air Filter — Standard washable synthetic	0
Fan Drive — Direct Driver Motor Output kW 0.02×2 0.02×2 0.07×2 Air Flow m³/h 550 600 840 Ext. Static Pressure Pa 25 25 40 Sound Pressure Level (H/M/L) dB(A) 37/36/34 40/38/36 42/40 Air Filter — Standard washable synthetic	0
Fan Motor Output kW 0.02×2 0.02×2 0.07 Air Flow m³/h 550 600 840 Ext. Static Pressure Pa 25 25 40 Sound Pressure Level (H/M/L) dB(A) 37 / 36 /34 40/38/36 42/40 Air Filter — Standard washable synthetic	0
Air Flow m³/h 550 600 840 Ext. Static Pressure Pa 25 25 40 Sound Pressure Level (H/M/L) dB(A) 37/36/34 40/38/36 42/40 Air Filter — Standard washable synthetic	0
Ext. Static Pressure Pa 25 25 40 Sound Pressure Level (H/M/L) dB(A) 37 / 36 /34 40/38/36 42/40 Air Filter — Standard washable synthetic	
Sound Pressure Level (H/M/L) dB(A) 37 / 36 /34 40/38/36 42/40 Air Filter — Standard washable synthetic)
Air Filter – Standard washable synthetic	
)/38
Drain Piping mm φ20×1.2 φ20×1.2 φ30×	1.5
Dimensions (H×W×D) 220×913×680/ 220×913×680/ 266×101	2×736
(Outline/Package) mm 258×995×750 258×995×750 308×112	20×795
Weight (Net/Gross) kg 27/32 27/32 36/3	39
Outdoor Unit ASGE-09A ASGE-12A ASGE	-18A
Power Supply — 220-240V~/1Ph/50HZ	
Heat Exchange — Cross Fin Coil	
Type — Axial fan	
Fan Motor Output kW 0.03 0.03 0.00	3
Fan Motor Speed rpm 850	
Compressor Type - ROTARY	
Motor Output kW 0.922 1.185 1.9)
Type - R410A	
Refrigerant Control - Capillary Tube	
Charge kg 1.1 1.0 1.5	5
Dimensions (H×W×D) 540×848×320/ 540×848×320/ 540×848	3×320/
(Outline/Package) mm 590×878×360 590×878×360 590×878	8×360
Weight (Net/Gross) kg 32/37 32/37 40/4	15
Piping Liquid mm 6.35 6.35 6.35	5

Connections	Gas	mm	9.52	12.7	12.7
	Max. Length	m	20	20	20
	Max. Height Difference	m	15	15	15

Continued 1

Continued 1	Indoor unit		ASDU-24A	ASDU-36A	
Model	Outdoor unit		ASGE-24A	ASGE-36A	
	Outdoor unit	kW	7.0	9.8	10
Nominal	Cooling	Btu/h	23880	33437	10
Capacity		kW	8.0	11	
Cupacity	Heating	Btu/h	27300	37500	
Power	Cooling	kW	2.66	4.0	
Input	Heating	kW	2.51	3.5	
трис	EER/COP	W/W	2.63/3.19	2.5/3.14	
Indoor Unit		1 **/ **	ASDU-24A	ASDU-36A	
	Power Supply	T _	ASDU-24A	220-240V~/1 Ph/50HZ	
Heat Exchange —			Cross Fin Coil		
	Type	_		Centrifugal fan	
	Drive	_		Direct Driver	
Fan	Motor Output	kW	0.15×2	0.5×2	0.5×2
1 411	Air Flow	m ³ /h	1400	2000	2000
	Ext. Static Pressure	Pa	80	150	150
Sound Pre	essure Level (H/M/L)	dB(A)	44 / 42 /40	50 / 48 /46	50 / 48 /46
Air Filter		- CD(11)	Standard washable synthetic		
Drain Piping		mm	φ20×1.2	φ20×1.2	φ20×1.2
Dimensions (W×H×D)		111111	1270 ×268×504/	1251×290×744/	1251×290×744/
(Outline/Package)		mm	1345×268×594	1335× 290× 834	1335× 290× 834
Weight (Net/Gross)		kg	37/45	57/67	57/67
Outdoor Unit		1 "5	ASGE-24A	ASGE-36A	27707
	Power Supply	_	220-240V~/1Ph/50HZ	380-415V~/3Ph/50HZ	220-240V~/1Ph/50HZ
	Heat Exchange	_	Cross Fin Coil		
	Туре			Axial fan	
Fan	Motor Output	kW	0.068×1	0.092×2	0.092×2
	Fan Motor Speed(H/M/L)	rpm	840/620/400	940/840/700	940/840/700
	Туре	_	ROTARY	SCROLL	SCROLL
Compressor	Motor Output	kW	2.475	3.65	3.8
	Туре	_		R410A	<u>I</u>
Refrigerant	Control	_	Capillary Tube		
	Charge	kg	2.2	3.2	3.2
Dim	ensions (W×H×D)		1018×700× 412/	1018 ×8 40×412/	1018 ×8 40×412/
	Outline/Package)	mm	1100 ×755× 450	1110 × 985 × 450	1110 ×985 × 450
Wei	ght (Net/Gross)	kg	59/64	90/100	90/100
	Liquid	mm	9.52	12.7	12.7
Piping	Gas	mm	15.8	19.05	19.05
Connections	Max. Length	m	30	50	50
	Max. Height Difference	m	15	30	30
	L		L	l	L

Continued:2

Continued:2	Indoor unit		ASDU-42A	ASDU-48A	
Model	Outdoor unit		ASGE-42A	ASGE-48A	
	- 41	kW	12	14	16
Nominal	Cooling	Btu/h	42000	48000	60000
Capacity		kW	14	15.5	18.5
	Heating	Btu/h	48000	53000	63120
Power	Cooling	kW	5.3	5.8	6.5
Input	Heating	kW	4.9	5.4	5.5
EER/COP		W/W	2.26/2.86	2.41/2.87	2.46/3.27
	Indoor Unit		ASDU-42A	ASDU-48A	
Power Supply		_	2	220-240V~/1 Ph/50H	Z
Heat Exchange		_		Cross Fin Coil	
	Туре	_		Centrifugal fan	
	Drive	_		Direct Driver	
Fan	Motor Output	kW		0.5×2	
	Air Flow	m ³ /h	2000	2300	2500
	Ext. Static Pressure	Pa	150	150	150
Sound Pro	essure Level (H/M/L)	dB(A)	50 / 48 /46	50 / 48 /46	53 / 50 /48
Air Filter		_	Standard washable synthetic		etic
Drain Piping		mm	φ20×1.2	φ20×1.2	φ32×1.5
Dimensions (W×H×D)			1251× 290 ×744/	1251×290×744/	1251×330×788/
(Outline/Package)		mm	1335 × 290× 834	1335× 290× 834	1334 ×330 × 882
Weight (Net/Gross)		kg	57/67	57/67	66/76
	Outdoor Unit		ASGE-42A ASGE-48A		
	Power Supply	_	380-415V~/3 Ph/50HZ		
]	Heat Exchange	_	Cross Fin Coil		
	Туре	_		Axial fan	
Fan	Motor Output	kW	0.092×2		
	Fan Motor Speed(H/M/L)	rpm	940/840/700	940/840/700	940/840/700
C	Туре	_		SCROLL	
Compressor	Motor Output	kW	4.75	4.5	5.75
	Туре	_		R410A	
Refrigerant	Control	_		Capillary Tube	
	Charge	kg	3.55	3.8	5.0
Dim	ensions (W×H×D)	mm	1018×700× 412	950×1250×412	950×1250×412
(0	(Outline/Package)		/1100 ×755×450	/1110×1385×450	/1110×1385×450
Wei	ght (Net/Gross)	kg	112/123	112/123	123/134
	Liquid	mm	12.7	12.7	12.7
Piping	Gas	mm	19.05	19.05	22.2
Connections	Max. Length	m		50	
	Max. Height Difference	m		30	

Note:

① Nominal capacities are based on the follow conditions.

	Indoor	Outdoor	
Cooling	DB: 27°C(80.6°F)	DB: 35℃(95°F)	
	WB: 19℃(66.2°F)	WB: 24°C(75.2°F)	
Heating	DB: 20°C(68°F)	DB: 7℃(44.6°F)	
	WB:℃(℉)	WB: 6°C(42.8°F)	
Piping Length	5m		

- ② The air volume is measured at the relevant standard external static pressure.
- ③ Noise is tested in the Semi anechoic Room, so it should be slightly higher in the actual operation due to environmental change.

4.1.2 Ceiling Type

4.1.2 Celling	Indoor unit		ASFU-09A	ASFU-12A	ASFU-18A
Models	Outdoor unit		ASGE-09A	ASGE-12A	ASGE-18A
	G. II	kW	2.6	3.5	5.0
Nominal	Cooling	Btu/h	8870	11940	17060
Capacity		kW	2.85	3.6	5.7
	Heating	Btu/h	9720	12280	19448
Power	Cooling	kW	1	1.17	2.03
Input	Heating	kW	1	1.1	2.07
EER/ COP		W/W	2.6/2.85	2.99/3.55	2.46/2.8
Indoor Unit			ASFU-09A	ASFU-12A	ASFU-18A
Power Supply		_	2	220-240V~/1 Ph/50HZ	Z
Heat Exchange		_		Cross Fin Coil	
	Туре	_		Centrifugal fan	
F.	Drive	_		Direct Driver	
Fan	Motor Output	kW	0.01×2	0.01×2	0.04×2
	Air Flow	m ³ /h	550	550	700
Sound Pressure Level (H/M/L)		dB(A)	47/44/41	46/44/41	54/50/46
Air Filter		_	Standard washable synthetic		
Drain Piping		mm	φ28×1.5		
Dimensions (W×H×D)			836×238×695/ 836×238×695/ 836×238×		836×238×695/
(Outline/Package)		mm	935×295×805	935×295×805	935×295×805
Weight (Net/Gross)		kg	27/35.5	27/35.5	32/36
Outdoor Unit			ASGE-09A ASGE-12A ASGE-18A		
P	ower Supply	_	220-240V~/1 Ph/50HZ		
Н	eat Exchange	_	Cross Fin Coil		
	Туре	_		Axial fan	
Fan	Motor Output	kW	0.03	0.03	0.03
	Fan Motor Speed	rpm	850	850	850
C	Туре	_		ROTARY	
Compressor	Motor Output	kW	0.922	1.185	1.9
	Туре	_		R410A	
Refrigerant	Control	_		Capillary Tube	
	Charge	kg	1.1	1.0	1.5
Dime	nsions (W×H×D)		848×540×320	848×540×320	848×540×320
(Oı	ıtline/Package)	mm	/878×590×360	/878×590×360	/878×590×360
Weig	ht (Net/Gross)	kg	32/37	32/37	40/45
	Liquid	mm	6.35	6.35	6.35
Piping	Gas	mm	9.52	12.7	12.7
Connections	Max. Length	m	20	20	20
Connections	Max. Height Difference	m	15	15	15

Continued 1

Continued			ACELLOAA	ACELLACA			
Models	Indoor unit		ASFU-24A	ASFU-36A			
	Outdoor unit		ASGE-24A	ASGE-36A	4.0		
	Cooling	kW	7.0	9.8	10		
Nominal		Btu/h	23880	33440	36000		
Capacity	Heating	kW	8.0	10.78	11		
	-	Btu/h	27300	36780	37500		
Power	Cooling	kW	2.61	3.6	3.6		
Input	Heating	kW	2.59	3.3	3.3		
	EER/ COP	W/W	2.68/3.09	2.78/3.33	2.78/3.33		
	Indoor Unit		ASFU-24A	ASFU-36A			
]	Power Supply	_		220-240V~/1Ph/50HZ			
I	Heat Exchange	-		Cross Fin Coil			
	Туре	-		Centrifugal fan			
F	Drive	_		Direct Driver			
Fan	Motor Output	kW	0.1×4	0.085×2	0.085×2		
	Air Flow	m ³ /h	1170	1800	1800		
Sound Pre	essure Level (H/M/L)	dB(A)	50/48/46	54/51/48	54/51/48		
Air Filter		_	Standard washable synthetic				
	Drain Piping	mm	φ28×1.5				
Dime	Dimensions (H×W×D)		1300×188×600	1590×238×695/	1590×238×695/		
(O	outline/Package)	mm	/1414×248×724	1714×330×830	1714×330× 830		
Wei	ght (Net/Gross)	kg	32/36	42/51	42/51		
	Outdoor Unit		ASGE-24A	ASGE-36A			
]	Power Supply	_	220-240V~/1Ph/50HZ	380-415V~/3Ph/50HZ	220-240V~/1Ph/50HZ		
	Heat Exchange	_		Cross Fin Coil			
	Туре	_					
Fan	Motor Output	kW	0.068	0.092×2	0.092×2		
	Fan MotorSpeed(H/M/L)	rpm	840/620/400	940/840/700	940/840/700		
	Туре		ROTARY	SCROLL	SCROLL		
Compressor	Motor Output	kW	2.475	3.65	3.8		
	Туре	_	2,0	R410A			
Refrigerant	Control			Capillary Tube			
Tronnger univ	Charge	kg	2.2	3.2	3.2		
Dime		Kg	1018 ×700×412/	1018×840×412/	1018×840×412/		
	Dimensions (W×H×D) (Outline/Package)		1100×755×450	1110×985×450	1110×985×450		
	ght (Net/Gross)	1,00	59/64	90/100	90/100		
w eig	T	kg		12.7			
Dini	Liquid	mm	9.52		12.7		
Piping	Gas	mm	15.8	19.05	19.05		
Connections	Max. Length	m	30	50	50		
	Max. Height Difference	m	15	30	30		

Continued 2

Indoor unit			ASFU-42A	ASFU-48A	
Models	Outdoor unit		ASGE-42A	ASGE-48A	
	Caalina	kW	12	14	
Nominal	Cooling	Btu/h	42000	48000	
Capacity	Haatina	kW	14	15.5	
	Heating	Btu/h	48000	53000	
Power	Cooling	kW	4.8	6.1	
Input	Heating	kW	4.7	5.8	
	EER/ COP	W/W	2.5/2.98	2.3/2.67	
	Indoor Unit		ASFU-42A	ASFU-48A	
]	Power Supply	_	220-240V~/	1Ph/50HZ	
I	Heat Exchange	_	Cross Fi	in Coil	
	Туре	_	Centrifu	gal fan	
Fan	Drive	_	Direct I	Driver	
ran	Motor Output	kW	0.085×2	0.18×2	
	Air Flow	m ³ /h	1800	2100	
Sound Pre	essure Level (H/M/L)	dB(A)	54/51/48	58/55/52	
	Air Filter	_	Standard wash	able synthetic	
	Drain Piping	mm	φ28×1.5		
Dimensions (W×H×D)			1590×238×695	1590×238×695/	
(0	Outline/Package)	mm	1714×330×830	1714×330×830	
Wei	ght (Net/Gross)	kg	42/51	42/51	
	Outdoor Unit		ASGE-42A	ASGE-48A	
]	Power Supply	_	380-415V~/3 Ph/50HZ		
I	Heat Exchange	_	Cross Fin Coil		
	Туре	_	Axial	fan	
Fan	Motor Output	kW	0.092×2	0.092×2	
	Fan MotorSpeed(H/M/L)	rpm	940/840/700	940/840/700	
Соминадаан	Туре	_	SCRO	OLL	
Compressor	Motor Output	kW	4. 75	4.5	
	Туре	_	R41	0A	
Refrigerant	Control	_	Capillar	y Tube	
	Charge	kg	3. 55	3.8	
Dime	ensions (W×H×D)		950×1250×412/	950×1250×412/	
(0	Outline/Package)	mm	1110 ×1385× 450	1110 ×1385× 450	
Wei	ght (Net/Gross)	kg	112/	123	
	Liquid	mm	12.	7	
Piping	Gas	mm	19.0	05	
Connections	Max. Length	m	50		
	Max. Height Difference	m	30)	

Note:

 $\ensuremath{\textcircled{1}}$ Nominal capacities are based on the follow conditions.

	Indoor	Outdoor
Cooling	DB: 27°C(80.6°F)	DB: 35℃(95°F)
Cooling	WB: 19℃(66.2°F)	WB: 24°C(75.2°F)
114:	DB: 20℃(68°F)	DB: 7°C(44.6°F)
Heating	WB:℃(°F)	WB: 6°C(42.8°F)
Piping Length	5m	

- ② The air volume is measured at the relevant standard external static pressure.
- ③ Noise is tested in the Semianechoic Room, so it should be slightly higher in the actual operation due to environmental change.

4.1.3 Cassette Type

Models Indoor unit		ASCU-12A	ASCU-18A	ASCU-24A	
Outdoor unit		ASGE-12A	ASGE-18A	ASGE-24A	
a .:	kW	3.5	5.0	6.8	
Cooling	Btu/h	11940	17060	23200	
	kW	3.6	5.7	7.5	
Heating	Btu/h	12280	19450	25590	
Cooling	kW	1.17	2.0	2.62	
Heating	kW	1.1	1.9	2.5	
EER/COP	W/W	2.8/3.2	2.5/3.05	2.67/3.2	
Indoor Unit		ASCU-12A	ASCU-18A	ASCU-24A	
Power Supply	_		20-240V~/1 Ph/50H2	 Z	
	_		Cross Fin Coil		
-	_		Centrifugal fan		
· -	_		-		
	kW	0.011	0.011	0.035	
			600	1180	
	mm				
	11111			840×260×840/	
Indoor Unit Dimensions (Outline/Package) (W×H×D)		848×310×678	848×310×678	960×310×960	
Panel Dimensions (Outline/Package) (H×W×D)		50×650×650/ 102×730×670	50×650×650/ 102×730×670	60×950×950/ 115×1040×1025	
ght (Net/Gross)	kg	20/27	20/27	30 / 38	
Outdoor Unit		ASGE-12A	ASGE-18A	ASGE-24A	
Power Supply	_	220-240V~/1 Ph/50HZ			
Heat Exchange	_	Cross Fin Coil			
Туре	_		Axial fan		
Motor Output	kW	0.03	0.03	0.068	
Fan Motor Speed(H/M/L)	rpm	850	850	840/620/400	
Туре	_		ROTARY		
Motor Output	kW	1.185	1.9	2.475	
Type	_		R410A		
			Capillary Tube		
Control	_		cupillul j luce		
Control Charge		1.0	1.5	2.2	
	kg mm	1.0 848×540×320/ 878×590×360		2.2 1018×700×412/ 1100×755×450	
Charge ensions (W×H×D) utline/Package)	kg mm	848×540×320/	1.5 848×540×320/ 878×590×360	1018×700×412/	
Charge ensions (W×H×D) utline/Package) ght (Net/Gross)	kg mm kg	848×540×320/ 878×590×360 32/37	1.5 848×540×320/ 878×590×360 40/45	1018×700×412/ 1100×755×450	
Charge ensions (W×H×D) utline/Package) ght (Net/Gross) Liquid	kg mm kg mm	848×540×320/ 878×590×360 32/37 6.35	1.5 848×540×320/ 878×590×360 40/45 6.35	1018×700×412/ 1100×755×450 59/64	
Charge ensions (W×H×D) utline/Package) ght (Net/Gross)	kg mm kg	848×540×320/ 878×590×360 32/37	1.5 848×540×320/ 878×590×360 40/45	1018×700×412/ 1100×755×450 59/64 9.52	
	Outdoor unit Cooling Heating Cooling Heating EER/COP Indoor Unit Power Supply Heat Exchange Type Drive Motor Output Air Flow ssure Level (H/M/L) Air Filter Drain Piping or Unit Dimensions e/Package) (W×H×D) mel Dimensions e/Package) (H×W×D) ght (Net/Gross) Outdoor Unit Power Supply Heat Exchange Type Motor Output Fan Motor Speed(H/M/L) Type Motor Output Type	Indoor unit	Indoor unit	Indoor unit	

Continued 1

Continued I	Indoor unit		ASCU-36A		
Models	Outdoor unit		ASGE-36A		
	Outdoor unit	kW	10	10	
Nominal	Cooling	Btu/h	36000	36000	
Capacity		kW	11	11	
1 3	Heating	Btu/h	37500	37500	
Power	Cooling	kW	3.6	3.6	
Input	Heating	kW	3.1	3.3	
1	EER/COP	W/W	2.78/3.55	2.78/3.33	
	Indoor Unit	11711	ASCU-36A	2.76/3.33	
	Power Supply	_	220-240V~	/1 Ph/50HZ	
	Heat Exchange	_	Cross F		
	Туре	_	Centrifi		
	Drive	_	Direct	-	
Fan	Motor Output	kW	0.0		
	Air Flow	m ³ /h	1600	1800	
Sound Pre	essure Level (H/M/L)	dB(A)	53/5		
504114111	Air Filter	— —			
	Drain Piping	mm	Standard washable synthetic φ32×3		
Indo			840×320×840/		
	or Unit Dimensions ne/Package) (W×H×D)	mm	960×394×960		
	anel Dimensions ne/Package) (H×W×D)	mm	60×950×950/ 115×1040×1025		
Wei	ght (Net/Gross)	kg	38/46		
	Outdoor Unit	,	ASGE-36A		
	Power Supply	_	380-415V~/3Ph/50HZ	220-240V~/1Ph/50HZ	
]	Heat Exchange	_	Cross Fin Coil		
	Туре	<u> </u>	Axia	l fan	
Fan	Motor Output	kW	0.09)2×2	
	Fan Motor Speed(H/M/L)	rpm	940/84	40/700	
Соттинали	Туре	_	SCR	OLL	
Compressor	Motor Output	kW	3.65	3.8	
	Туре	_	R41	10A	
Refrigerant	Control	_	Capilla	ry Tube	
	Charge	kg	3.	.2	
Dimensions (W×H×D) (Outline/Package)		mm	1018× 840 ×412 1110 ×985×450		
Wei	ght (Net/Gross)	kg	90/	100	
	Liquid	mm	12	2.7	
Piping	Gas	mm	19.	.05	
Connections	Max. Length	m	5	0	
	Max. Height Difference	m	30		
Transit Transit Difference III					

Continued 2

Continued 2	Indoor unit		ASCU-42A	ASCU-48A	
Models	Outdoor unit		ASGE-42A	ASGE-48A	
		kW	12		
Nominal	Cooling	Btu/h	42000	48000	
Capacity		kW	14	15.5	
	Heating	Btu/h	48000	53000	
Power	Cooling	kW	4.8	5.8	
Input	Heating	kW	5.0	6.2	
	EER/COP	W/W	2.5/2.8	2.3/2.67	
	Indoor Unit		ASCU-42A	ASCU-48A	
]	Power Supply	_	220-240V~/	1 Ph/50HZ	
I	Heat Exchange	_	Cross F	in Coil	
	Туре	_	Centrifu	ıgal fan	
T.	Drive	_	Direct 1	Driver	
Fan	Motor Output	kW	0.0	06	
	Air Flow	m ³ /h	1650	1700	
Sound Pre	essure Level (H/M/L)	dB(A)	53/ 53	1 /48	
	Air Filter	_	Standard wash	able synthetic	
	Drain Piping	mm	φ32×3		
Indoo	or Unit Dimensions		840×320×840/		
(Outlin	e/Package) (H×W×D)	mm	960×394×960		
Panel Dimensions (Outline/Package) (H×W×D)		mm	60×950×950/ 115×1040×1025		
Wei	ght (Net/Gross)	kg	38/-	46	
	Outdoor Unit		ASGE-42A	ASGE-48A	
]	Power Supply	_	380-415V~/	3 Ph/50HZ	
I	Heat Exchange	_	Cross F	in Coil	
	Туре	_	Axia	l fan	
Fan	Motor Output	kW	0.092	2×2	
	Fan Motor Speed(H/M/L)	rpm	940/84	0/700	
Compressor	Туре	_	SCRO	OLL	
Compressor	Motor Output	kW	4.75	4.5	
	Type	_	R41	0A	
Refrigerant	Control	_	Capillar	y Tube	
	Charge	kg	3.55	3.8	
Dimensions (W×H×D)		mm	950×125		
(0	outline/Package)	mm	1110 × 13	385 ×450	
Wei	ght (Net/Gross)	kg	112/	123	
	Liquid	mm	12	.7	
Piping	Gas	mm	19.	05	
Connections	Max. Length	m	50		
	Max. Height Difference	m	30)	

Note:

 $\ensuremath{\textcircled{1}}$ Nominal capacities are based on the follow conditions.

	Indoor	Outdoor
Cooling	DB: 27°C(80.6°F)	DB: 35℃(95°F)
	WB: 19℃(66.2°F)	WB: 24°C(75.2°F)
Heating	DB: 20°C(68°F)	DB: 7℃(44.6°F)
	WB:℃(℉)	WB: 6°C(42.8°F)
Piping Length	5m	

- ② The air volume is measured at the relevant standard external static pressure.
- 3 Noise is tested in the Semianechoic room, so it should be slightly higher in the actual operation due to environmental change.

4.2 Operation Range

Mode	Range of Outdoor Temperature °C (°F)
Cooling	18℃-43℃
	-7°C-43°C(with low Ambient kit)
Heating	-7℃-24℃


4.3 Electrical Data

		Со	mpre	essor		Fan Mo	otor	Max. Fuse	Min.
Mode	Model		Qty.	LRA	RLA	Condenser Fan Motors	Supply Blower Motor	Breaker Size	Disconnect Size
		V,Ph,Hz	_	Each	Each	FLA Each	FLA Each	Amperes	Amperes
ASGE-09A	ASDU-09A		1	18	4.28	0.27	0.18	6/10	1/5.7
ASGE-07A	ASFU-09A		1	10	4.20	0.27	0.09	6/10	1/5.7
	ASDU-12A						0.18	6/13	1/7.3
ASGE-12A	ASFU-12A		1	32	5.6	0.27	0.09	6/13	1/7.3
	ASCU-12A						0.1	6/13	1/7.3
	ASDU-18A						0.63	6/20	1.5/11.3
ASGE-18A	ASFU-18A	220-240	1	40	8.8	0.27	0.36	6/20	1/11.3
	ASCU-18A	50					0.1	6/20	1/11.3
	ASDU-24A						1.35	6/25	2.5/14.6
ASGE-24A	ASFU-24A		1	60	11.2	0.61	0.9	6/25	1.5/14.6
	ASCU-24A						0.32	6/25	1/14.6
	ASDU-36A						4.5	10/16	5.7/9.1
ASGE-36A	ASFU-36A			67	6.58	0.8	1.35	6/16	2.5/9.1
	ASCU-36A						0.54	6/16	1/9.1
	ASDU-42A						4.5	10/20	5.7/11.1
ASGE-42A	ASFU-42A	380-415~ 3	1	66	8.22	0.8	1.35	6/20	2.5/11.1
	ASCU-42A	50					0.54	6/20	1/11.1
	ASDU-48A						4.5	10/16	5.7/10.8
ASGE-48A	ASFU-48A]	1	59.4	8	0.8	1.62	6/16	2.5/10.8
	ASCU-48A						0.54	6/16	1/10.8

Notes:

RLA: Rated load amperesLRA: Locked rotor amperesFLA: Full load current

5 PIPING DIAGRAM

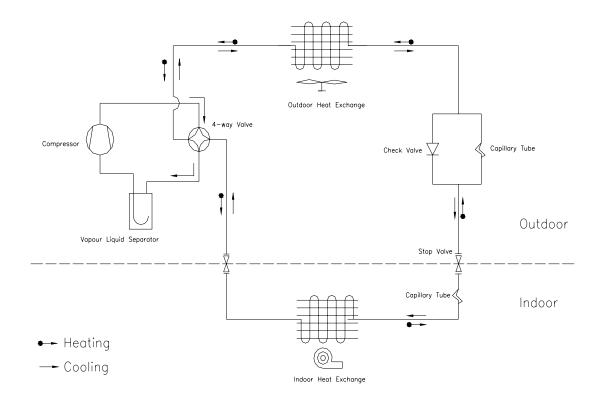


CONTROL


CONTROL

1 OPERATION FLOWCHART

1.1 Cooling/Dry Operation

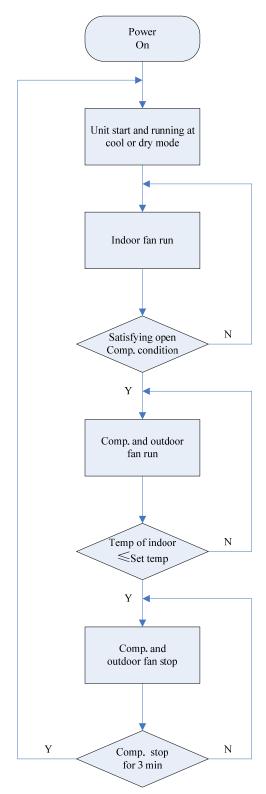


1.2 Heating Operation

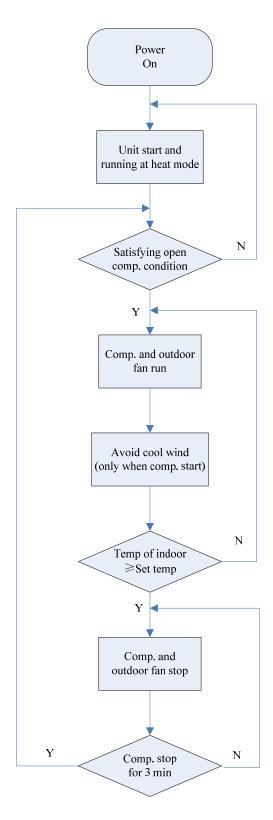

2 MAIN LOGIC

2.1 Cooling

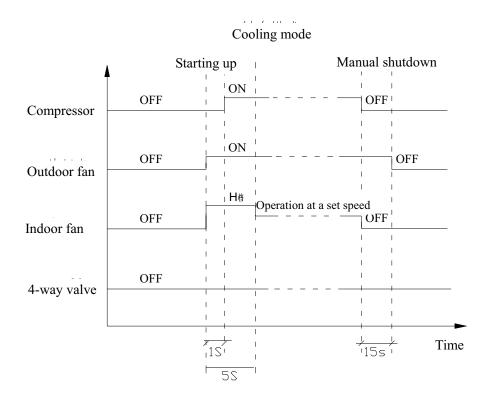


When $T \ge T + 1^{\circ}C$, the machine begins refrigeration operation and the compressor—the outdoor fan are running; and the indoor fan is running at a set speed.

When $T_{amb} \leq T - 1^{\circ}C$, the machine is in the refrigeration shutdown state, and the compressor and the outdoor fan stop running; and the indoor fan is running at a set speed.

When T $-1^{\circ}C < T_{amb} < T + 1^{\circ}C$, the machine keeps in the operation state.

2.2 Dry Mode



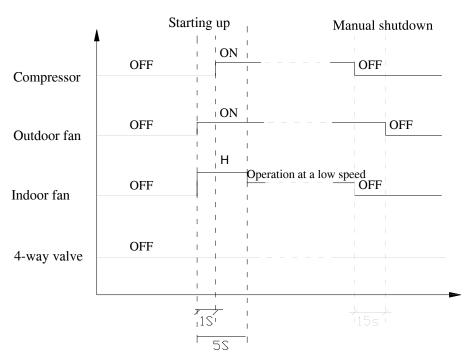


When $T_{amb} \ge T_{preset} + 2^{\circ}C$, the machine begins refrigeration operation and the compressor and the outdoor fan are running; and the indoor fan is running at a low speed.

When $T_{amb} \leq T_{preset} - 2^{\circ}C$, the machine is in the refrigeration shutdown state and the compressor and the outdoor fan stops running.

When T $-2^{\circ}\text{C} < T_{amb.} < T_{preset} + 2^{\circ}\text{C}$, the machine is in the six-minute stop and four-minute operation state, that is, the compressor runs for 6 minutes and then stops for 4 minutes, in such cycle repeatedly; and the indoor fan operates at a low speed.

2.3 Heating Mode

Heating Mode

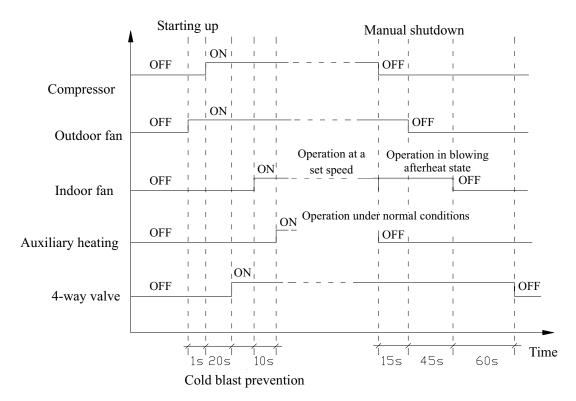


When $T_{amb} \leq T_{preset}$ -1°C, the machine begins heating operation and the compressor and the outdoor fan are running; and the indoor fan is running at a set speed according to cold fan prevention conditions.

When $T_{amb} \ge T_{preset} + 1$ °C, the compressor and the outdoor fan stop running and the four-way valve keeps energized; and the indoor fan is running according to afterheat blowing conditions.

When T -1° C <T_{amb.}<T_{preset} $+1^{\circ}$ C, the machine keeps in the previous operation state.

2.4 Defrosting

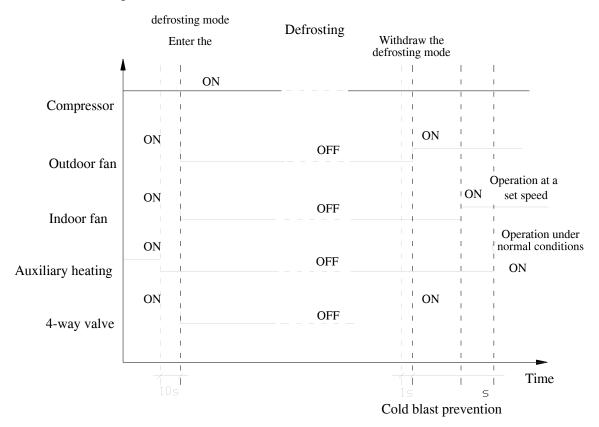


Defrosting start conditions: after the heating operation runs for an accumulated period of 44 minutes and the compressor continues to operate for 4 hours and 50 seconds, and a one-minute duration of $T_{cond} \le 5$ °C is detected, the machine begins defrosting. If an auxiliary heater is available, it must be stopped firstly, and after 10 seconds, the four-way valve, the indoor fan, the outdoor fan and the compressor will run compulsively.

Defrosting completion conditions: when defrosting runs 10 minutes or $T_{cond.} \ge 10^{\circ}C$, defrosting will be completed. In such case, the four-way valve is running, the outdoor fan is running, the compressor is running compulsively, and the indoor fan operates according to cooling fan proof conditions.

2.5 Fan Mode



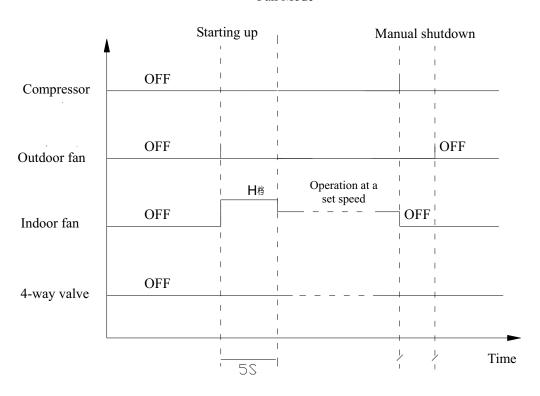


The indoor fan runs at a fast speed for 5s and then runs at a set speed.

3 WIRELESS REMOTE CONTROLLER


3.1 Operation View

(1) Controller-Duct Type

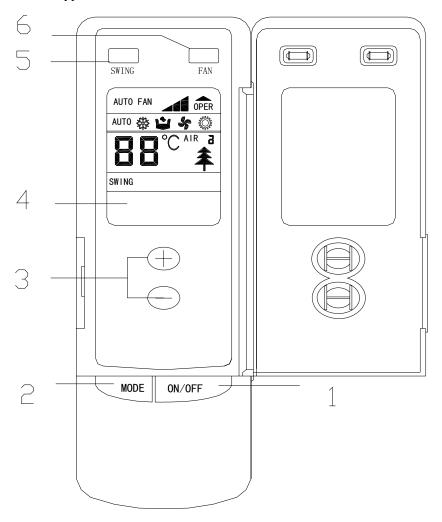


NO.	Name	Function description
1	ON/OFF button	Press the button to set start or close unit
2	2 Mode button	Press the button to select the mode,
2		cooling, heating, fan or auto mode.
3	Increase/Decrease button	Press this button to increase/decrase the setup temp
4	LCD Screen	Display the status of remote information
5	Swing button	Press this button set swing function
6	Fan speed button	Press this button to set fan speed

(2)Controller-Cassette Type and Ceiling Type

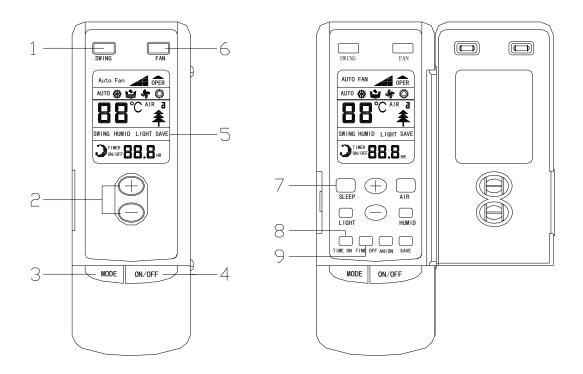

NO.	Name	Function description
1	Swing button	Press this button to set swing function
2	Increase/Decrease button	Press this button to increase/decrase the setup temp
3	3 Mode button	Press the button to select the mode,
3		cooling, heating, fan or auto mode.
4	ON/OFF button	Press the button to set start or close unit
5	LCD Screen	Display the status of remote information
6	Fan speed button	Press this button to set fan speed
7	Sleep button	Press the button to set sleep function
8	Time on	Press the button to set time on function
9	Time off	Press the button to set time off function


3.2 Display View

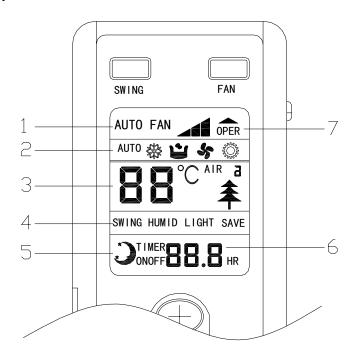


No.	Display	Function description
1	Fan Speed	AUTOFAN: auto fan speed. : low fan speed. : high fan speed,
2	Run Mode	AUTO: Auto running; Cool running; L: Dry Running; Fan Running; : Heat running (Heat and Cool unit only)
3	Setup temp	Temperature value of setting
4	Swing function	Swing is on
5	Sleep mode	Sleep mode is on
6	Time value	Timing value of setting
7	OPER	The controller is on

4 WIRED REMOTE CONTROLLER

- 4.1 Operation View
- (1) Wired Controller-Duct Type

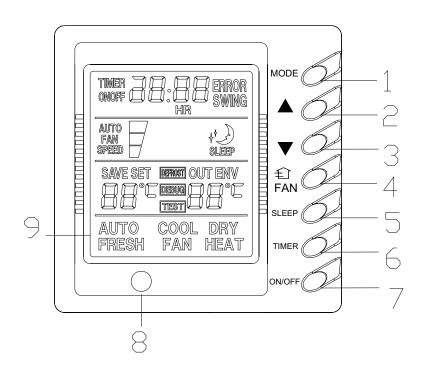

(2) Wired Controller-Cassette Type and Ceiling Type

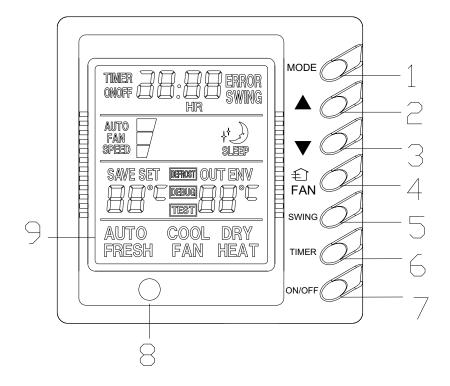


NO.	Name	Function description
1	MODE button	Press the button to select the mode,
		cooling, heating, fan or auto mode.
2	Increasing button	Press this button to increase the setup temp.
3	Decreasing button	Press this button to decrase the setup temp.
4	Fan speed button	Press this button to set fan speed
5	Sleep/SWING button	Press the button to set sleep/swing function
6	Timer button	Press the button to set timer function
7	On/off button	Press the button to set start or close unit
8	Remote window	Get remote information
9	LCD display	Display unit information

Note:

- (1) **SAVE set up:** At unit turned off, to press the "FAN" +"▼" buttons continuously 5 seconds, it can come enter save set up interphase, the unit will run at save mode.
- (2) **FRESH valve setup:** At unit is turned off, press the "FAN" button for 5seconds, And set up the fresh air setup.
- Outer ambient temperature display: Under normal condition, "ENV" will display the room ambient temperature, at unit turned on, or unit turned off status, press "SLEEP/SWING" button last for 5 seconds, the LCD will display "OUT ENV".
- (4) **MEMORY function setup:** At unit turned off, press "MODE" button for 10 seconds, could switch whether turn on or off the unit state after powered off.
- Debugging function: At unit off, continuously press "FAN" + "SLEEP" buttons lasting for 10seconds, call out debugging menu, and displays "Debugging" icons, use "MODE" button adjust setting item, by pressing "▲"、"▼" button to set up the detailed value.
 - (A) Ambient sensor set up: it can set three kinds styles.
- (6) Lock function: Press "▲"and"▼" at the same time for 5 seconds, the set temp. will display "EE" and shield, all buttons will sound; and repress the "▲"and "▼"at the same time for 5 seconds, the lock function will be released.
 - (for details, please read corresponding parts of manual).


4.2 Display View

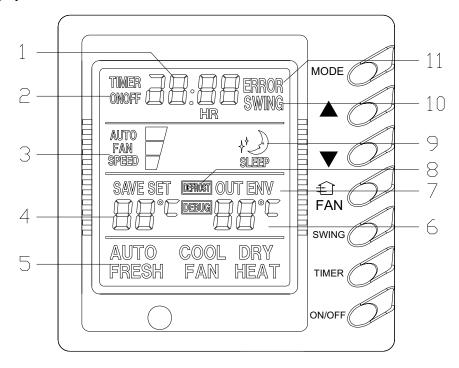

NO.	Name	Function description
1	Timer value	Display time value
2	Timer on/off	TIMER ON : display timer on, OFF : display timer off,
3	Fan speed display	AUTO FAN SPEED: auto fan speed, 7: low fan speed, : middle fan speed, : high fan speed
4	Set temp display	Display set temp value, its range is 16~30
5	Run mode display	AUTO: auto mode, COOL: cool mode, DRY: dry mode, FRESH: fresh fan mode, FAN: fan mode, HEAT: heat mode(only cool and heat unit)
6	Indoor temp display	Display surrounding temp indoor
7	Outdoor temp display	Display surrounding temp outdoor
8	Frost display	When unit frosts ,it display
9	Sleep display	Display sleep at Sleep mode
10	Swing display	When setting swing function, it displays,
11	Error display	When unit error, error code display

CONTROL

4.3 Dimension

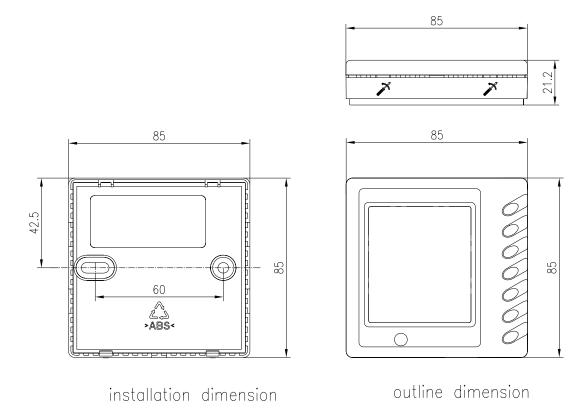

4.4 Installation

- 1. First select an installation position. According to the size of the communication line of the wire controller, leave a recess or a embedded wire hole to bury the communication line.
- 2. If the communication line between the wire controller (85×85×20) and the indoor unit is surface-mounted, use 1# PVC pipe and make matching recess in the wall (refer to Figure 6); If concealed installation is adopted, 1# PVC pipe can be used (Refer to Figure 7).
- 3. No matter if surface mounting or concealed mounting is selected, it is required to drill 2 holes (in the same level) which distance shall be the same as the distance (60mm) of installation holes in the bottom plate of the wire controller. Then insert a wood plug into each hole. Fix the bottom plate of the wire controller to the wall by using the two holes. Plug the communication line onto the control panel. Lastly install the panel of the wire controller.

Caution:

During the installation of the bottom plate of the wire controller, pay attention to the direction of the bottom plate. The plate's side with two notches must be at the lower position, and otherwise the panel of the wire controller cannot be correctly installed.



Fig6: Surface Mounting of Cable

Fig7: Concealed mounting of Cable

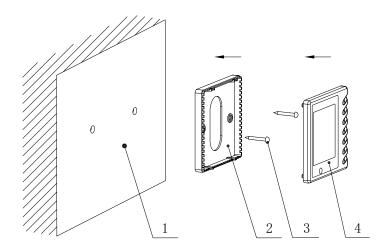


Fig 8 Schematic Diagram of Installation

No.	Name
1	Wall Surface
2	Bottom Plate of Wire Controller
3	Screw M4X10
4	Panel of Wire Controller

A Caution:

- The communication distance between the main board and the wire controller can be as far as 20m (The standard distance is 8m).
- 2. The wire controller shall not be installed in a place where there is water drop or large amount of water vapor.


5 CENTRALIZED CONTROLLER

5.1 Centralized Controller-not with week timer

5.1.1 Function


Centralized Controller-not with week timer only control on-off function of every units. Up to 16 sets of units can be controlled simultaneously by the centralized controller-not with week timer.

5.1.2 Operation View

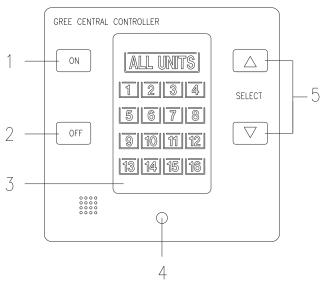


NO.	Name	Function description		
1	ON button	Press the button to set start unit		
2	OFF button	Press the button to set close unit		
3	LCD display	Display unit information		
4	LED	LED indication		
5	Increasing / Decreasing button	Press buttons select the unit		

5.1.3 Display View

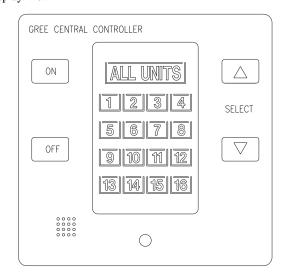

Display unit address value in the net.

5.1.4 Dimensions

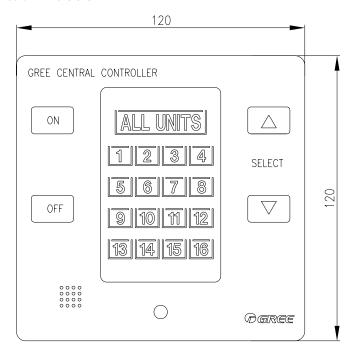


5.2 Centralized Controller-week timer

5.2.1 Function


Centralized Control and Week Timer Functions: The centralized controller and the weekly timer are integrated in the same wire controller. The system has both the centralized control and the week timing functions. Up to 16 sets of units can be controlled simultaneously by the centralized controller (weekly timer). The weekly timer has the function of invalidating the lower unit. The weekly timing function is able to realized four timing ON/OFF periods for any unit every day, so as to achieve fully automatic operation. No timing control can be set for holidays. On and off of every duct type unit can be done through the Timer On / Off of this WEEKLY TIMER, it can not set other functions except on-off function of units.

5.2.2 Operation View

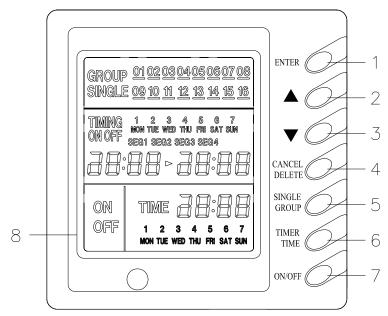

NO.	Name	Function description
1	ENTER button	when "enter" is pressed the setting is validate.
2	Increasing button	Press "\(\Lambda \)" and selected the unit or a certain day in one week or specific value. Press "\(\Lambda \)" can set week part of time.
3	Decreasing button	Press "▼" and selected the unit or a certain day in one week or specific value. Press "▼" can set week part of time.
4	CANCEL/DELETE	short-press "cancel/delete" to back to default page or last process, long-press
4	button	"cancel/delete" to cancel timer of a certain time period in a certain day
5	SINGLLE/GROUP button	short-press "single/group" to enter single control setting. "SINGLE" displayed. long-press "single/group" to enter group control setting. "GROUP" displayed
	TIMER/TIME	Short-press "timer/time" to enter timer setting.
6	button	Long-press "timer/time" under default page can begin time setting.
7	On/off button	Control unit run or stop
8	LCD display	Display unit information

5.2.3 Display View

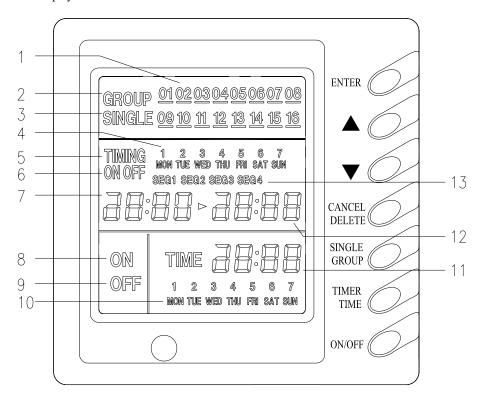


NO.	Name	Function description		
1	unit's no. displays	Display unit's numbers		
2	Group control displays	when group controls, it will display		
3	Single control displays	when single unit controls, it will display		
4	Timer time in week displays	Display time in week		
5	Timer displays	Display time		
	4:4.4. 4:1	"on": when set unit on, "on" will display;		
6	timer state displays	"off": when set unit off, "off" will display;		
7	timer on time displays	Display starts time		
8	on control displays	When set unit or group on, it will display,		
9	off control displays	When set unit or group off, it will display,		
10	present time in week display	Display present time of week.		
11	present time in Hr:Min displays	Display time of hour and minute now		
12	timer off time displays	Display over time		
13	timer period displays	Set to different time segment		

Note

Please read corresponding manual of weekly timer controller to be familiar with it.

5.2.4 Dimensions

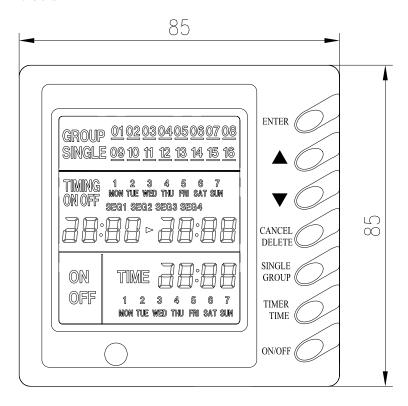

5.3 Field Setting

The centralized controller displays code of various units: unit code is determined by the position (on the back of the manual operator) of the toggle switch of the manual operator on each flue pipe air conditioner. Toggling values are corresponding to the 4-1 feet from the right to left of the toggle switch. "ON" stands for "0", and conversely, "OFF" stands for "1"

Example 1: to get "0111", which represents the serial number "8", you can put foot 1, 2 and 3 of the toggle switch to the opposite of "ON" and foot 4 to "ON".

Example 2: to get "1010", which represents the serial number "11", you can put foot 2 and 4 of the toggle switch to the opposite of "ON" and foot 1 and 3 to "ON".


Position	Serial No.						
0000	1	0100	5	1000	9	1100	13
0001	2	0101	6	1001	10	1101	14
0010	3	0110	7	1010	11	1110	15
0011	4	0111	8	1011	12	1111	16

As shown in the following diagram:


Unit code:1 0000




Unit code:2 0001

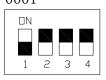


Unit code:3

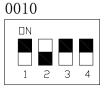


Unit code:4

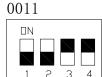


Unit code:5

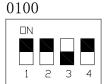


Unit code:6

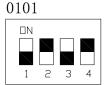

Unit code:7

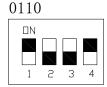


Unit code:8

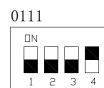


Unit code:9


Unit code:10

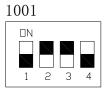


Unit code:11

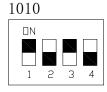


Unit code:12

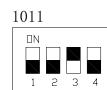


Unit code:13

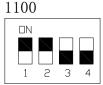


Unit code:14

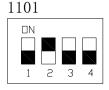


Unit code:15

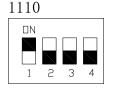

Unit code:16

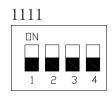

5.4 Control Wiring Design

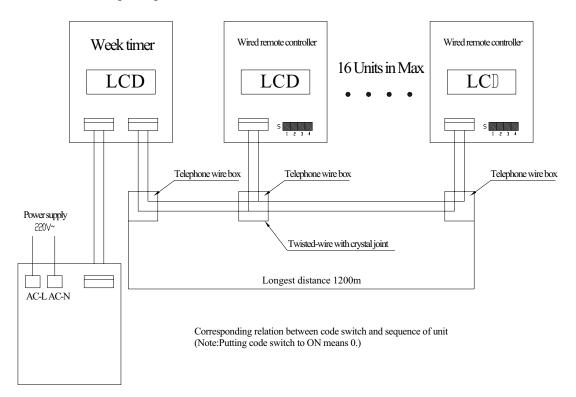

P	S	P	S	P	S	P	S
0000	1	0010	5	0001	9	0011	13
1000	2	1010	6	1001	10	1011	14
0100	3	0110	7	0101	11	0111	15
1100	4	1110	8	1101	12	1111	16

INSTALLATION

INSTALLATION

1 INDOOR UNIT INSTALLATION

1.1 Installation of Duct Type

1.1.1 Before Installation

- ◆ When the machine arrives, please check if any damage due to transport is existent. If any hurt is found on the surface or inside, please declare to the transport company or the manufacturer in writing.
- Upon receipt of the machine, the unit and accessories shall be checked in accordance with the packing list.
 Before acceptance, it must be confirmed that the model is correct and the unit is in good shape and specification and quantity of accessories are right.
- Correct handling route and method shall be decided to prevent damage to the unit. For protecting the unit and ensuring its safety, carrying the unit with its package is recommended. If such carrying method is difficult under particular conditions, the canton shall not be removed to avoid looseness or falling during handling
- ◆ Confirm the foundation is secure. When the unit is installed on the metal part of a building, electrical insulation must be in compliance with relevant standards.
- ◆ Confirm the installation position is away from storage zone of inflammable and explosive substances, or otherwise leakage of inflammable and explosive substances may lead to explosion or a fire.

1.1.2 Installation Site

- Ensure the top hanging piece has strong strength to withstand the weight of the unit.
- ◆ The drainage pipe has convenient flow of water.
- ◆ There is no obstacle blocking the air intake and exhaust outlet, so as to ensure sound air circulation.
- ◆ The installation spaces required by the drawing must be ensured, so as to provide enough space for the service and maintenance.
- ♦ The installation site must be far away from heat source, leakage of inflammable gas or smoke.
- ◆ The indoor unit is of ceiling mount (indoor unit is hidden inside the ceiling).
- ◆ The indoor and outdoor units, the power cable and the connecting electrical lines must be at least 1 meter from any TV set or radio. This is to avoid image interference or noise of the TV set or radio. (Even if the distance is 1 meter, noise can also exist if there is strong electric wave.)

1.1.3 Caution for Installation

- Ceiling installation mode is applicable to units indoors. The suspender on the ceiling must have sufficient intensity to bear the weight of the unit.
- Rubber cushion pads (thickness ≥20mm) and flexible rubber connectors must be used in the installation of
 units to meet noise and vibration prevention requirements.
- 3) Insert a M10 expansion bolt into the hole. Drive a nail into the bolt. Refer to the profile dimensions drawing of the indoor unit for the distance between the holes. Refer to Figure 1 for the installation of the expansion bolt, as Figure 1-1-1 shows.

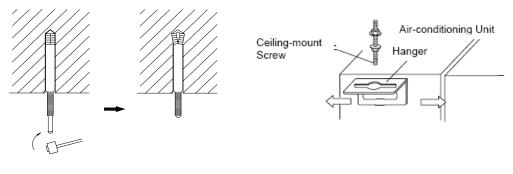


Figure 1-1-1

Figure 1-1-2

Screw

Nut

Supply

Figure 1-1-3

- 4) Install the hanger onto the indoor unit as Figure 1-1-2 and Figure 1-1-3 shows.
- 5) Install the indoor unit at the ceiling as Figure 1-1-5shows.

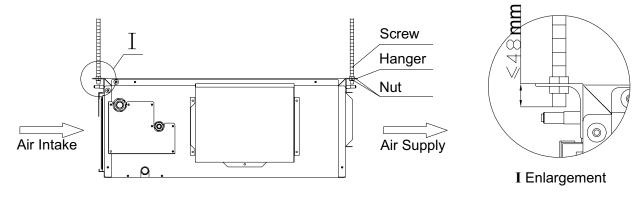


Figure 1-1-5

- 6) Precautions for unfavorable installation:
- ◆ The preparation of all pipes (connecting pipes and drainage pipes) and cables (connecting lines of wire controller, indoor unit and outdoor unit) must be ready before the installation, so as to achieve smooth installation.
- Drill an opening on the ceiling. Maybe it is required to support the ceiling to ensure the evenness of it and avoid the vibration of it. Consult with the user or a construction company for details.
- In case the strength of ceiling is not enough, use angle iron sections to set up a beam support. Place the unit at the beam and fix it.

7) Level detection of indoor unit

After installation of indoor unit, level detection for the complete unit must be done to ensure levelness, as shown in Fig. 1-1-6.

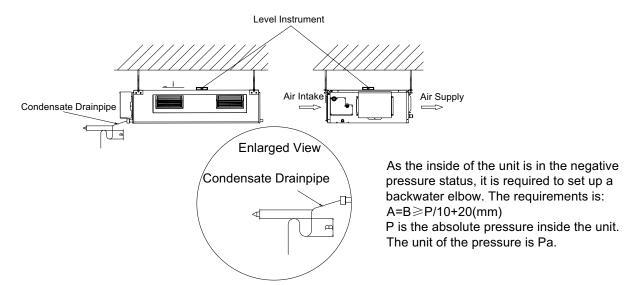


Figure 1-1-6

1.1.4 Dimension Data

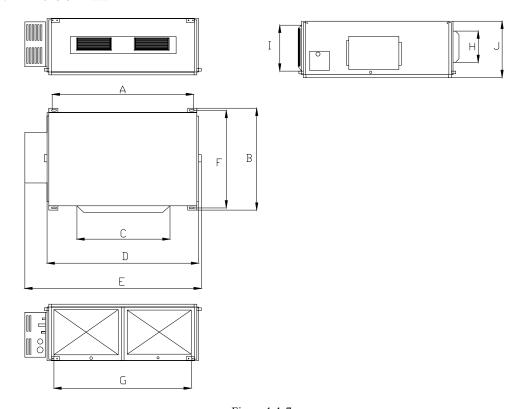


Figure 1-1-7

Unit: mm

Model	A	В	С	D	Е	F	G	Н	I	J
ASDU-09A	856	571	515	790	913	680	750	100	172	220
ASDU-12A	830	3/1	515	790	913	080	/30	100	172	220
ASDU-18A	932	627	738	894	1012	736	738	125	207	266
ASDU-24A	1101	395	820	1159	1207	504	1002	160	235	265
ASDU-36A										
ASDU-42A	1011	635	820	1115	1251	744	980	160	231	290
ASDU-48A										

List of Accessories for Installation of Indoor Unit

Designation and shape	Qty	Description
Operation and installation instructions	1	
Heat insulating material for large connector	1	For air pipe connector of indoor unit
Heat insulating material for small connector	1	For refrigerant pipe connector of indoor unit
Heat insulation material for drain pipe	2	For packing condensate pipe and rubber plug
Nut with washer M8	8	For fixing the hanging hook
Nut with washer M10	4	Four sets, for hoisting the unit on the
Nut and spring washer	4	ceiling
Hanging hook	4	For hoisting the unit on the ceiling
Wire binding tie	4or 8	4 for a two-horsepower unit, 8 for other unit.
Wire controller	1	
Remote controller	1	
Battery	2	
Bellow	0, 2 or 4	0 for a 2-powerhorse unit, 2 for a 2.5—3 horsepower unit, 4 for a 4—5 horsepower unit.
Power cable	1-2	2 for a 4-5 horsepower unit and 1 for other unit.
Connecting cable	2-3	3 for a 4-5 horsepower unit and 2 for other unit.

1.1.5 Installation Clearance Data

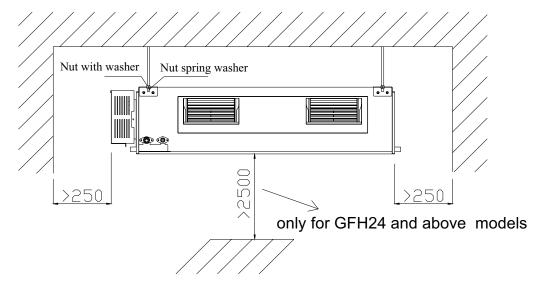


Figure 1-1-8

1.1.6 Drain Piping Work

1) Installation of Drainage Pipeline

- ◆ A drainage outlet is located at both the left and right sides of the indoor unit. After selecting one drainage outlet, the other outlet shall be blocked by rubber plug. Bundle the blocked outlet with string to avoid lleakage, and also use thermal insulation materials to wrap the blocked outlet.
- ♦ When shipped out from factory, both the Drainage outlets are blocked by rubber plugs.
- When connecting the drainage pipe with the unit, do not apply excessive force to the pipeline at the side of the unit. The fixing position of the pipeline shall be near the unit.
- ◆ Purchase general-purpose hard PVC pipe locally to be used as the drainage pipeline. When carrying out connection, place the end of the PVC pipeline into the drainage hole. Use flexible drainage tube and tighten it with thread loop. Never use adhesive to connect the drainage hole and the flexible drainage tube. (As shown in Figure 1-1-9)
- ◆ When the laid drainage pipe is used for multiple units, the common pipe shall be about 100mm lower than the drainage outlet of each set of unit. A pipe with thicker wall shall be used for such purpose.

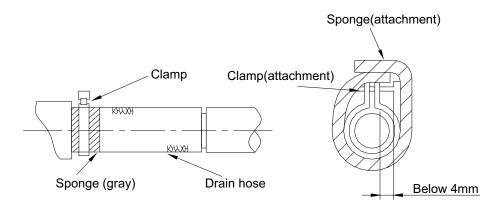


Figure 1-1-9

- 2) Testing of Drainage System
- After the electrical installation is completed, carry out the testing of the drainage system.
- ◆ During the test, check if the water correctly flows through the pipelines. Carefully observe the joints to ensure that there is no leakage. If the unit is to be installed in a new house, carry out testing before decorating the ceiling.
- 3) Matters of Attention
- ◆ The joint of Drainage Pipeline must not have leakage.
- ◆ The Drainage Pipeline shall be installed with an inclining angel of 5~10°, so as to facilitate the drainage of condensate. The joints of the Drainage Pipeline must be covered by thermal insulation materials to avoid generation of exterior condensate. (As shown in Figure 1-1-10)

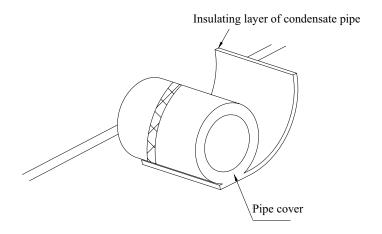


Figure 1-1-10

1.1.7 Installation of air pipes and openings

Caution:

- ◆ The air supply pipe, the air intake pipe and the fresh air pipe must be covered with a layer of thermal insulation, so as to avoid thermal leakage and condensation. Firstly apply liquid nail on the pipes, then attach the thermal insulation cotton with a layer of tinfoil. Use the liquid nail cover to fix it. Lastly use tinfoil adhesive tape to carefully seal the joints; other good thermal insulation materials can also be used.
- ♦ The air supply pipes and the air intake pipes shall be fixed to the prefabricated boards of the ceiling by using

iron supports. The joints of the pipes must be sealed by glue so as to avoid leakage.

- ♦ The design and installation of air pipes must be in conformity with the relevant state engineering criteria.
- ◆ The edge of the air intake pipe must be at least 150mm away from the wall. The air intake must be covered with filter.
- ◆ Silencing and shock absorption shall be considered in the design and installation of the air pipes. Additionally, the noise source must be far away from where people stay. The air intake shall not be located above the place where users stay (offices and rest places, etc.).
- 1) Installation of air supply duct
- ♦ Installation of rectangular air duct, as shown in Figure 1-1-11

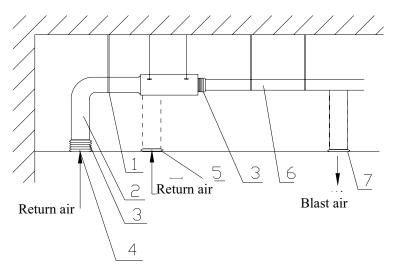


Figure 1-1-11

No.	Designation	No.	Designation
1	Hanger rod	5	Filter screen
2	Return duct	6	Main air supply duct
3	Canvas duct	7	Air outlet
4	Return air inlet		

◆ Installation of circular duct, as shown in Figure 1-1-12

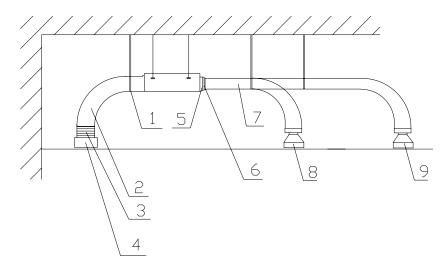


Figure 1-1-12

No.	Designation	No.	Designation
1	Hanger rod	6	Transition duct
2	Air return duct	7	Air blast duct
3	Canvas duct	8	Air diffuser
4	Return air shutter	9	Connector of air diffuser
5	Air outlet		

Note:

The above two diagrams show how back return air inlets are installed. Lower return air inlets shall be used according to actual installation demands. The installation method is similar to the back return air inlets. Among all air outlets, at least one keeps open. If circular duct is in use, air shall be supplied to rooms through circular flexible insulating duct. Air supply duct and return duct shall be heat insulated.

- 2) Installation of fresh air duct (only limited to excessive pressure units with refrigerating output over 6000W)
- ◆ The fresh air battle, as shown in Figure 1-1-13(a), must be removed for mounting the fresh air duct. If the fresh air duct is not in use, gaps around the battle shall be sealed by sponge.
- ◆ Circular flanges are mounted for convenient connection of the fresh air duct, as shown in Figure 1-1-14(b)
- Ducts and circular flanges must be sealed and insulated sufficiently.
- ◆ Fresh air must be filtered air.

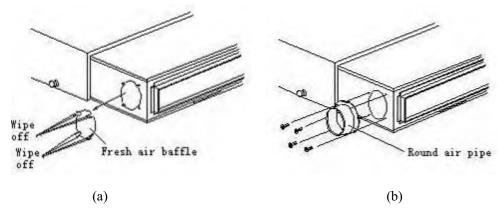


Figure 1-1-13

- 3) Installation of air return duct
- ◆ Square flanges at ex-factory shall be defaulted to installation at the back and the air return cover plate shall be mounted at the lower, as shown in figure 1-1-14.


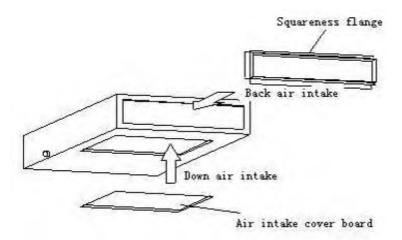


Figure 1-1-14

- ◆ If lower air return is demanded, the square flange and the air return cover plate should be exchanged in their respective position.
- ◆ The air return duct shall be connected to the air return inlet on the indoor unit with rivets, and the other end of the air return duct is connected to an air return window. To freely adjust the height, a section of canvas duct can be fabricated and reinforced by 8 # iron wires in the folding shape. A proper installation method shall be selected by taking into overall consideration of building and maintenance conditions.

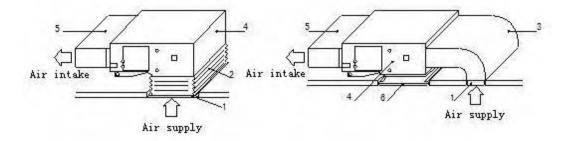

No.	Designation	No.	Designation
1	Air return window	4	Indoor unit
2	canvas duct	5	Air supply duct
3	Air return duct	6	Check grating

Figure 1-1-15

4) Installation of circular air supply outlet

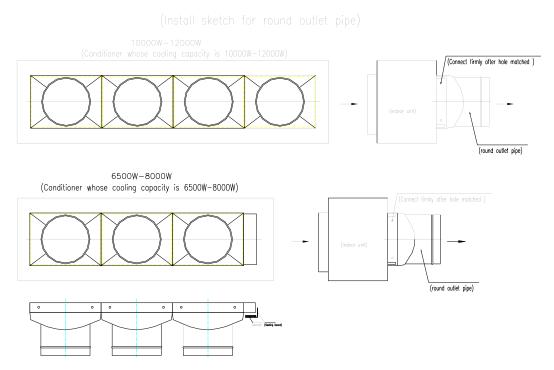


Figure 1-1-16

1.2 Installation of Ceiling Type

1.2.1 Before Installation

- ◆ When the machine arrives, please check if any damage due to transport is existent. If any hurt is found on the surface or inside, please declare to the transport company or the manufacturer in writing.
- When the machine arrives, please check if any damage due to transport is existent. If any hurt is found on the surface or inside, please declare to the transport company or the manufacturer in writing.
- Correct handling route and method shall be decided to prevent damage to the unit. For protecting the unit and ensuring its safety, carrying the unit with its package is recommended. If such carrying method is difficult under particular conditions, the canton shall not be removed to avoid looseness or falling during handling.
- Confirm the foundation is secure. When the unit is installed on the metal part of a building, electrical insulation must be in compliance with relevant standards.
- ◆ Confirm the installation position is away from storage zone of inflammable and explosive substances, or otherwise leakage of inflammable and explosive substances may lead to explosion or a fire.


1.2.2 Installation Site

- Such a place where cool air can be distributed throughout the room.
- Such a place where is condensation water is easily drained out.
- Such a place that can handle the weight of indoor unit.
- Such a place which has easy access for maintenance.
- ◆ Such a place where is permitting easy connection with the outdoor unit.
- Such a place where is 1m or more away from other electric appliances such as television, audio device, etc.
- Avoid a location where there is heat source, high humidity or inflammable gas.
- Do not use the unit in the immediate surroundings of a laundry, a bath, a shower or a swimming pool.
- Be sure that the installation conforms to the installation dimension diagram.
- ◆ The space around the unit is adequate for ventilation

1.2.3 Caution for Installation

- ◆ Adjust the distance from the unit to the ceiling slab beforehand (Refer to Figure 1-2-1).
- Fix the hanger bracket to the suspension bolt (Refer to Figure 1-2-2).
- ◆ Make sure that extended suspension bolt from the ceiling stays inside the arrowed position. Readjust the hanger bracket when it is outside the arrowed position. (Refer to Figure 1-2-3)
- ◆ Suspension bolt stays inside the cap of indoor unit .Never remove the cap. Lift the unit and slide forward unit the dent. (Refer to Figure 1-2-4)
- Screw tightly both hanger bracket setting bolts (M8) (Refer to Figure 1-2-2)
- ◆ Screw tightly both hanger bracket fixing bolts (M6) to prevent the movement of the indoor unit. (Refer to Figure 1-2-2)
- ◆ Adjust the height by turning the nut with a spanner. Insert the spanner from the hanger bracket opening.

 (Refer to Figure 1-2-5)

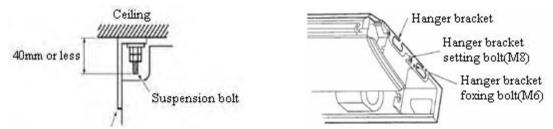

Hanger bracket Figure 1-2-1

Figure 1-2-2

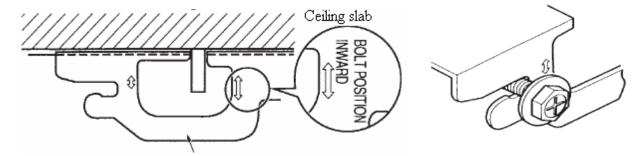


Figure 1-2-3 Hanger bracket

Figure 1-2-4

In case of hanging:

It is possible to install using inward facing hanger bracket by not removing the brackets from the indoor unit. (Refer to Figure 1-2-6) Be sure to use only the specified accessories and parts for installation work.

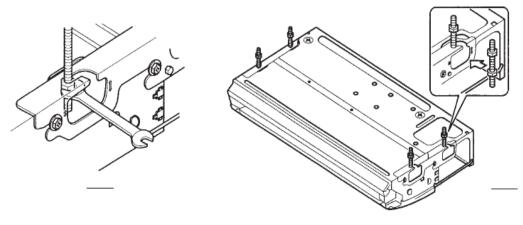


Figure 1-2-5

Figure 1-2-6

1.2.4 Dimension Data

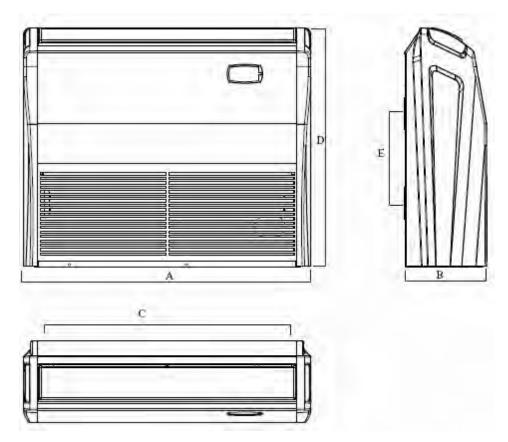


Figure 1-2-7

Unit: mm

Model	A	В	С	D	Е
ASFU-09A	027	238	745	695	260
ASFU-12A	836				

ASFU-18A					
ASFU-24A	1300	188	1202	600	260
ASFU-36A					
ASFU-42A	1590	238	1491	695	260
ASFU-48A					

1.2.5 Installation Clearance Data

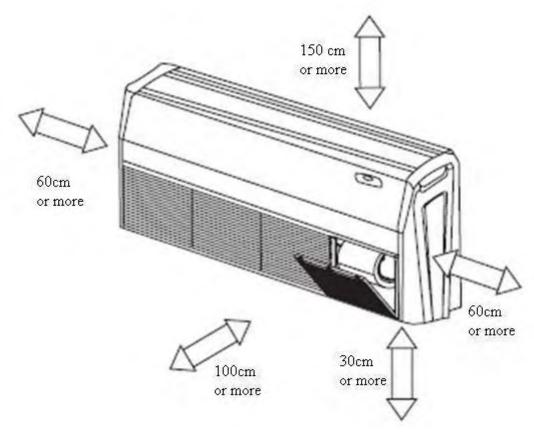


Figure 1-2-8

1.2.6 Drain Piping Work

1) Installation of Drainage Pipeline

- ◆ A Drainage outlet is located at both the left and right sides of the indoor unit. After selecting one Drainage outlet, the other outlet shall be blocked by rubber plug. Bundle the blocked outlet with string to avoid leakage, and also use thermal insulation materials to wrap the blocked outlet.
- ♦ When shipped out from factory, both the Drainage outlets are blocked by rubber plugs.
- When connecting the drainage pipe with the unit, do not apply excessive force to the pipeline at the side of the unit. The fixing position of the pipeline shall be near the unit.
- ◆ Purchase general-purpose hard PVC pipe locally to be used as the drainage pipeline. When carrying out connection, place the end of the PVC pipeline into the drainage hole. Use flexible drainage tube and tighten it with thread loop. Never use adhesive to connect the drainage hole and the flexible drainage tube. (As shown in Figure 1-2-9)
- ◆ When the laid drainage pipe is used for multiple units, the common pipe shall be about 100mm lower than

the drainage outlet of each set of unit. A pipe with thicker wall shall be used for such purpose.

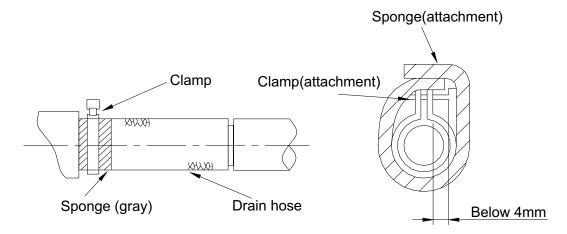


Figure 1-2-9

2) Testing of Drainage System

- After the electrical installation is completed, carry out the testing of the drainage system.
- ◆ During the test, check if the water correctly flows through the pipelines. Carefully observe the joints to ensure that there is no leakage. If the unit is to be installed in a new house, carry out testing before decorating the ceiling.

3) Matters of Attention

♦ The drain pipe outlet direction can be chosen from either the right rear or right.

The diameter of the drain pipe should be equal to or greater than the diameter of the connecting pipe. (Vinyl tube; pipe size: 20mm; outer dimension: 26mm)

Keep the drain pipe short and incline downwards at a gradient of at least 1/100 to prevent air pockets. (Refer to Figure 1-2-10)

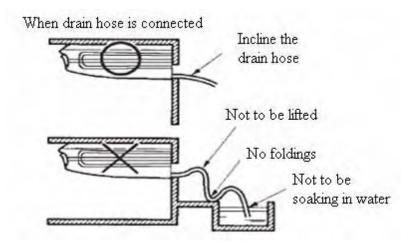


Figure 1-2-10

- ♦ No folding of drain hose inside the indoor unit. (Refer to Figure 1-2-11)
- ◆ Confirm that smooth drainage is achieved after the piping work. Pour 600 cc of water into the drain pan from the air outlet for confirming drainage. (Refer to Figure 1-2-12)

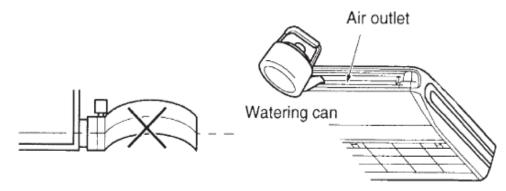


Figure 1-2-11 Figure 1-2-12

1.3 Installation of Cassette Type

1.3.1 Before Installation

- ◆ When the machine arrives, please check if any damage due to transport is existent. If any hurt is found on the surface or inside, please declare to the transport company or the manufacturer in writing.
- Upon receipt of the machine, the unit and accessories shall be checked in accordance with the packing list.
 Before acceptance, it must be confirmed that the model is correct and the unit is in good shape and specification and quantity of accessories are right.
- Correct handling route and method shall be decided to prevent damage to the unit. For protecting the unit and ensuring its safety, carrying the unit with its package is recommended. If such carrying method is difficult under particular conditions, the canton shall not be removed to avoid looseness or falling during handling.
- Confirm the foundation is secure. When the unit is installed on the metal part of a building, electrical insulation must be in compliance with relevant standards.
- Confirm the installation position is away from storage zone of inflammable and explosive substances, or otherwise leakage of inflammable and explosive substances may lead to explosion or a fire.

1.3.2 Installation Site

- Obstruct should put away from the intake or outlet vent of the indoor unit so that the airflow can be blown though all the room.
- Make sure that the installation had accord with the requirement of the schematic diagram of installation spaces.
- Select the place where can stand 4 times of the weight of the indoor unit and would not increase the operating noise and oscillate.
- The horizontally of the installation place should be guaranteed.
- Select the place where is easy to drain out the condensate water, and connect with outdoor unit.
- Make sure that there are enough space for care and maintenance. Make sure that the weight between the indoor unit and ground is above 2300mm.
- When installing the steeve bolt, check if the install place can stand the weight 4 times of the unit's. If not, reinforce before installation. (Refer to the install cardboard and find where should be reinforced) The appliance shall not be installed in laundry.

Cautions:

There will be lots of lampblack and dust stick on the acentric, heat exchanger and water pump in dining room and kitchen, which would reduce the capacity of heat exchanger, lead water leakage and abnormal operation of the water pump.


The following treatment should be taken under this circumstance:

- Ensure that the smoke trap above cooker has enough capacity to obviate lampblack to prevent the indraft of the lampblack by the air conditioner.
- ◆ Keep the air conditioner far from the kitchen so that the lampblack would not be indraft by the air conditioner.

1.3.3 Caution for Installation


1) Important notice:

- ◆ To guarantee the good performance, the unit must be installed by professional personnel according with this instruction.
- Please contact the local Sinclair special nominated repair department before installation. Any malfunction caused by the unit that is installed by the department that is not special nominated by Sinclair would not deal with on time by the inconvenience of the business contact.
- 2) Dimension of ceiling opening and location of the hoisting screw (M10)

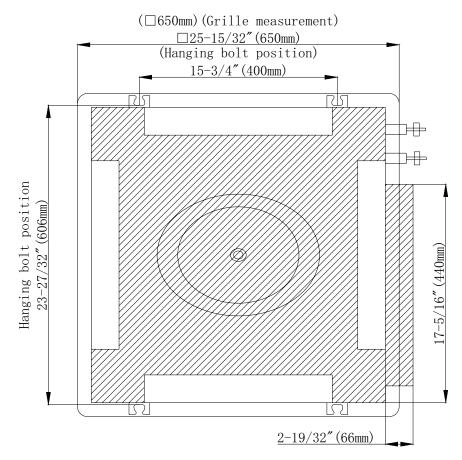

ASCU-12A / ASCU-18A

Figure 1-3-1

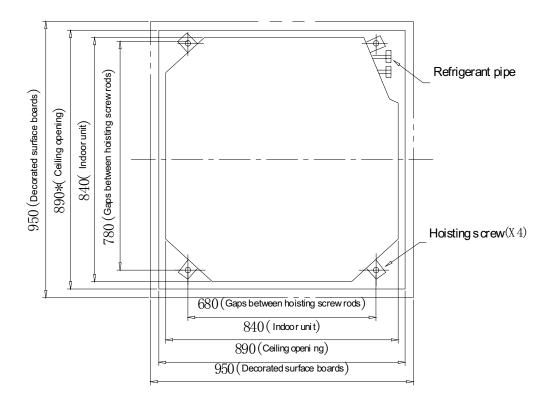

GKH24K3BI/GKH36K3BI/GKH42K3BI/GKH48K3BI

Figure 1-3-2

The drilling of holes in the ceiling must be done by the professional personnel.

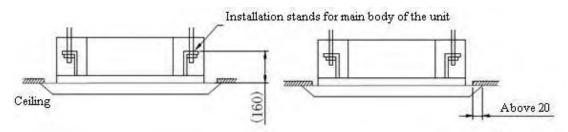


Figure 1-3-3

Cautions:

The dimension for the ceiling openings with * marks can be as large as 910mm. But the overlapping sections of the ceiling and the decorated surface boards should be maintained at no less than 20mm.

3) Main body of hoisting air conditioner

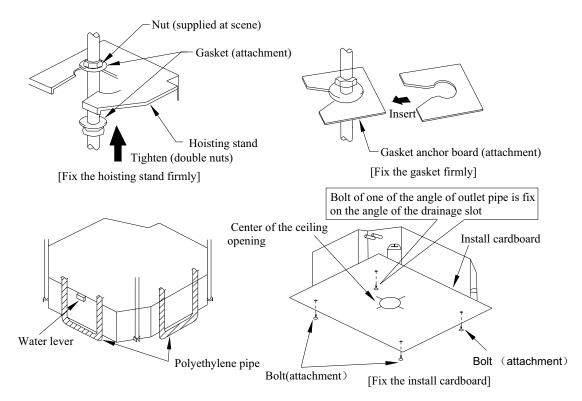


Figure 1-3-4

◆ The primary step for install the indoor unit.

When attach the hoisting stand on hoisting screw, do use nut and gasket individually at the upper and lower of the hoisting stand to fix it. The use of gasket anchor board can prevent gasket break off.

◆ Use install cardboard

Please refer to the install cardboard about the dimension of ceiling opening.

The central mark of the ceiling opening is marked on the install cardboard.

Install the install cardboard on the unit by bolt (3 piece), and fix the angle of the drainage pipe at the outlet vent by bolt.

- ◆ Adjust the unit to the suitable install place.
- Check if the unit is horizontal.

Inner drainage pump and bobber switch are included in the indoor unit, check if 4 angle of every unit are horizontal by water lever. (If the unit is slant toward the opposite of the coagulate water flow, there may be malfunction of the bobber switch and lead water drop.)

- ◆ Backout the gasket anchor board used to prevent gasket break off and tighten the nut on it.
- Backout the install cardboard.

Cautions:

Please do tighten the nuts and bolts to prevent air conditioner break off.

1.3.4 Dimension Data

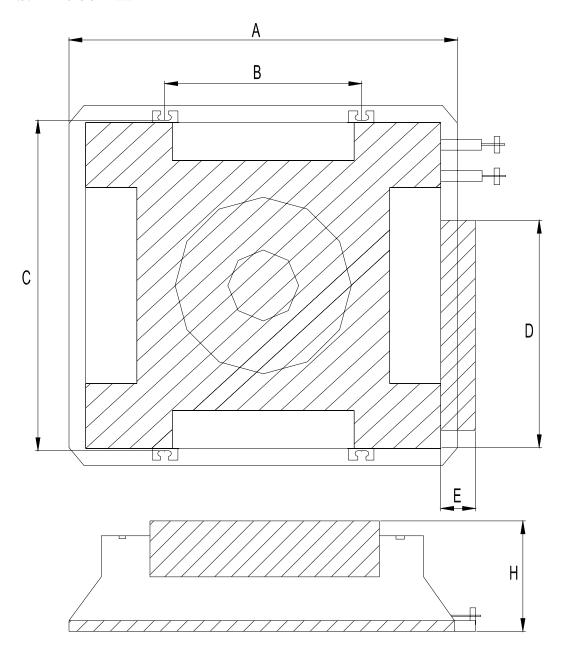


Figure 1-3-5

Model	Н	A	В	С	D	Е
ASCU-12A	245	650	400	606	440	66
ASCU-18A						
ASCU-24A	275	950	680	840	720	76
ASCU-36A						
ASCU-42A	345	950	680	840	720	76
ASCU-48A						

1.3.5 Installation Clearance Data

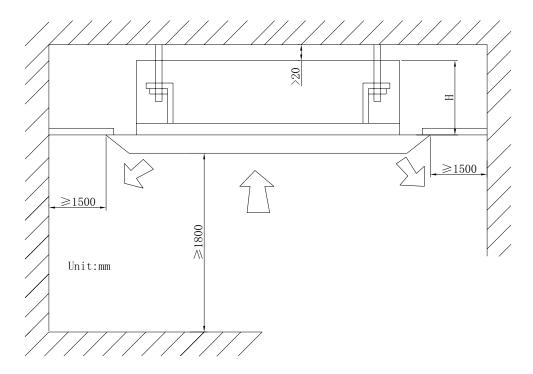


Figure 1-3-6

Models	H(mm)	
ASCU-12A	220	
ASCU-18A	230	
ASCU-24A	260	
ASCU-36A		
ASCU-42A	320	
ASCU-48A		

1.3.6 Drain Piping Work

- 1) Installation of Drainage Pipeline
- ◆ When connecting the drainage pipe with the unit, do not apply excessive force to the pipeline at the side of the unit. The fixing position of the pipeline shall be near the unit.
- ◆ Purchase general-purpose hard PVC pipe locally to be used as the drainage pipeline. When carrying out connection, place the end of the PVC pipeline into the drainage hole. Use flexible drainage tube and tighten it with thread loop. Never use adhesive to connect the drainage hole and the flexible drainage tube. (As shown in Figure 1-3-7)
- ♦ When the laid drainage pipe is used for multiple units, the common pipe shall be about 100mm lower than the drainage outlet of each set of unit. A pipe with thicker wall shall be used for such purpose.

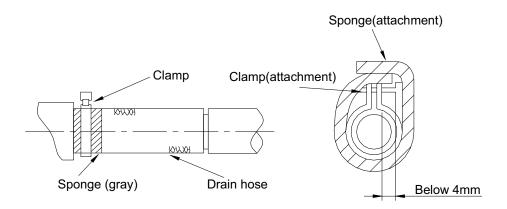


Figure 1-3-7

- 2) Testing of Drainage System
- ◆ After the electrical installation is completed, carry out the testing of the drainage system.
- ◆ During the test, check if the water correctly flows through the pipelines. Carefully observe the joints to ensure that there is no leakage. If the unit is to be installed in a new house, carry out testing before decorating the ceiling.
- 3) Matters of Attention
- ◆ The diameter of the drain hose should be equal or bigger than the connection pipe's. (The diameter of polythene pipe: Outer diameter 25mm Surface thickness ≥1.5mm)
- ◆ Drain hose should be short and drooping gradient should at less 1/100 to prevent the formation of air bubble.
- ◆ If drain hose cannot has enough drooping gradient, drain raising pipe should be added.
- ◆ To prevent bent of the drain hose, the distance between hoisting stand should is 1 to 1.5m. (As shown in Figure 1-3-8)

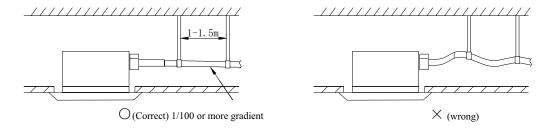


Figure 1-3-8

- ◆ The install height of the drain raising pipe should less than 280mm.
- ◆ The drain raising pipe should form a right angle with the unit, and distance to unit should not beyond 300mm. (As shown in Figure 1-3-9)

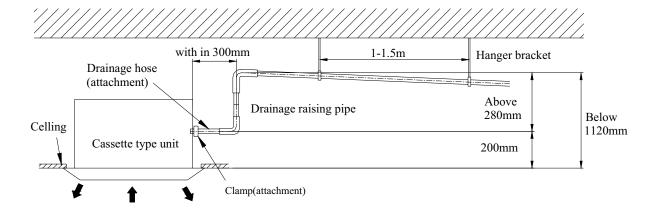


Figure 1-3-9

◆ The slant gradient of the attached drain hose should be within 75mm so that the drain hole doesn't has to endure the unnecessary outside force. (As shown in Figure 1-3-10)


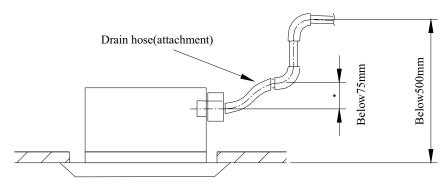


Figure 1-3-10

◆ Please install the drain hose according to the following process if several drain hoses join together. (As shown in Figure 1-3-11)

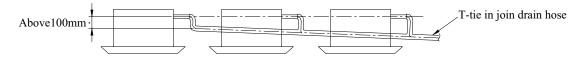

The specs of the selected join drain hose should fits the running capacity of the unit.

Figure 1-3-11

- Check the smoothness of drain after installation.
- ◆ Check the drain state by immiting 600cc water slowly from the outlet vent or test hole. (As shown in Figure 1-3-12)
- ◆ Check the drain in the state of refrigerating after installation of the electric circuit.

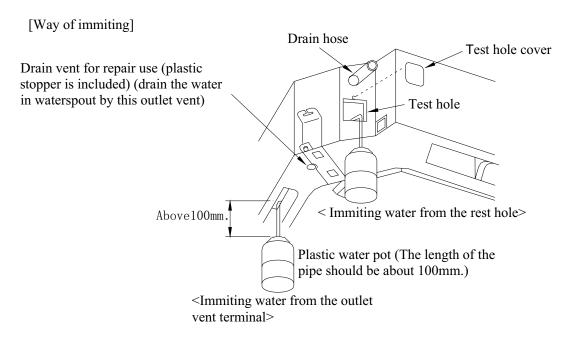


Figure 1-3-12

1.3.7 Installation of panel

1) Set the panel to the indoor unit body by matching the position of the swing flap motor of the decoration panel to the piping position of the panel to the piping position of the indoor unit as shown in Figure 1-3-13.

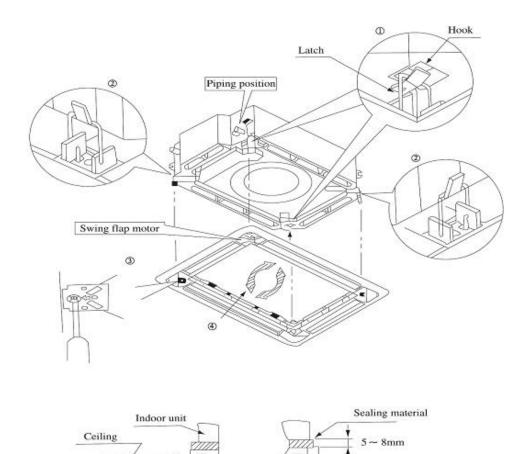


Figure 1-3-13

Panel

Air outlet

- ◆ Hang the latch, which is located on the opposite side of the swing flap motor on the panel, temporarily to the book of the indoor unit. (2 Positions)
- ◆ Temporarily hang the remaining 2 latches to the hooks on the sides of the indoor unit.(Be careful not to let the swing motor lead wire get caught in the sealing material.)
- ◆ Screw all 4 hexagon head screws located right beneath the latches in approximately 15mm.(Panel will rise)
- ◆ Adjust the panel by turning it to the arrowed direction in Fig.4 so that the ceiling opening is completely covered.
- ◆ Tighten the screws until the thickness of the sealing material between the panel and the indoor unit body is reduced to 5~8 mm.

2) Precautions:

◆ Improper screwing of the screws may cause the troubles shown in Figure 1-3-14.

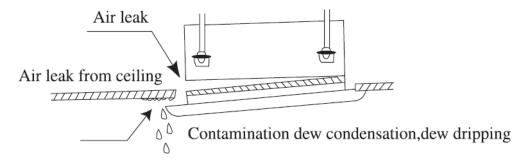


Figure 1-3-14

◆ If gap is still left between the ceiling and the panel after screwing the screws, readjust the height of the indoor unit body (Refer to Figure 1-3-15)

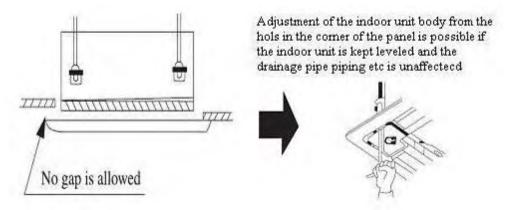


Figure 1-3-15

- ◆ After fixing be sure no gap left between the ceiling and the panel
- 3) Wiring of the decoration panel.
- ◆ Connect the joints for swing flap motor lead wire (at 2 places) installed on the panel (Refer to Figure 1-3-16)

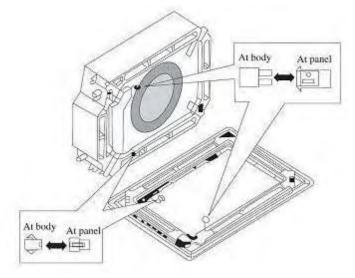


Figure 1-3-16

2 OUTDOOR UNIT INSTALLATION

2.1 Before Installation

- ♦ When the machine arrives, please check if any damage due to transport is existent. If any hurt is found on the surface or inside, please declare to the transport company or the manufacturer in writing.
- ◆ Upon receipt of the machine, the unit and accessories shall be checked in accordance with the packing list. Before acceptance, it must be confirmed that the model is correct and the unit is in good shape and specification and quantity of accessories are right.
- ◆ Correct handling route and method shall be decided to prevent damage to the unit. For protecting the unit and ensuring its safety, carrying the unit with its package is recommended. If such carrying method is difficult under particular conditions, the canton shall not be removed to avoid looseness or falling during handling.
- ◆ Confirm the foundation is secure. When the unit is installed on the metal part of a building, electrical insulation must be in compliance with relevant standards.
- ◆ Confirm the installation position is away from storage zone of inflammable and explosive substances, or otherwise leakage of inflammable and explosive substances may lead to explosion or a fire.


2.2 Installation Site

- ◆ To ensure the unit in proper function, selection of installation location must be in accordance with following principles:
- Outdoor unit shall be installed so that the air discharged by outdoor unit will not r eturn and that sufficient space for repair shall be provided around the machine.
- ◆ The installation site must have good ventilation, so that the outdoor unit can take in and exhaust enough air. Ensure that there is no obstacle for the air intake and exhaust of the outdoor unit. If there is any obstacle blocking the air intake or exhaust, remove it.
- ◆ Place of installation shall be strong enough to support the weight of outdoor unit, and it shall be able to insulate noise and prevent vibration. Ensure that the wind and noise from the unit will not affect your neighbors.
- ◆ Avoid direct sunshine over the unit. It is better to set up a sun shield as the protection.
- ◆ Place of installation must be able to drain the rainwater and defrosting water.
- Place of installation must ensure the machine will not be buried under snow or subject to the influence of rubbish or oil fog.
- ◆ The installation site must be at a place where the air exhaust outlet does not face strong wind.
- Outdoor unit should be hoisted through indicated hoisting holes. During hoisting, special attention must be paid to the unit to prevent collision into its sheet metal parts to avoid rust.
- Rubber cushion or spring shock absorber shall be used for outdoor unit to avoid excessive noise and vibration.
- Rubber cushion or spring shock absorber shall be used for outdoor unit to avoid excessive noise and vibration.
- Only professional personnel are allowed for unit installation.

2.3 Caution for Installation

- ◆ Installation of outdoor unit shall not allow discharged air to return, and sufficient maintenance space shall be left around the machine.
- ◆ Installation position must be well-ventilated, enabling the machine to absorb and discharge enough air. Inlet and outlet must be free of obstruction. Any obstacle blocking air going in and out must be removed.
- ♦ When outdoor unit is mounted on the secure floor such as concrete, bolts and nuts in M10 can used for fixing the unit. Uprightness or levelness of the machine must be ensured.
- Outdoor unit should be hoisted through indicated hoisting holes. During hoisting, special attention must be paid to the unit to prevent collision into its sheet metal parts to avoid rust.
- ◆ Rubber cushion or spring shock absorber shall be used for outdoor unit to avoid excessive noise and vibration. Uprightness or levelness must be ensured.
- ◆ In installation of drain pipe, the connector of the drain pipe shall be inserted into a drain hole on the chassis of the outdoor unit. And then a drain pipe shall be connected to the drain connector. (If the drain connector is used, installing height of the outdoor unit shall be at least 5cm).
- If pipe is put through wall, a wall pipe must be used.
- ◆ Installation dimension must be in line with requirements by the instructions. Outdoor unit must be fixed on the mounting position.
- Only professional personnel are allowed for unit installation

2.4 Dimension Data

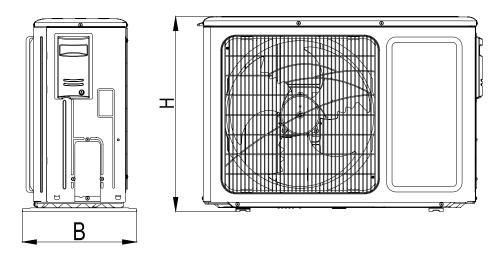

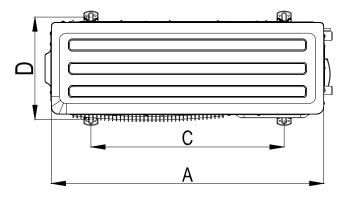


Figure 2-4-1

Unit: mm

Model	A	В	С	Н	D
ASGE-09A					
ASGE-12A	848	320	540	540	286
ASGE-18A					
ASGE-24A	1018	412	700	572	300
	1018	412	840	572	378
ASGE-36A	1018	712	0.10	372	376
ASGE-42A					
ASGE-48A	950	412	1250	572	378

2.5 Installation Clearance Data

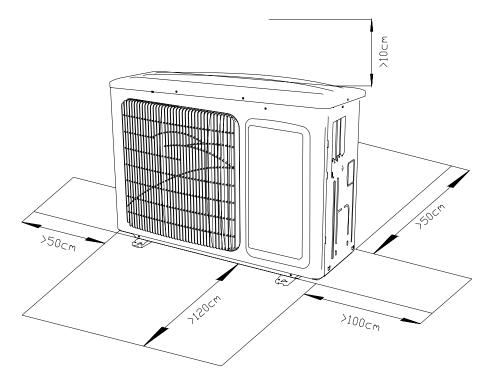


Figure 2-5-1

3 REFRIGERATION PIPING WORK

- 3.1 Refrigeration Piping Work Procedures
- 1) Connecting pipelines
- ◆ Connection pipes must be in accordance with the following requirements: the basic principle --- keeping dry, clean and no leakage inside.

The 3 principles of refrigerant piping				
Dry	Clean	Air tight		
Make sure there is no moisture inside the pipes	Make sure there is no dirt inside the pipe	Make sure the refrigerant does not leak out		
(V0965)	↑ ↑ Dirt (V1148)	Leak (V1149)		

Figure 3-1-1

- ◆ Align copper pipe flare with the center of screwed connector and tighten fully the nut of the flare by hand.
- ◆ Tighten the flare nut with a torque spanner until the torque spanner makes a click, as shown in Figure 3-1-1. Moment needed for tightening a nut is shown in Tab. 3-1-1.

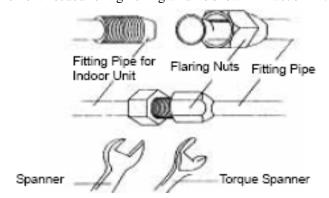


Figure 3-1-2

Form 3-1-1 the tightening torque needed for tightening nut

Pipe diameter	Tightening torque
1/4 "	15-30 (N·m)
3/8 "	35-40 (N·m)
5/8 "	60-65 (N·m)
1/2 "	45-50 (N·m)
3/4 "	70-75 N·m)

- Curvature of piping shall not be too small, or otherwise piping may be broken. So installation personnel should use a pipe bender to bend pipes.
- ◆ Upward or longitudinal welding joint method is usually applied to the welding of pipelines. The welding method that mouth of pipe is downward (face-down welding) should be avoided as far as possible, because such method is prone to welding defects and even would cause leakage, as shown in Figure 3-1-3.

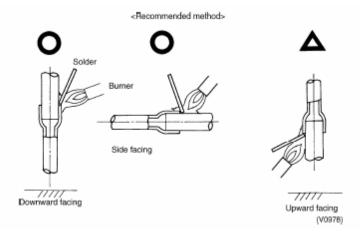


Figure 3-1-3

- Uninsulated connecting pipes and connectors should be packed with sponge and tied with plastic adhesive tapes.
- 2) Vacuum-pumping and leak detection
- ◆ Dismantle the bonnet of refrigerant valve and air valve.
- ◆ Align with the center of piping and adequately tighten nuts of connecting pipes by hand
- ◆ Tighten the nuts with a spanner.
- Remove the one way valve cap of air valve.
- ◆ Unscrew the spool of refrigerant valve for 1/4 turn with a socket head wrench, and at the same time push up the spool of air valve with a screwdriver to let air give off.
- ◆ Air exhaust continues for 15 seconds until coolant gas appears, immediately shut off one way valve and tighten the valve cap.
- ◆ Totally open the spool of refrigerant valve and air value (as shown in Figure 3-1-4)

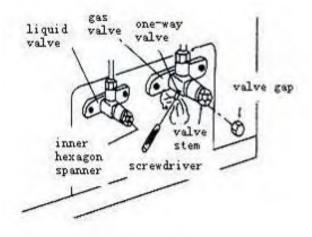


Figure 3-1-4

◆ Tighten the valve caps and use soapy water or a leak detector to check any leakage on indoor unit, outdoor unit and connection parts of pipes.

Caution:

If conditions are allowed, a vacuum pump shall be used for drawing off air inside the system at a valve. Method for creation of vacuum by using a vacuum pump is as follows:

- ◆ Take out the nut cover of the inlet for refrigerant.
- ◆ Connect the tube of the vacuum watch with the vacuum pump, having the low-pressure end linking to the inlet for refrigerant. (As shown in Figure 3-1-5)

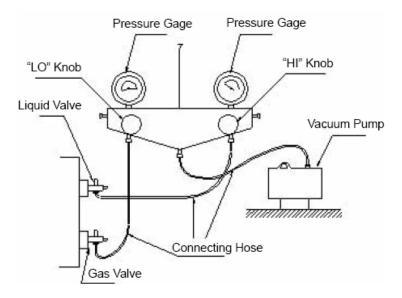


Figure 3-1-5

- ◆ Starting the vacuum pump, when the indicator turns to-1 bar, closing the low pressure handle and stopping vacuumize. Keep for 15 minutes, ensuring the pressure of the vacuum watch remains.
- ◆ Take out the valve cover of the gas valve together with the liquid valve.
- Loosing the cord of liquid valve until the pressure rise to 0 bar.
- Dismantle the tube from the cover of the inlet for refrigerant then, tighten the cover.
- ◆ Loose the valve cord of the gas valve as well as the liquid valve entirely.
- ◆ Tighten the valve cover of the gas valve and liquid valve so as to check whether leakage occurred.
- 3) Installation of Protective Layer of Connecting Pipe
- ◆ To avoid generation of condensate on the connecting pipe and avoid leakage, the big pipe and the small pipe of the connecting pipe must be covered by thermal insulation materials, be bundled by adhesive tape, and be isolated from air.
- ◆ The joint connecting to the indoor unit must be wrapped by thermal insulation material.

 There shall be no gap between the connecting pipe joint and the wall of the indoor unit. Refer

to Figure 3-1-6.

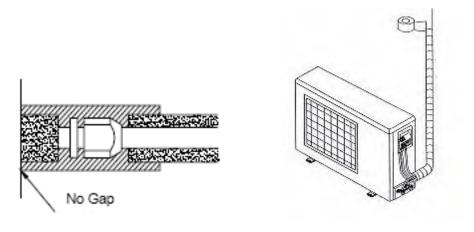


Figure 3-1-6

Figure 3-1-7

- ◆ Use adhesive tape to bundle the connecting pipe and the cables together. To prevent condensate from overflowing out from the drainage pipe, separate the drainage pipe firm the connecting pipe and the cables.
- ◆ Use thermal insulation tape to wrap the pipes from the bottom of the outdoor unit until the upper end of the pipe where the pipe enters the wall. When wrapping thermal insulation tape, the later circle of tape must cover half of the front circle of tape (Figure 3-1-7).
- Wrapped pipe must be fixed to wall using pipe clamps.

Caution:

- ◆ After the pipes are wrapped by protective materials, never bend the pipes to form very small angle, and otherwise the pipes may crack or break.
- ◆ Do not wrap the protective tape too tight, otherwise the efficiency of thermal insulation may be decreased. Ensure that the condensate drainage flexible tube is separate from the bundled pipes.
- ◆ After the protective work is completed and the pipes are wrapped, use seal material to block the hole in the wall, so as to prevent rain and wind from entering the room.

3.2 Caution in Connecting Pipes

Arrangement of connecting pipes shall be performed according to sit conditions with reference to the following principles.

- ◆ Try to shorten the length of connecting pipes, within 5m for the better.
- ◆ Try to reduce height difference between indoor unit and outdoor unit.
- ◆ Try to reduce number of joint bends of connecting pipes.
- ◆ If the length of connecting pipes is more than 20m, adequacy of lubricant of the system must be checked; and if necessary, add more lubricant properly.
- ◆ Filling amount of refrigerant in the system is matched to a 7m connecting pipe. If the

connecting pipe is needed to lengthen, appropriate amount of refrigerant should be added. How much refrigerant should be added for every meter extension refers to the following table. Allowable maximum pipe length is 30m.

- ◆ If height difference between indoor unit and outdoor unit exceeds 10m in installation of air conditioner, an oil return bend must be mounted at an interval of 6m.
- ◆ If heights of indoor unit and outdoor unit are different, pipes should be laid out with reference to Figure 3-2-1.

——Refrigerant pipe (thin)

----- Air pipe (large)

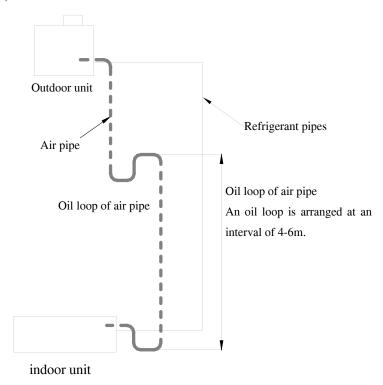


Figure 3-2-1

3.3 Specification of Connection Pipe

	External Diameter		Maximum Length	Maximum Difference in Height between	Additional Charge			
Model	G 5:			Outdoor and Indoor	of			
	Gas Pipe	Liquid Pipe	Pipe	Unit	Refrigerant			
			(m)	(m)	(g/m)			
ASGE-09A	φ3/8 "							
ASGE-12A	φ1/4 "		20	15	15			
ASGE-18A	φ1/2 "							
ASGE-24A	φ5/8 "	φ3/8 "	30	15	60			

ASGE-36A			
ASGE-42A			
ASGE-48A			

4 ELECTRIC WIRING WORK

4.1 Wiring Principle

4.1.1General

- Perform wiring of the power supply in conformance with the regulations of the local electric company.
- ◆ For the control wires connecting indoor units, and between indoor and outdoor units, use of double-core shield wires is recommended to prevent noise trouble.
- ◆ Be sure to set the earth leakage breaker and the switches to the power supply section of the indoor unit.
- Supply power to each outdoor unit and provide an earth leakage breaker or hand switch for each outdoor unit.
- Store wiring system for control and refrigerant piping system in the same line.
- ◆ Arrange the cables so that the electric wires do not come to contact with high-temperature part of the refrigerant pipe; otherwise coating melts and an accident may be caused.
- ◆ Do not turn on power of the indoor unit until vacuuming of the refrigerant pipe will finish.
- ◆ Installation should be conducted by National Wiring Regulation.
- The rated voltage and exclusive power supply must be adopted for the air conditioners.
- ◆ The power cable should be reliable and fixed, in order to avoid the wiring terminal be suffered from force. And do not drag the power cable forcibly.
- ◆ The wire diameter of power cable should be large enough, if power cable and connection wire be damaged, it should be replaced by the exclusive cable.
- ◆ All electric installation must be done by professional personnel according to local law, regulation and this manual.
- ◆ It should be reliably earthed, and it should be connected to the special earth device, the installation work should be operated by the professional.
- ◆ The creepage protect switch and air switch must be installed.
- ◆ Air switch should have the thermal dropout and magnetic dropout function, in order to avoid the short circuit and overload.
- ◆ The on spot connection should refer to the circuit diagram, which is stuck on the unit body.
- ◆ The unit should be reliably earth, if it is improperly earthed that may cause electric shock or fire.

INSTALLATION

connecting pipe is needed to lengthen, appropriate amount of refrigerant should be added. How much refrigerant should be added for every meter extension refers to the following table. Allowable maximum pipe length is 30m.

- ◆ If height difference between indoor unit and outdoor unit exceeds 10m in installation of air conditioner, an oil return bend must be mounted at an interval of 6m.
- ◆ If heights of indoor unit and outdoor unit are different, pipes should be laid out with reference to Figure 3-2-1.

-----Refrigerant pipe (thin)

----- Air pipe (large)

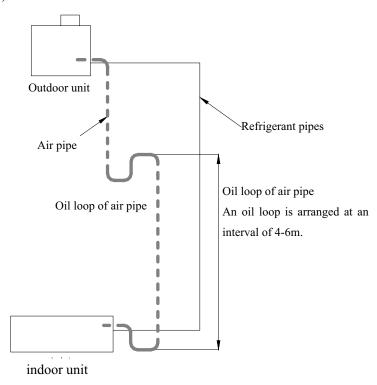


Figure 3-2-1

3.3 Specification of Connection Pipe

	External Diameter		Maximum Length	Maximum Difference in Height between	Additional Charge		
Model	Gas Pipe	Liquid Pipe	of Connection Pipe	Outdoor and Indoor Unit	of Refrigerant		
		(m)	(m)	(g/m)			
ASGE-09A	φ3/8 "						
ASGE-12A	φ1/2 "	φ1/4 "	20	15	15		
ASGE-18A	Ψ1/2						
ASGE-24A	φ5/8 "	φ3/8 "	30	15	60		

Warning:

- ◆ If the power supply flexible line or the signal line of the equipment is damaged, only use special flexible line to replace it.
- ◆ Before connecting lines, read the voltages of the relevant parts on the nameplate. Then carry out line connection according to the schematic diagram.
- ◆ The air-conditioning unit shall have special power supply line which shall be equipped with electricity leakage switch and air switch, so as to deal with overload conditions.
- ◆ The air-conditioning unit must have grounding to avoid hazard owing to insulation failure.
- ◆ All fitting lines must use crimp terminals or single wire. If multiple twisted wires are connected to terminal board, arc may arise.
- ◆ All line connections must conform to the schematic diagram of lines. Wrong connection may cause abnormal operation or damage of the air-conditioning unit.
- ◆ Do not let any cable contact the refrigerant pipe, the compressor and moving parts such as fan.
- ◆ Do not change the internal line connections inside the air-conditioning unit. The manufacturer shall not be liable for any loss or abnormal operation arising from wrong line connections.

4.1.3 Power Cable Connection

1) Air-conditioning unit with single-phase power supply

- ① Remove the front-side panel of the outdoor unit.
- 2 Pass the cable though rubber ring.
- ③ Connect the power supply cable to the "L, N" terminals and the grounding screw.
- 4 Use cable fastener to bundle and fix the cable.

2) Air-conditioning unit with 3-phase power supply

- ① Remove the front-side panel of the outdoor unit.
- ② Attach rubber ring to the cable-cross hole of the outdoor unit.
- ③ Pass the cable though rubber ring.
- ④ Connect the power cable to the terminal and earthing screws marked "L1, L2, L3 & N".
- (5) Use cable fastener to bundle and fix the cable.

Caution:

◆ For air-conditioner with auxiliary heater, it is required to connect the power cable to the "L1, L2 L3" terminals and the grounding screw.

4.1.4 Connection of Signal Line of Wire Controller

Caution:

Take great care when carrying out the following connections, so as to avoid malfunction of the air-conditioning unit because of electromagnetic interference.

◆ The signal line of the wire controller must be separated from the power line and the

connecting line between the indoor unit and the outdoor unit.

- ◆ In case the unit is installed in a place vulnerable by electromagnetic interference, it is better to use shielded cable or double-twisted cable as the signal line of the wire controller.
- Open the cover of the electric box of the indoor unit.
- ◆ Pull the signal cable of the wire controller through the rubber ring.
- ◆ Plug the signal line of the wire controller onto the 4-bit pin socket at the circuit board of the indoor unit.
- ◆ Use cable fastener to bundle and fix the signal cable of the wire controller.


4.1.5Connection of wires

- ① Remove the board on the right side of outdoor unit and put through the wire running hole on the outdoor unit and put on a rubber ring.
- ② Remove wire holders and connect the power cord to the terminal and fix it.
- ③ Secure the power connecting cord and signal control cable with wire holders and then connect corresponding adapters.
- 4 Check if wires are fixed properly.
- (5) Fit on the front side board.

INSTALLATION

4.2 Electric Wiring Design

4.2.1 ASGE-09A+ASDU-09A ASGE-12A+ASDU-12A ASGE-18A+ASDU-18A ASGE-24A+ASDU-24A

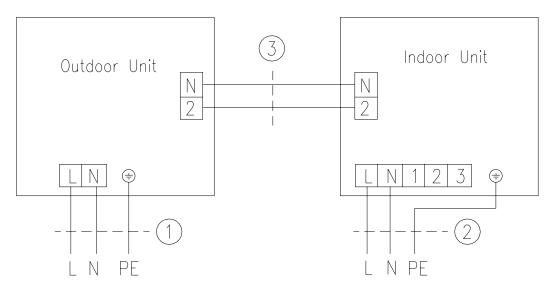


Power:220−240V ~ 50Hz

Power:220−240V ~ 50Hz

ASGE-36A+ASDU-36A

ASGE-42A+ASDU-42A


ASGE-48A+ASDU-48A

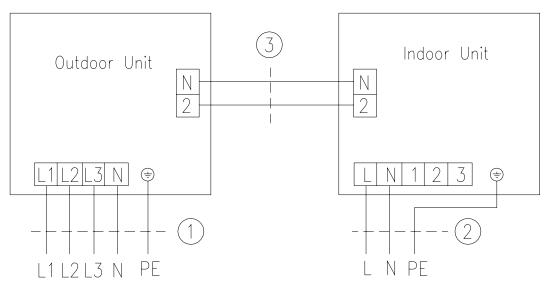


Power: $380-415V \sim 50Hz$

Power:220−240V ~ 50Hz


4.2.2 ASGE-09A+ASFU-09A、ASGE-12A+ASFU-12A、ASGE-18A+ASFU-18A、ASGE-24A+ASFU-24A、

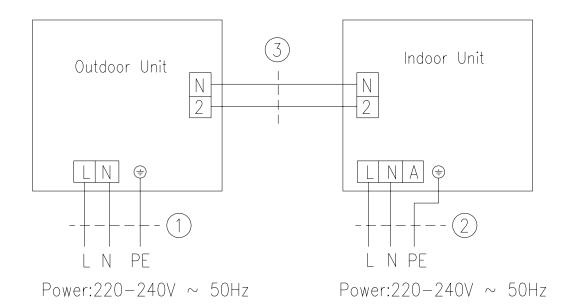

ASGE-36A+ASFU-36A、ASGE-42A+ASFU-42A、 ASGE-48A+ASFU-48A、

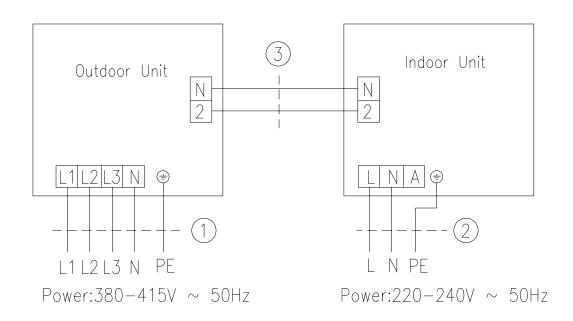


4.2.3 ASGE-09A+ASCU-09A、ASGE-12A+ASCU-12A、 ASGE-18A+ASCU-18A、ASGE-24A+ASCU-24A、

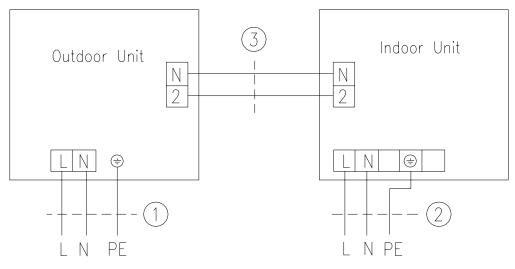

Power:220−240V ~ 50Hz

Power:220−240V ~ 50Hz

ASGE-36A+ASCU-36A、ASGE-42A+ASCU-42A、 ASGE-48A+ASCU-48A

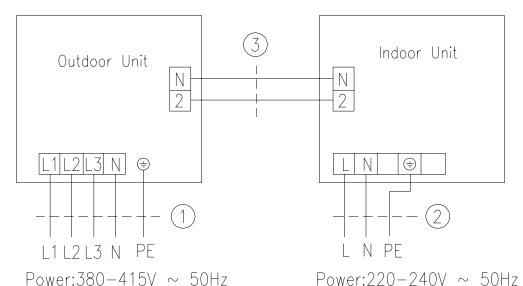

4.3 Specification of Power Supply Wire and Air Switch

4.3.1 Outdoor Unit

Model	Power Supply (V, Ph, Hz)	Capability of Air Swith	Minimum Sectional Area of Earth Wire	Minimum Sectional Area of Power Supply Wire
		(A)	(mm ²)	(mm ²)
ASGE-09A	220-240, 1, 50	10	1.5	1.5
ASGE-12A	220-240, 1, 50	13	1.5	1.5
ASGE-18A	220-240, 1, 50	20	2.5	2.5
ASGE-24A	220-240, 1, 50	25	4.0	4.0
ASGE-36A	380-415, 3, 50	16	2.5	2.5
ASGE-42A	380-415, 3, 50	20	2.5	2.5
ASGE-48A	380-415, 3, 50	20	2.5	2.5

4.3.2 Indoor Unit

Duct Type

Model	Power Supply (V, Ph, Hz)	Capability of Air Swith	Minimum Sectional Area of Earth Wire	Minimum Sectional Area of Power Supply Wire
		(A)	(mm ²)	(mm ²)
ASDU-09A	220-240, 1, 50	6	1.0	1.0
ASDU-12A	220-240, 1, 50	6	1.0	1.0
ASDU-18A	220-240, 1, 50	6	1.0	1.0
ASDU-24A	220-240, 1, 50	6	1.0	1.0
ASDU-36A	220-240, 1, 50	10	1.5	1.5
ASDU-42A	220-240, 1, 50	10	1.5	1.5
ASDU-48A	220-240, 1, 50	10	1.5	1.5

Ceiling Type

Model	Power Supply (V, Ph, Hz)	Capability of Air Swith	Minimum Sectional Area of Earth Wire	Minimum Sectional Area of Power Supply Wire
		(A)	(mm ²)	(mm ²)
ASFU-09A	220-240, 1, 50	6	1.0	1.0
ASFU-12A	220-240, 1, 50	6	1.0	1.0
ASFU-18A	220-240, 1, 50	6	1.0	1.0
ASFU-24A	220-240, 1, 50	6	1.0	1.0
ASFU-36A	220-240, 1, 50	6	1.0	1.0
ASFU-42A	220-240, 1, 50	6	1.0	1.0
ASFU-48A	220-240, 1, 50	6	1.0	1.0

Cassette Type

			Minimum Sectional	Minimum Sectional
Model	Power Supply	Capability of Air Swith	Area of Earth Wire	Area of Power
Wiodei	(V, Ph, Hz)	All Swith	Area of Earth whe	Supply Wire
		(A)	(mm ²)	(mm ²)
ASCU-12A	220-240, 1, 50	6	1.0	1.0
ASCU-18A	220-240, 1, 50	6	1.0	1.0
ASCU-24A	220-240, 1, 50	6	1.0	1.0
ASCU-36A	220-240, 1, 50	6	1.0	1.0
ASCU-42A	220-240, 1, 50	6	1.0	1.0
ASCU-48A	220-240, 1, 50	6	1.0	1.0

MAINTENANCE

MAINTENANCE

1 TROUBLE TABLE

Trouble Code	Trouble Name	Origin of Trouble Signal	Control Description
Е0	Pump Failure	Pump	If water full protection continues for 2 hours and fails to restore, it is believed that the water pump is at fault and all loads are shut off and fail to restore automatically.
E1	Compressor High Pressure Protection	High voltage switch	When high voltage protection is detected for continuous 3 seconds, all loads are shut off (except for the four way valve), all buttons and remote control signals except for power-on or power-off are shielded and fail to restore automatically, the machine should be powered off and on, or failure should be removed after power supply is restored.
E2	Indoor Frost-Proof Protection	Evaporator of indoor unit Thermal bulb	When the unit has been running for refrigeration or dehumidification for a period of time and evaporator thermal bulb is detected to be lower than -2°C, the unit will report a fault and stops the compressor and the outdoor unit. The unit will begin to operate after temperature is ≥ 10 °C and the compressor keeps outage for 3 minutes.
Е3	Compressor Low Pressure Protection	Low voltage switch	When the unit is started or at standby (detection will begin 3 minutes after the compressor is started up) and detected breakdown of the low voltage switch for continuous 30 seconds, a fault is reported. The unit can be restored automatically after the first 2 reported faults within 30 minutes. The third reported fault and so on can not be restored automatically.
E4	Compressor Exhaust High Temperature Protection	Discharge thermal bulb	After the compressor is started, if discharge temperature is detected to be more than or equal to 130 degree for continuous 30 seconds, E4 will be displayed, all loads (except for the four way valve) will be shut off, the compressor will stop for 3 minutes and the complete system will restore after discharge temperature is lower than 90 degree. If such fault is reported for successive three times, the protection can not be restored itself.
E5	Compressor Overheat	Compressor	After the compressor is started, if the overload switch of the compressor is detected to shut off, the fault is reported. All loads (except for the four way valve) are shut off, the fault is displayed, and the compressor will stop for 3 minutes. If the fault is removed, the compressor can be restarted to run. If successive three compressor overload protection faults are detected within

Trouble Code	Trouble Name	Origin of Trouble Signal	Control Description
		J	30 minutes, the unit can not be restored itself and the buzzer will give out an alarm. Push the ON/OFF button to shut off the unit. And then push ON/OFF button again, if high voltage protection disappears, operation will restore, or otherwise, the fault is displayed.
E6	Communications Failure	Communication	When outdoor unit is energized and fails to receive data of indoor unit within 30 seconds, an indoor unit communication fault is reported. The compressor and the outdoor unit will be shut off, and the four way valve will be stopped 2 minutes after the compressor outage in heating state. If indoor unit fails to receive information of outdoor unit, a communication fault is reported. The indoor unit is shut off and an indicator is twinkling. If the display board fails to receive information of outdoor unit, a communication fault is determined and displayed and the machine does not actuate. After communication becomes normal, the system can restore to the previous running state itself.
E8	Indoor Fan Protection	Indoor unit	If fan overload protection is detected for continuous 3 seconds, relevant compressor and fan shall be shut off immediately and a fault code E8 is displayed, and at the same time, the buzzer gives out an alarm. Push the ON/OFF key, if the fault disappears, clear the fault display and push the ON/OFF key for restarting the system.
Е9	Full Water Protection	Liquid level switch	Water full is detected for continuous 8 seconds after the system is powered on, the water full protection is initiated and the indicator is twinkling (or E9 is displayed). Under refrigeration and dehumidification mode, the outdoor fan and the compressor are shut off and the indoor fan stops after 1 minute delay; under heating mode, he outdoor fan and the compressor are shut off, the four way valve keeps at the previous status, and the indoor fan stops after 1 minute delay; under air supply mode, the load of indoor unit remains.
F0	Failure of Indoor Room Sensor at Air Intake	Indoor environment Thermal bulb	Open-circuit or short-circuit of the indoor environment thermal bulb is detected for continuous 5 seconds, indoor environment temperature will be set compulsively at 24 degree, the system does not take any measure, and only the indicator is twinkling or fault code F0 is displayed. After the fault is removed, the system can restore operation by itself. Under air supply mode, only the

Trouble Code	Trouble Name	Origin of Trouble Signal	Control Description
			fault is displayed and the indoor fan is running normally. The fault display disappears when the fault is removed.
FI	Failure of Evaporator Temp. Sensor	Indoor evaporator thermal bulb	Open-circuit or short-circuit of evaporator thermal bulb is detected for continuous 5 seconds, under refrigeration and dehumidification mode, the system will be shut off; and under heating mode, all loads except for the four way valve are shut off. The indicator is twinkling or fault code F1 is displayed. The system can restore by itself and display fault elimination after the fault is removed. Under air supply mode, only the fault is displayed and the indoor unit is running normally. The fault display disappears when the fault is removed.
F2	Failure of Condenser Temp. Sensor	Outdoor condenser thermal bulb	Open-circuit or short-circuit of condenser thermal bulb is detected for continuous 5 seconds, under refrigeration and dehumidification mode, the system will be shut off; and under heating mode, all loads except for the four way valve are shut off. The indicator is twinkling or fault code F2 is displayed. The system can restore by itself and display fault elimination after the fault is removed. Under air supply mode, only the fault is displayed and the indoor unit is running normally. The fault display disappears when the fault is removed. For other types of refrigeration machines except for air duct machine, condenser thermal bulb is not detected.
F3	Failure of Outdoor Ambient Sensor	Outdoor environment thermal bulb	Open-circuit or short-circuit of outdoor environment thermal bulb is detected for continuous 5 seconds, under refrigeration and dehumidification mode, the system will be shut off; and under heating mode, all loads except for the four way valve are shut off. The indicator is twinkling or fault code F3 is displayed. The system can restore by itself and display fault elimination after the fault is removed. Under air supply mode, only the fault is displayed and the indoor unit is running normally. The fault display disappears when the fault is removed.
F4	Failure of Exhaust Temp. Sensor	Discharge thermal bulb	After the compressor is started, open-circuit of discharge thermal bulb is detected for continuous 5 seconds. Under refrigeration and dehumidification mode, all loads will be shut off. Under heating mode, all loads except for the four way valve are shut off. The indicator is twinkling or fault code F4 is displayed. And the buzzer gives out an alarm. After the fault is removed, the system will restore by itself and clear the fault code.


Trouble Code	Trouble Name	Origin of Trouble Signal	Control Description
			If discharge thermal bulb is short circuited, under refrigeration and dehumidification mode, all loads will be shut off. Under heating mode, all loads except for the four way valve are shut off. The indicator is twinkling or fault code F4 is displayed. And the buzzer gives out an alarm. After the fault is removed, the system will restore by itself and clear the fault code.
F5	Failure of Indoor Room Sensor at Wire Controller	Line controller	Open-circuit or short-circuit of line controller thermal bulb is detected for continuous 5 seconds, indoor environment temperature will be set compulsively at 24 degree, the system does not take any measure, and only the indicator is twinkling or fault code F0 is displayed. After the fault is removed, the system can restore operation by itself. Under air supply mode, only the fault is displayed and the indoor fan is running normally. The fault display disappears when the fault is removed.

2 FLOW CHART OF TROUBLESHOOTING


Service personnel shall collect the malfunction information as much as possible and research them thoroughly, list these electrical parts which may cause malfunction, service personnel shall be able to determine the specific reason and solve the faulted parts.

- Observe the status of the complete device and do not observe the partial
- It is advised to start from the simple operation during analyzing ,judging and confirming malfunction reason, then conduct the complicated operations such removal of device, part replacement and refrigerant filling.
- Find the malfunction reason carefully as unit may occur several malfunction at the same time and one malfunction may develop into several malfunction, so entire system analysis shall be established to make the judged result exact and credible.


♦ Malfunction display: E1 Compressor High Pressure Protection

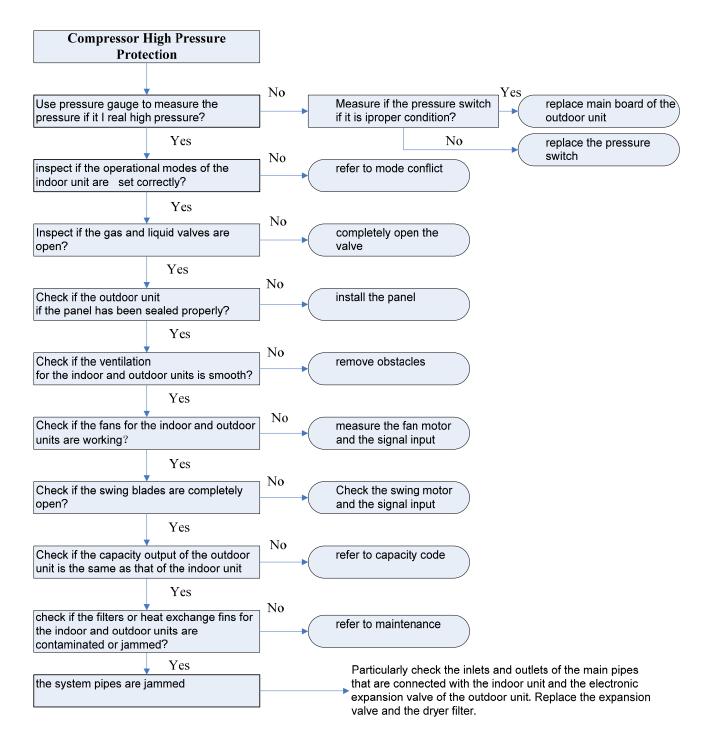


◆ Malfunction display: E3 Compressor Low Pressure Protection

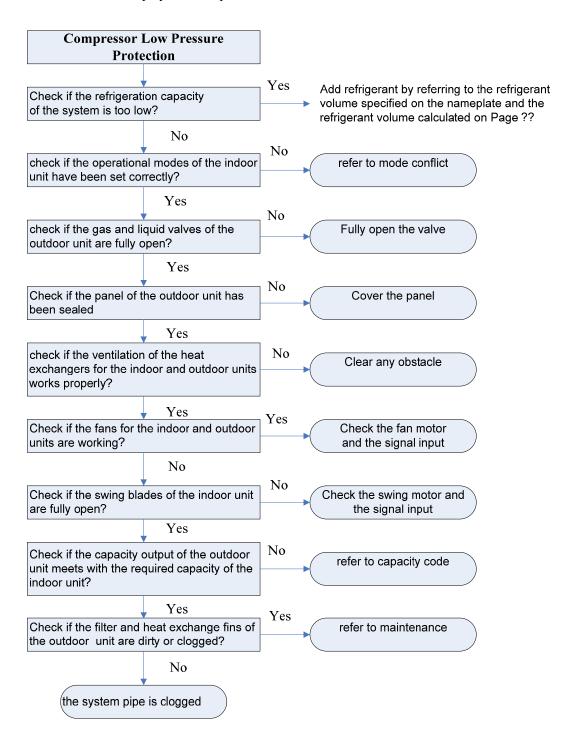


◆ Malfunction display: E4 Compressor Exhaust High Temperature Protection

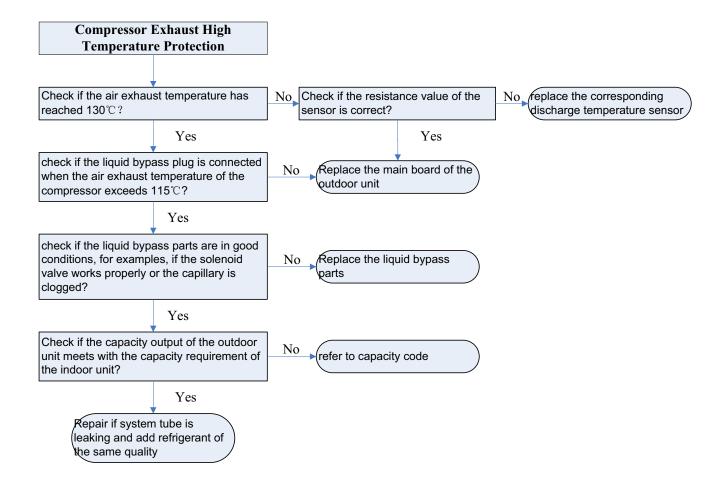


◆ Malfunction display: E5 Compressor Overheat

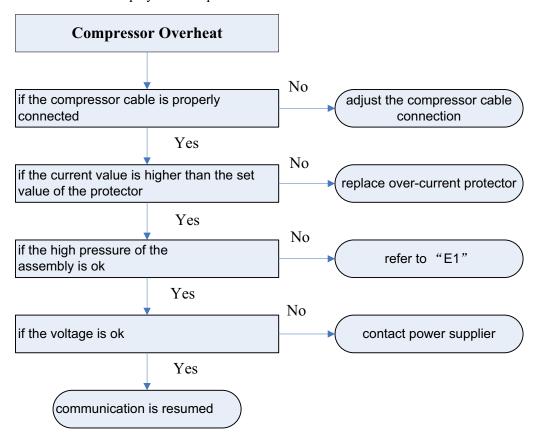


◆ Malfunction display: E6 Communications Failure

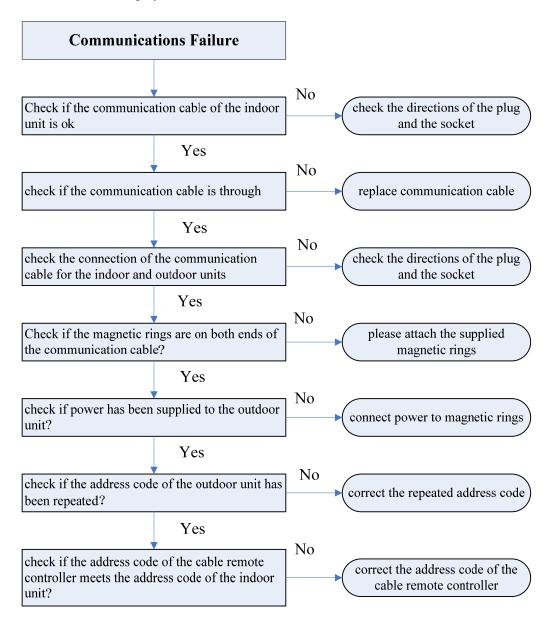


◆ Malfunction display: E9 Full Water Protection

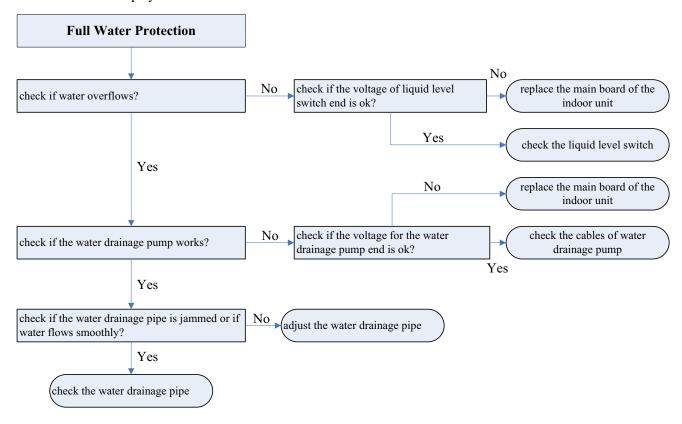


♦ Malfunction display: F0 Failure of Indoor Room Sensor at Air Intake

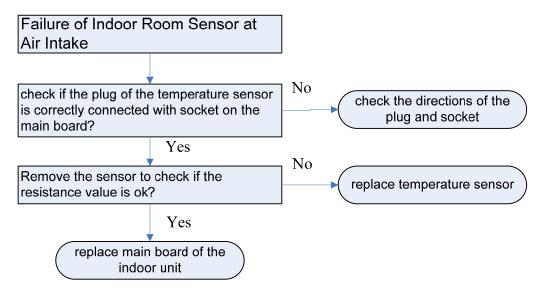


◆ Malfunction display: F1 Failure of Evaporator Temp. Sensor

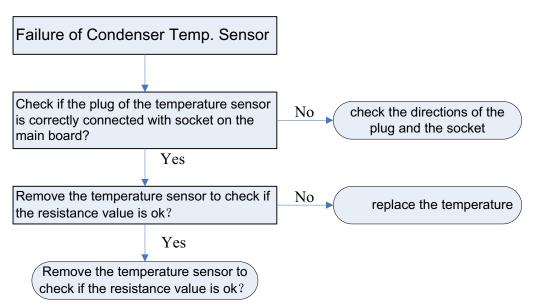

◆ Malfunction display: F3 Failure of Outdoor Ambient Sensor

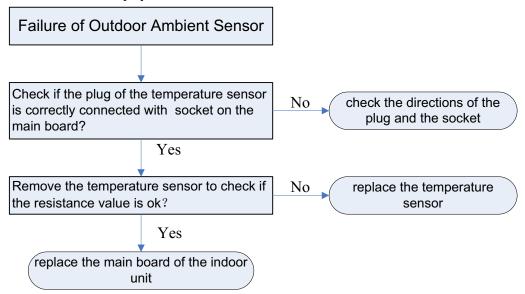


◆ Malfunction display: F4 Failure of Exhaust Temp. Sensor

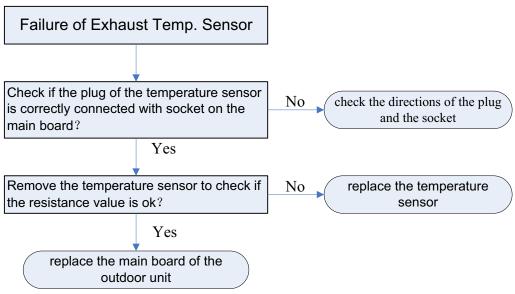

◆ Malfunction display: F5 Failure of Indoor Room Sensor at Wire Controller

Failure of Indoor Room Sensor at


outdoor unit

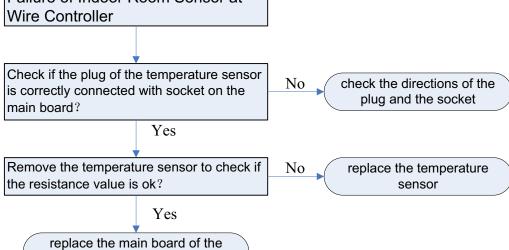


3 WIRING DIADRAM

- 3.1 Wiring Diagram-Outdoor Units
- 1, **ASGE-09A**


WITH FUNCTION OF LOW TEMP. COOLING:

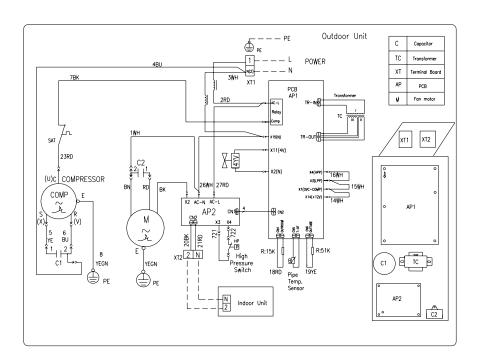


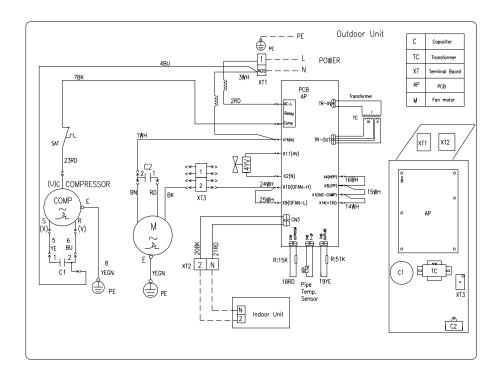

2, ASGE-12A


WITH FUNCTION OF LOW TEMP. COOLING:

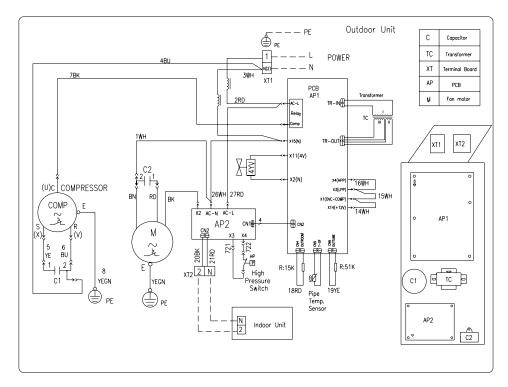


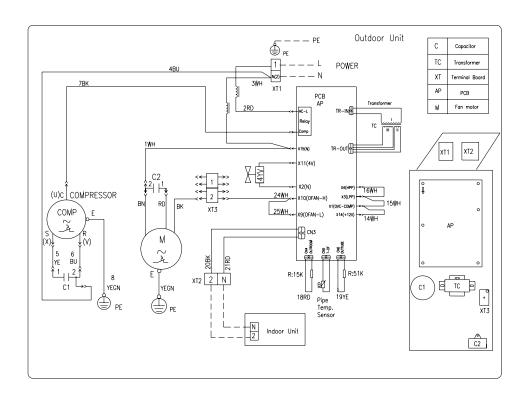

3, ASGE-18A


WITH FUNCTION OF LOW TEMP. COOLING:

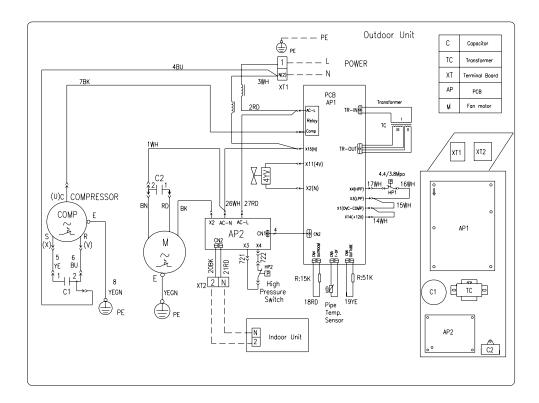


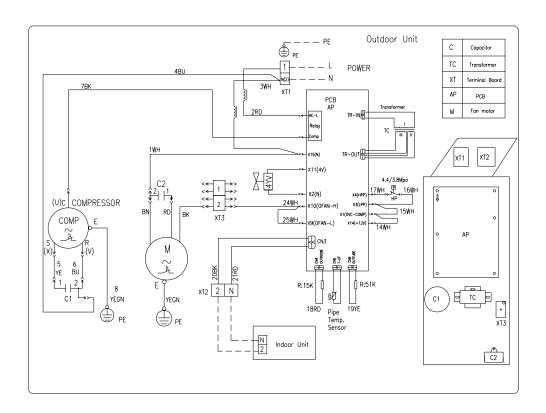

4、 ASGE-24A


WITH FUNCTION OF LOW TEMP. COOLING:

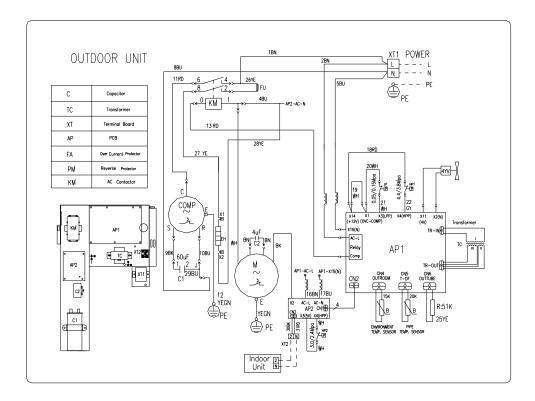

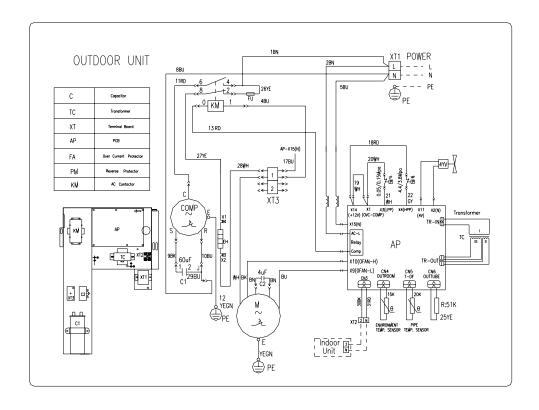


6, ASGE-36A

WITH FUNCTION OF LOW TEMP. COOLING:

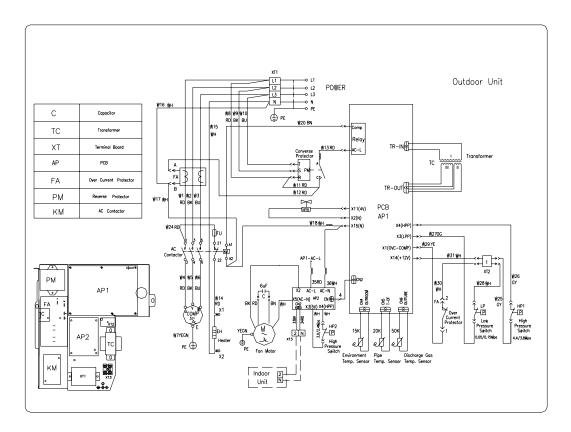


WITHOUT FUNCTION OF LOW TEMP. COOLING:

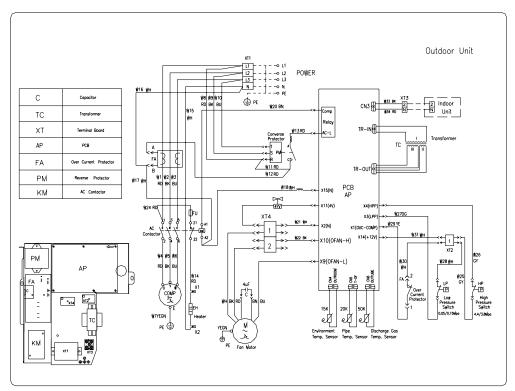


7. ASGE-42A

WITH FUNCTION OF LOW TEMP. COOLING:

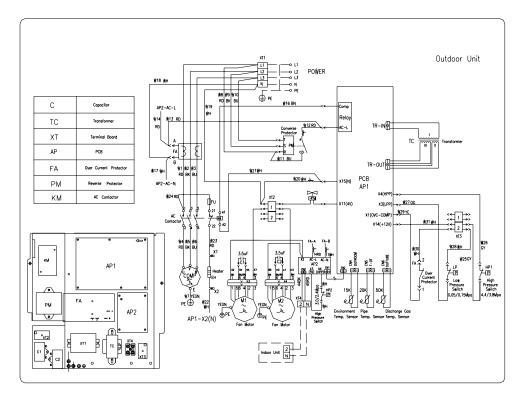


WITHOUT FUNCTION OF LOW TEMP. COOLING:

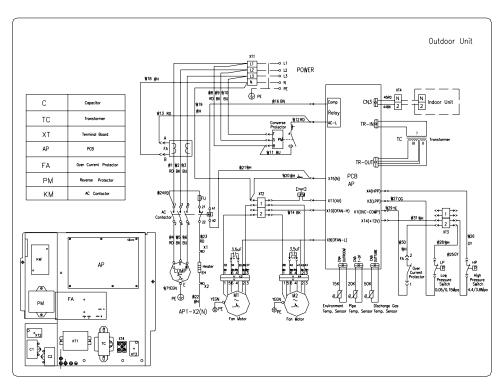


8. ASGE-48A

WITH FUNCTION OF LOW TEMP. COOLING:

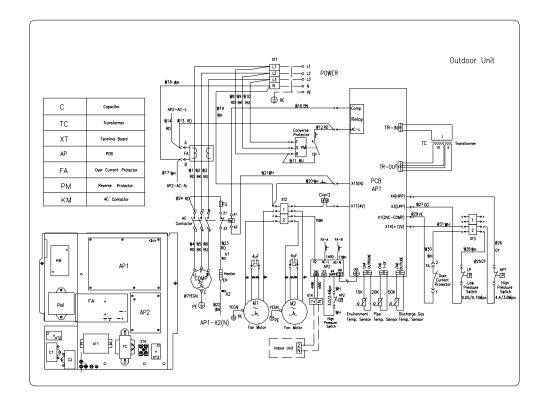


WITHOUT FUNCTION OF LOW TEMP. COOLING:

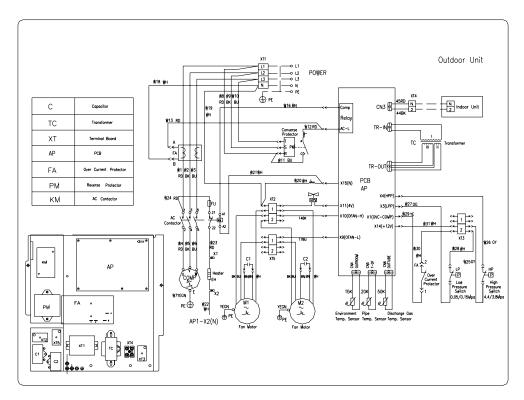

3.2 Wiring Diagram-Indoor units


3.2.1 Duct Type

Model: ASDU-09A; ASDU-12A; ASDU-18A; ASDU-24A; ASDU-36A; ASDU-42A; ASDU-48A

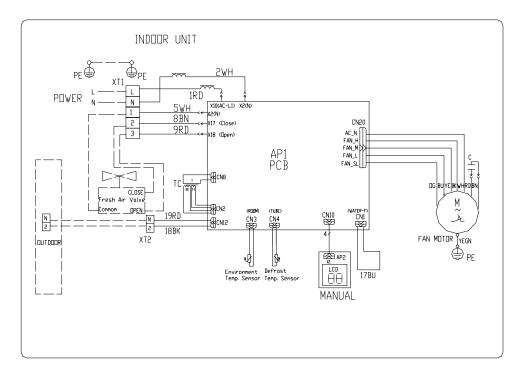


3.2.2 Ceiling Type

Model: ASCU-12A; ASCU-18A; ASCU-24A; ASCU-36A; ASCU-42A; ASCU-48A

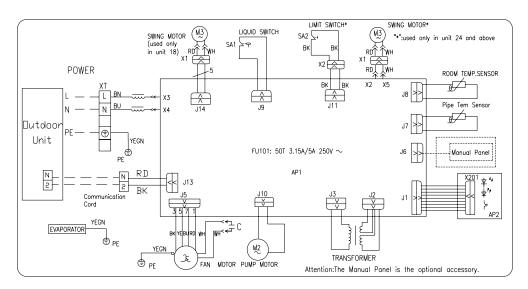

3.2.3 Cassettle Type

Model: ASFU-09A; ASFU-12A; ASFU-18A; ASFU-24A; ASFU-36A ASFU-42A; ASFU-48A;

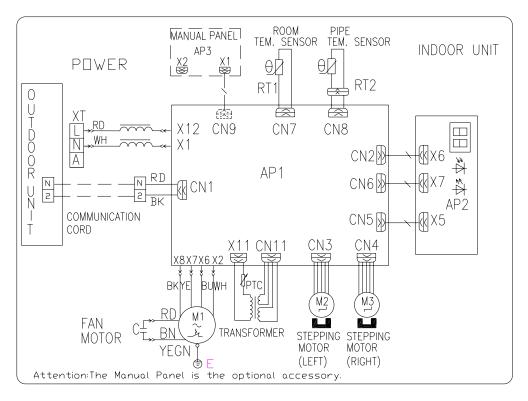

4 DISASSEMBLY AND ASSEMBLY PROCEDURE OF MAIN PARTS_


4.1 Outdoor Unit

$ASGE\text{-}09A \sim ASGE\text{-}24A$

Disassembly and Assembly of external casing		
Remark: Make sure that power supply is cut off before disassembling the external casing.		
Step	Illustration	Handling Instruction
1. Disassembly of coping		Disassemble the fixing screw surrounding the coping with screwdriver Remove coping from the unit.
2. Disassembly of screen		 ◆Loose fixing screw surronding the screen with screwdriver. ◆Remove screen from the unit.
3. Disassembly of panel grating		Disassemble the screws of the fixing panel grating with screwdriver. Disassemble and remove the panel grating from the panel (external casing).
4. Disassembly of panel (external casing)		●Disassemble the fixing screw surrounding the panel (external casing); ●Remove the panel (external casing) from the unit ●Some types (24k and above) require disassembling the front panel outside the external casing first before

	removing it.
5. Disassembly of right (back) panel	•Disassemble the screws surrounding the right (back) panel with screwdriver. •Remove the right (back) panel from the unit.
6. Assembly of new right (back) panel	●Put new right (back) panel into right position. ●Screw down the surrounding fixing screw with screwdriver.
7. Assembly of new panel (external casing)	●Put new panel (external casing) into right position on the unit; ●Screw down the surrounding fixing screw with screwdriver. ●Some types (24k and above) need to be equipped with front panel outside the external casing.
8. Assembly of new panel grating	Put new panel grating into right position on the unit Screw down the surrounding fixing screw with screwdriver.
9. Assembly of new screen	 •Put new screen into the right position on the unit. •Screw down the surrounding fixing screw with screwdriver.

10. Assembly of new coping

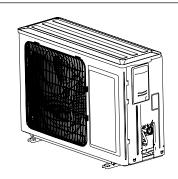

- •Put the new coping into the right position on the unit.
- •Screw down the surrounding fixing screw with screwdriver.

Disassembly and Assembly of Compressor

Remark: Make sure there isn't any refrigerant in pipe system and the power supply is cut off before removal of the compressor..


Step	Illustration	Handling Instruction
Disassembly of compressor wires		 Loose the fixing screw for the power supply wire with screwdriver. Pull down the power supply wire. Attention: During removal of the power supply wire, mark wire color with the corresponding joint number in case of wrong connection.
2. Disassembly of fixing nuts on compressor		Disassemble the fixing nut on the compressor with wrench.
3. Disassembly of suction and exhaustion pipe		●Heat the suction and exhaustion pipe with gas welding before removing compressor. ●Provide nitrogen protection during gas welding and the nitrogen pressure should be 0.5±0.1kgf/cm² (relative pressure). ●Please pay attention to heating in case that surrounding materials should be burnt by high temperature.

4. Removal of compressor	•Remove compressor from underpan.
5. Assembly of new compressor on the underpan	Position accurately the new compressor on the unit. Screw down fixing nut for compressor with wrench. Do not up-side-down compressor during assembly.
6. Connection of suction and exhaustion pipe of compressor with pipe line system	●Heat suction and exhaustion pipe with gas welding before removing compressor. ●rovide nitrogen protection during gas welding and the nitrogen pressure should be 0.5±0.1kgf/cm² (relative pressure). ●Please pay attention to heating in case that surrounding materials should be burnt by high temperature.
7. Correct connection of wires for power supply of compressor	 Install power supply wire onto fixing in the order of disassembly. Screw down fixing screw for power supply wire with screwdriver.

8. Vacuum pumping with fluorin injection mouth	Pump vacuum through fluorin injection mouth.
9. Refill of cooling medium through fluorin injection mouth	Refill cooling medium into system through fluorin injection mouth Volume of refilling should be in accordance with the requirement on the unit nameplate.

Disassembly and Assembly o	f 4-way valve	
-	isn't any refrigerant in pipe system and the p	ower supply is cut off before
Step Step	Illustration	Handling Instruction
Disassembly of solenoid valve		Out off power supply and reclaim cooling medium properly. Disassemble solenoid valve with wrench.
2. Removal of electromagnetic valve		•Take and remove solenoid valve from 4-way valve.

3. Disassembly of 4-way valve	 Heat connection pipes for 4 pipes of 4-way valve with gas welding before removal of 4-way valve. Record the direction of the 4-way valve and installation postition of each pipe before welding away 4-way valve.
4. Removal of 4-way valve	•Remove the old 4-way valve from the pipe line.
5. Assembly of new 4-way valve	 ◆Position accurately the new 4-way valve. ◆Connect new 4-way valve with pipe line. ◆Wrap the valve with wet cloth when welding 4-way valve in case sliding block inside the valve should be burnt and water flow into the pipe line. ◆Welding with nitrogen and the nitrogen pressure shall be 0.5±0.1kgf/c m²(relative pressure).
6. Assembly of solenoid valve	•Assemble solenoid valve onto the new 4-way valve in order of disassembly.
7. Examination of System and cooling medium	•Pump vacuum and fill cooling medium if the

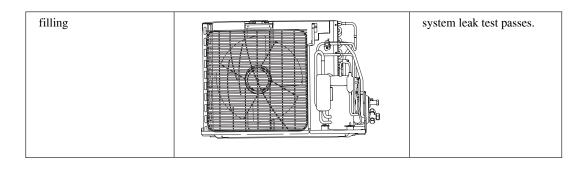

Disassembly and Assembly of capillary

Remark: Make sure there isn't any refrigerant in pipe system and the power supply is cut off before removal of the capillary.

removal of the capillary.		
Step	Illustration	Handling Instruction
1. Disassembly of capillary		Weld two welding points connecting capillary with other pipe lines. Remove capillary.
2. Assembly of new capillary		Assemble new capillary. Weld the points connected with other pipe lines. Re-examine the leak hunting of system. Pump vacuum and fill the cooling medium.

Disassembly and Assembly of Vapour Liquid Separator

Remark: Make sure there isn't any refrigerant in pipe system and the power supply is cut off before removal of the vapor liquid separator.

(Needless for types under 24kBtu/h)

Step	Illustration	Handling Instruction
Disassembly of Fixing screw for liquid reservoir		Disassemble two fixing screws for reservoir pothook with screwdriver.
2. Disassembly of Vapor liquid separator		 Weld open two pipes connecting vapor liquid separator with pipe line with gas welding. Remove vapor liquid separator.
3. Assembly of New vapor liquid separator		●Position accurately new vapor liquid separator. ●Connect new vapor liquid separator with pipe line using gas welding. ●Screw down two fixing screws again at the pothook.

Remark: Make sure power supply of the unit is cut down before removal of axial flow fan and motor.		
Step	Illustration	Handling Instruction
1. Disassembly of outer parts		Handling Instruction
2. Disassembly of axial flow fan		•Disassemble outer parts of unit coping, panel(external casing), screen,etc. according to the discription above in order to disassemble axial flow fan and motor conveniently.
3. Disassembly of fan motor		 Hold the fans without movement. Disassemle fixing nuts for the fans with wrench. Take down and remove fans from motor.
4. Assembly of new motor		Open the cover of electical parts box. Loose the connecting plug for motor wires and pull out the wires through the hole. Disassemble the fixing screw on the motor support and remove the motor.

5. Assembly of new axial flow fan	Position accurately new motor on the motor support. Screw down the fixing screw to fasten the motor. Connect the motor wire through the hole with the corresponding position inside the electrical parts box and fasten the connecting plug. Close the cover and screw down the screw.
6. Assembly of outer parts	Position reliably the new fan on the motor axis. Hold the fans without movement. Screw down fixing screws for fan with wrench.

Disassembly and Assembly of electrical parts box

Remark: Make sure power supply of the unit is cut down before removal of electrical parts box or electrical parts box modules.

electrical parts box modules.		
Step	Illustration	Handling Instruction
Disassembly of cover of electrical parts box		 ◆Cut off the power supply. ◆Disassemble fixing screw between electrical parts box cover and the box with screwdriver ◆Take away and remove the cover from electrical parts box.
2. Pull away the power supply wires for components like motor, etc.		Disassemble electrical components, like mainboard inside the electrical parts box connected with outer componets (power-loaded wires for componets like compressor, motor). Attention: Record right position for wire connection during disassembly of connecting wires.
3. Disaasembly of electrical parts box modules		•Disassemble fixing screws between electrical parts box and middle clapbord, motor support as well as right panel with screwdriver.
4. Removal of electrical parts box modules		●Hold the bottom of electrical parts box and lift it upward to get rid of the clip on the middle clapboard. ●Remove electrical parts box modules.

5. Assembly of new electrical parts box modules	Position accurately the new electrical parts box. Re-fasten the electrical parts box modules and screw down with screwdriver.
6. Connection of power supply wires of each component	Re-connect the connection wires of each components with right position according to the order of disassembly.
7. Assembly of electrical parts box	Assembly accurately the electrical parts box. Re-fasten and screw down the surrounding fixing screw with screwdriver.

$ASGE\text{-}42A \sim ASGE\text{-}48A$

Disassembly and Assembly of external casing		
Remark: Make sure power supply of the unit is cut down before removal of external casing.		
Step	Illustration	Handling Instruction
1. Disassembly of coping		Disassemble fixing screws surrounding the coping with screwdriver. Remove coping from the unit.
2. Disassembly of screen		Loose the fixing screws surrounding the screen with screwdriver. Remove screen from the unit.
2. Disassembly of front panel		 Loose the fixing screws surrounding the front panel with screwdriver. Remove the front panel from the unit.
3. Disassembly of panel grating		Loose the fixing screws for the panel grating with screwdriver. Take away and remove panel grating fromthe external casing.

4. Disassembly of external casing	Loose the fixing screws surrounding external casing with screwdriver. Remove the external casing from the unit.
5. Disassembly of back panel	 Loose the fixing screws surrounding the back panel with screwdriver. Remove the back panel from the unit.
6. Assembly of new back panel	Position accurately the new back panel. Screw down the surrouding fixing screws with screwdriver.
7. Assembly of new external casing	Position accurately the new panel on the unit. Screw down the surrouding fixing screws with screwdriver.

8. Assembly of new panel grating	Position accurately the new panel grating on the unit panel. Screw down the surrouding fixing screws with screwdriver.
9. Assembly of new front panel	Position accurately the new front panel. Screw down the surrouding fixing screws with screwdriver.
10. Assembly of new screen	Position accurately the new screen. Screw down the surrouding fixing screws with screwdriver.
11. Assembly of new coping	Position accurately the new coping. Screw down the surrouding fixing screws with screwdriver.

Disassembly and Assembly of Compressor

Remark: Make sure there isn't any refrigerant in pipe system and the power supply is cut off before removal of the compressor..

removal of the compressor		
Step	Illustration	Handling Instruction
1. Disassembly of power supply wire		Loose the fixing screws for power supply wire. Pull away the power supply wire. Attention: During removal of the power supply wire, mark wire color with the corresponding joint number in case of wrong connection.
2. Disassembly of fixing nuts on compressor		•Disassemble fixing nuts on compressor with wrench.
3. Disassembly of suction and exhaustion pipe		●Heat the suction and exhaustion pipe with gas welding before removing compressor. ●Provide nitrogen protection during gas welding and the nitrogen pressure should be 0.5±0.1kgf/cm² (relative pressure). ●Please pay attention to heating in case that surrounding materials should be burnt by high temperature.

4. Removal of compressor	•Remove compressor from underpan.
5. Assembly of new compressor onto underpan	Position accurately the new compressor. Screw down fixing nuts for compressor with wrench. Do not up-side-down compressor during assembly.
6. Connection of suction and exhaustion pipe with pipeline system	

7. Connection power supply wires of compressor	Assemble the power supply wires onto right position according to the order of disassembly. Screw down the fixing screw for the power supply wires with screwdriver.
8. Vacuum pumping and cooling medium filling through valve	Pump the system vacuum through valve before refill cooling medium. Volume of refilling should be in accordance with the requirement on the unit nameplate.

Disassembly and Assembly of 4-way valve

Remark: Make sure there isn't any refrigerant in pipe system and the power supply is cut off before removal of 4-way valve.

removal of 4-way valve. Step	Illustration	Handling Instruction
Disassembly of solenoid valve		Out off power supply and reclaim cooling medium properly. Disassemble the assembling screw for solenoid valve. Disassemble solenoid valve with wrench.
3. Disassembly of 4-way valve		Heat connection pipes for 4 pipes of 4-way valve with gas welding before removal of 4-way valve. Record the direction of the 4-way valve and installation postition of each pipe before welding away 4-way valve.
4. Removal of 4-way valve		•Remove the old 4-way valve from the pipe line.

5. Assembly of New 4-way valve	●Position accurately the new 4-way valve. ●Connect new 4-way valve with pipe line. ●Wrap the valve with wet cloth when welding 4-way valve in case sliding block inside the valve should be burnt and water flow into the pipe line. ●Welding with nitrogen and the nitrogen pressure shall be 0.5±0.1kgf/c m²(relative pressure).
6. Assembly of solenoid valve	•Assemble solenoid valve onto the new 4-way valve in order of disassembly.
7. Examination of System and cooling medium filling	Pump vacuum and fill cooling medium if the system leak test passes.

Disassembly and Assembly of capillary

Remark: Make sure there isn't any refrigerant in pipe system and the power supply is cut off before removal of the capillary.


Step	Illustration	Handling Instruction
1. Disassembly of Capillary		 Weld two welding points connecting capillary with other pipe lines. Remove capillary.
2. Assembly of New capillary		Assemble new capillary. Weld the points connected with other pipe lines. Re-conduct the system leak test. Pump vacuum and fill the cooling medium.

Disassembly and Assembly of Vapour Liquid Separator

Remark: Make sure there isn't any refrigerant in pipe system and the power supply is cut off before removal of the vapor liquid separator.

Step	Illustration	Handling Instruction
Disassembly of retaining clips for liquid reservoir		Disassemble the fixing screws on the pothooks and retaining clips of the reservoir with screwdriver.
2. Removal of retaining clips for liquid reservoir		•Remove the retaining clips for liquid reservoir.
3. Disassembly of vapor liquid separator		Weld open two pipes connecting vapor liquid separator with pipe line with gas welding. Remove vapor liquid separator.
4. Assembly of new vapor liquid separator		Position accurately new vapor liquid separator. Connect new vapor liquid separator with pipe line using gas welding.

5. Assembly of retaining clips for liquid reservoir

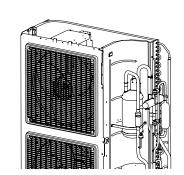

•Re-assemble the retaining clips for liquid reservoir and screw down the fixing screw

Disassembly and Assembly of Axial Flow Fan and motor		
Remark: Make sure power supply of the unit is cut down before removal of axial flow fan and motor.		
Step	Illustration	Handling Instruction
Disassembly of outer parts		•Disassemble outer parts of unit coping, panel(external casing), screen,etc. according to the discription above in order to disassemble axial flow fan and motor conveniently.
2. Disassembly of axial flow fan		 Hold the fans without movement. Disassemle fixing nuts for the fans with wrench. Take down and remove fans from motor.
3. Disassembly of fan motor		●Loose the connecting plug for motor wires and pull out the wires through the hole. ●Disassemble fixing screws for motor support and remove the motor support. ●Disassemble the fixing screws for motor on the motor support and remove the motor.
4. Assembly of new motor		Position accurately the new motor on the motor support. Screw down the fixing screw for motor. Assemble the whole motor support onto the underpan using fixing screws. Connect the motor wire through the hole with the corresponding position

	inside the electrical parts box and fasten the connecting plug.
5. Assembly of new axial flow fan	Position reliably the new fan on the motor axis. Hold the fans without movement. Screw down fixing screws for fan with wrench.
6. Assembly of outer parts	•Re-assemble the outer parts of unit coping, panel (external casing) and screen, etc. according to the discription before.

Disassembly and Assembly of electrical parts box

Remark: Make sure power supply of the unit is cut down before removal of electrical parts box or electrical parts box modules.

Step	Illustration	Handling Instruction
1. Pull away the power supply wires for components like motor, etc.		•Disassemble electrical components, like mainboard inside the electrical parts box connected with outer componets (power-loaded wires for componets like compressor, motor). Attention: Record right position for wire connection during disassembly of connecting wires.
2. Disaasembly of electrical parts box modules		•Disassemble fixing screws between electrical parts box and middle clapbord, motor support as well as right panel with screwdriver.
3. Removal of electrical parts box modules		•Remove electrical parts box modules.

4. Assembly of new electrical parts box modules	Position accurately the new electrical parts box. Re-fasten the electrical parts box modules and screw down with screwdriver.
5. Connection of power supply wires of each component	Re-connect the connection wires of each components with right position according to the order of disassembly.

4.2 Indoor Unit

4.2.1 Duct Type

ASDU-09A, ASDU-12A, ASDU-18A Disassembly procedure

Disassembly of External Casing of Group

Remark: Make sure the power supply is cut off before removal and protect all the parts during disassembly, especially the screws that should be collected together, in case of missing them.


screws that should be collected together, in case of missing them.				
Step	Illustration	Handling Instruction		
Disassembly of filter screen for back return air		•Pull two filter screens for back return air (As shown in the graph, the arrow represents filter screens for back return air)		
2. Disassembly of side panel for back return air		••Disassemble the fastening screws for back return air and take away the back return air side panel (as shown in the graph).		
3. Disassembly of cover plate for return air		•Disassemble the fastening screws for return air cover plates and take away the return air cover plate (As shown in the graph, the arrow represents cover plates for return air)		
4. Disassembly of cover plate		•Disassemble the fastening screws for cover plate and take away the cover plate (As shown in the graph, the arrow represents cover plates)		

Disassembly of water-containing plate Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly. Step Illustration Handling Instruction • Disassemble the fastening screws for water-containing plate and take away the water-containing plate (As shown in the graph, the arrow represents water-containing plate)

Disassembly of fans and motors

Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly, especially the fastening screws for fans.



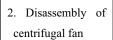



 Disassemble fastening screws for fans with inner hexagonal. Remove the centrifugal fan. (As is shown in Grapgh 7, the line without an arrow represents inner hexagonal and the position of fastening screws under its influence, and arrow represents centrifugal fan.)

3. Disassembly of motor support module



 Disassemble the fastening screws for motor support and take away the motor support modules (As shown in the graph, the arrow represents motor support)

4. Disassembly of motor



•Disassemble connecting wires for motor inside the electrical parts box and remove the motor.

Disassembly of evaporator

Remark: Make sure the power supply is cut off and protect the copper tube and aluminum fin. If the time for disassembly shall be long, put the copper tube under pressurized condition.

be long, put the copper tube under pressurized condition.		
Step	Illustration	Handling Instruction
1. Disassembly of right panel		•Disassemle the fastening screws on the right panel and remove right panel(as is shown in the graph, arrow represents right panel).
2. Disassembly of left panel		•Disassemle the fastening screws on the left panel and remove left panel(as is shown in the graph, arrow represents left panel).
3. Disassembly of evaporator		●Disassemle the fastening screws on the evaporator. (As is shown in the graph, in the circle there are two fastening screws and in the direction of arrow, two more.) ●Remove the evaporator.
4. Disassembly of evaporator support		•Disassemble the self-tapping screw on the evaporator support and remove the evaporator support.(As is shown in the graph, in the circle there are two fastening screws and in the similar position in the direction of arrow, two more.)

ASDU-24A, ASDU-36A, ASDU-42A, ASDU-48A Disassembly procedure

Disassembly of filter screen for return air

Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly. Do not put filter screen near the high temperature heat source.



Disassembly of electrical parts box cover panel and electrical parts box

Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly, especially the electrical components. Do not dampen or hit them.

Step	Illustration	Handling Instruction
Disassembly of electrical parts box cover panel		Disassemble the screw according to the position shown in the circle and the box and remove the electrical parts box in the direction of the arrow.
2. Disassembly of electrical parts box		•Disassemble the fastening screw and remove the electrical parts box. (As is shown in the graph, there are 2 fastening screws in the circle and the screws in the direction of arrow shall be disassembled too.)

Disassembly of drainage	pump	
Remark: Make sure the p	ower supply is cut off before disassembling and protect all the	e parts during disassembly.
Step	Illustration	Handling Instruction
Disassembly of fastening screws on seal-plates of inner panels and the drainage pipe	o o o	•Disassemble the fastening screws on seal-plates of inner panels and the pump drainage pipe. Remove the seal-plates.(As is shown in the graph, the circle represents fastening screws on seal-plates and box the fastening screws on drainage pipe. All the 8 screws shall be disassembled.)
2. Disassembly of fastening screws on the drainage pump		•Disassemble the fastening screws on the dreainage pump. (As is shown in the graph, the circle represents the position of screws.)
3. Removal of condensed water drainage pump		•Removed condensed water drainage pump is shown in the graph.

Disassembly of water-	Disassembly of water-containing plate		
Remark: Make sure th	e power supply is cut off before disassembling and protect all t	he parts during disassembly.	
Step	Illustration	Handling Instruction	
Disassembly of cover plate		•Disassemble the fastening screws on the cover plate and remove the cover plate. (As is shown in the graph, circle represents 6 fastening screws under the cover plate and the box represents two fastening screws on water-containing plate symmetrically arranged both on left and right.)	
2. Disassembly of water-containing plate		•Disassemble the fastening screws on the water-containing plate, pull upward and remove the water-containing plate. Disassembled water-containing plate is shown in the graph.	

Disassembly of fan and	d motor		
Remark: Make sure the	Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly.		
Step	Illustration	Handling Instruction	
1. Disassembly of fan		Disassemble the fixing screws on the fan components. (As is shown in Graph 10, circle represents 6 screws.)	
2. Disassembly of motor		•Disassemble the fastening screws on the fan and motor. Remove the fan. (As is shown in Graph 11, box represents screws.)	

Disassembly of evaporator

Remark: Make sure the power supply is cut off and protect the copper tube and aluminum fin. If the time for disassembly shall be long, put the copper tube under pressurized condition.

Step	Illustration	Handling Instruction
Disassembly of fixing screws on the side panels of evaporator		•Disassemble the fastening screw connecting left and right side panels on the evaporator and the upper cover plate. (As is shown in the arrow's direction in Graph 12.)
2. Disassemble fastening screws connecting evaporator valve seal-plate and joint flange	O.POSP	•Disassemble the fastening screws on the valve seal-plate and remove the valve seal-plate. Disassemble the fastening screws on the evaporator's joint flange. (As is shown in the graph, box represents fastening screws on seal-plates while circle the fastening screws on joing flange.

MAINTENANCE

•Remove the evaporator. Removed evaporator is shown in the graph.

Disassembly of External casing cabinet				
Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly.				
Step	Illustration	Handling Instruction		
Disassembly of fastening screws between cover plates		•Disassemble the fastening screws between right and left panels and upper cover plates. Disassemble right and left panels. (As is shown in the graph, circle represents screws.)		
2. Disassembly of external casing cabinet		Disassembled external casing cabinet is shown in the graph.		

4.2.2 Ceiling Type

Disassembly of panel grating module

Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly. Do not put filter screen near the high temperature heat source.

Step	Illustration	Handling Instruction
Disassembly of panel grating module		•Move down the clip of the panel grating modules until the panel grating is open. (As is shown in the graph, arrow represents the position of bottons. There are two clips for each grating.)

Disassembly of right and left finishing plates

Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly. Do not scratch the outer parts.

Step	Illustration	Handling Instruction
		•Disassemble the screws as shown in the graph with screwdriver and then push
Disassembly of right and left finishing plates		upward to remove the right and left finishing plates.(As is shown in the graph, arrow represents the position of screws.)

Disassembly of panel parts

Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly. Do not scratch the outer parts.

Step	Illustration	Handling Instruction
------	--------------	----------------------

Disassembly of panel parts



•Disassemble the 8 screws shown by the arrow in the graph with screwdriver (two on both right and left and 4 in the front) and then remove the panel parts.


Disassembly of electrical parts box components


Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly, especially the

components inside the box in case of water and hit. Handling Step Illustration Instruction Disassemble screws as shown by the arrow in the graph on left and 1. Disassembly of remove the electrical parts box electrical parts box cover panel cover panel. Disassemble screws as shown by the arrow in the graph on left (two both screws on 2. Disassembly of sides)and remove electrical parts box the electrical parts modules. box modules and the wires.

Disassembly of air deflecting plate modules

Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly, especially the joints of the air deflecting plate.

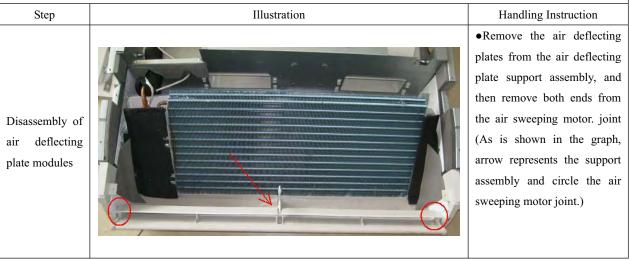

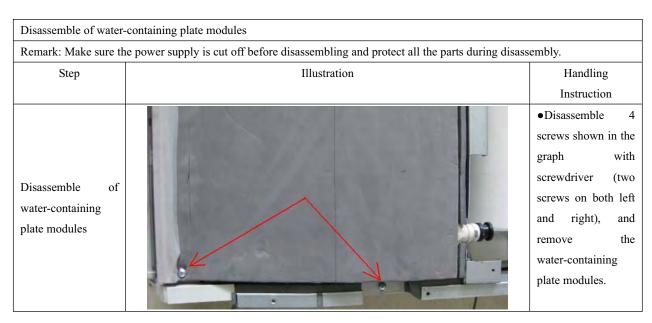

Disassembly of fixing plate modules for air sweeping fans

Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly, especially the connection part of air sweeping fans.

connection part of		T
Step	Illustration	Handling Instruction
		•Disassemble the
		screws on both ends of
Disassambly of		fixing plate modules
Disassembly of		for air sweeping fans (1
fixing plate modules for air		for both sides) and
		remove the fixing plate
sweeping fans		modules for air
		sweeping fans from the
		air deflecting support.

Disassembly of evaporator components

Remark: Make sure the power supply is cut off and protect the copper tube and aluminum fin. If the time for disassembly shall be long, put the copper tube under pressurized condition.

Step	Illustration	Handling Instruction
Disassembly of evaporator components		•Disassemble the screws as shown by the arrow in the graph with screwdriver. (There are 4 screws on left and right of the evaporator and 2 on evaporator outlet press plate modules)

Disassembly of fixing	plate modules for air sweeping fans		
Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly.			
Step	Illustration	Handling Instruction	
Disassembly of fixing plate modules for air sweeping fans		•Disassemble the screws shown in the graph with screwdriver.	

Disassembly of right and left polystyrene foam plates modules

Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly. Do not heat or hit polystyrene foam modules.

Step	Illustration	Handling Instruction
Disassembly of right and left polystyrene foam plates modules		•Remove the right and left polystyrene foam plates modules in the direction given by the graph.

Disassembly of fan and motor components

Remark: Make sure the power supply is cut off before disassembling and protect all the parts during disassembly, especially the fastening screws for fans.

Step	Illustration	Handling Instruction
		•Press the buckle at the
		joints of front and back
		scroll cases with hands
		and pull upward to
		remove the front scroll
1. Disassembly of		case. Then remove the
front and back		screws on the back scroll
scroll cases		case. Lift the buckle of
		back scroll case with
		hands and remove it.(As
		is shown in the graph,
		circle represents 2
		screws on left and right.)
		•Disassemble the fixing
		screws of fan wheel
		with inner hexagonal
2. Disassembly of		and remove the wheel.
fans		The inner hexagonal
Tuits		and its direction of
	Section (1) A Contract (1) A Contrac	effect are shown by the
		arrow in the graph.
		•Disassemble 4 screws
		on the bearing fixing
3. Disassembly of	Commence of the second of the	plates with screwdriver.
bearing fixing	(1) 10 mm (1) m	(As shown in the box in
plates		the graph)

MAINTENANCE


4. Disassembly of motor



•Disassemble the bolt shown in the graph with screwdriver and remove the motor press plate and retaining clio for motor.

Remark: Make sure the power supply is cut off Step	before disassembling and protect all the parts during disassembling and disassemblin	embly. Handling Instruction
Step	Illustration	
		Instruction
Disassembly of right and left fixing plates		•Disassemble the bolts on right and left fixing plates with tools. (As is shown by the arrow in the graph.)

4.2.3 Cassette Type

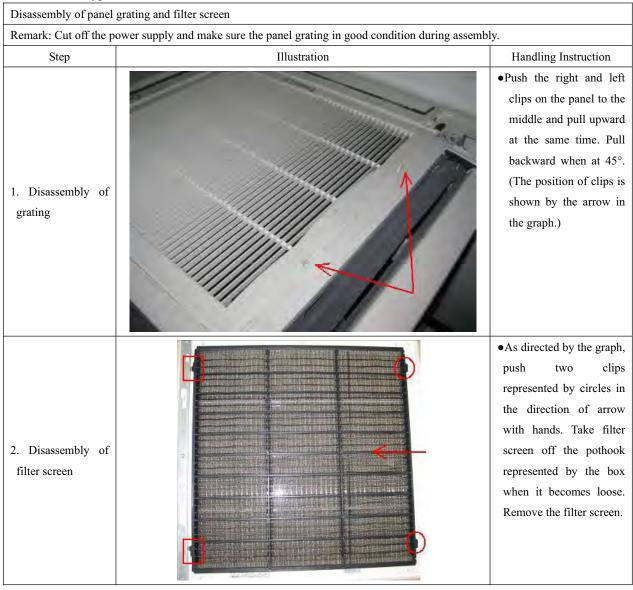

MAINTENANCE

Disassembly of panels		
Remark: Cut off the po	ower supply and make sure the panels and angular shell in good condition	l.
Step	Illustration	Handling Instruction
1. Disassembly of angular shell		●Pull angular shell outside with hands and remove it.
2. Disassembly of screws		Disassemble the screws with screwdriver and loose the fixing clip on the panels. (The position of screws is represented by the arrow.) There are 4 fixing clips on panel's four corners. When loosed completely, panel shall be removed by pulling upward.

Disassembly of water-containing plate

Remark: Cut off the power supply and make sure the power supply wires, signal wires and water-containing plate in good condition.


Illustration Handling Instruction Step •Disassemble the screws on the electical parts box cover panel and flow deflectin ring. Remove the electrical parts box 1. Disassembly of and the power supply wires and cover panel of wires inside the signal parts electrical electrical parts box connecting box and flow with the electrical componets deflecting ring under the water-containing plate. •Disassemble the screws on the four corners and pull outside the water-containing plate.(As is shown in the graph, arrow represents the 2. Disassembly of water-containing plate. The water-containing postition of screws are shown in the box .) plate

Disassembly of electrical parts box Remark: Cut off the power supply a


Remark: Cut off the power supply and make sure the power supply wires, signal wires and electrical parts box in good condition.

C,	TII'	TT 11'
Step	Illustration	Handling
		Instruction
	A B B	•Disassemble 4
		assembling screws
		and pull upward to
Disassembly of	Oo Oo	remove the
		electrical parts
electrical parts box		box.

Disassembly of fan		
Remark: Cut off the power s	supply and make sure the fan is in good condition and shape.	
Step	Illustration	Handling
		Instruction
Disassembly of fan		•Disassemble the nuts with wrench and pull upper side to remove the fan (The position of washer nuts is shown by the arrow in the graph.).

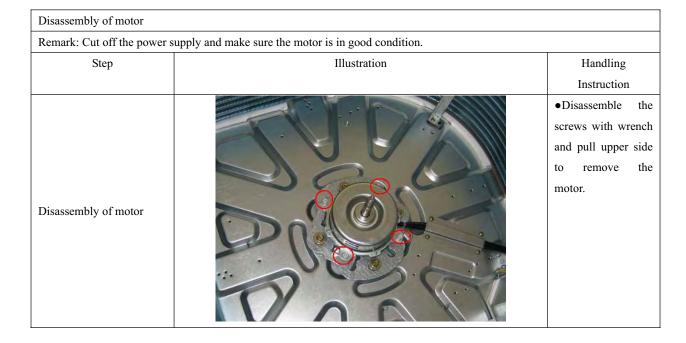

Disassembly of air-de	flecting motor	
Remark: Make sure	the air-deflecting motor in good condition and the power supply is cut off.	
Step	Illustration	Handling Instruction
Disassembly air-deflecting motor	of	Disassemble two fitting screws on the air-deflecting motor and remove the motor.

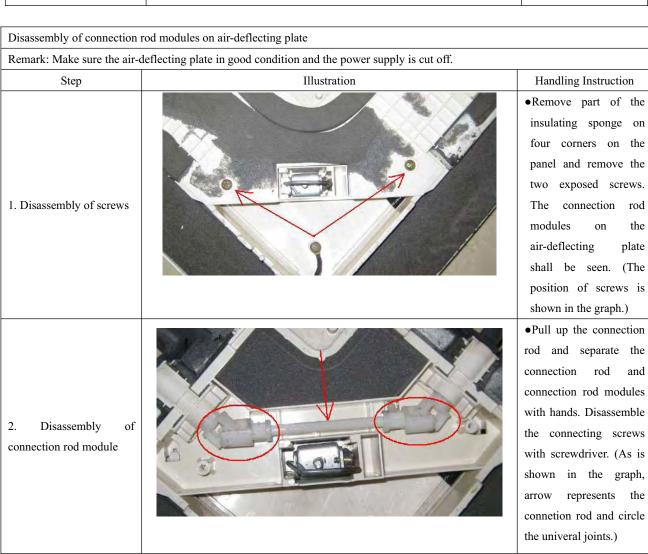


5 EXPLODED VIEWS AND PART LIST

5.1 Outdoor Unit

1) Model: ASGE-09A; ASGE-12A; ASGE-18A;

Exploded View

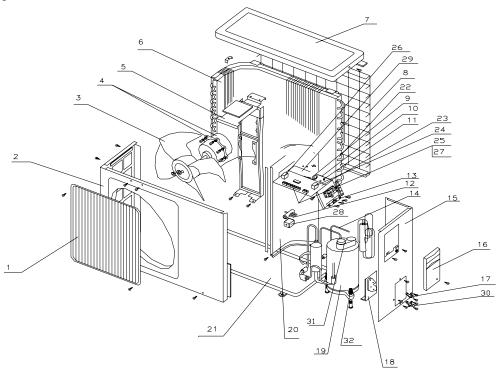

No.	Name of part	Part code	Quantity
1	panel grill	22413431	1
2	panel	01533012	1
		10333413 ①③	
3	axial flow fan(propeller fan)	10333414 ②	1
		15013067 ①	
4	Motor	15013071	1
		15013072 ④	
		01703068 ①	
5	motor support	01703020 ②	1
		01703391 ③	
		01125241 ①	
6	Condenser Assy	01125244 ②	1
		01125252 ③	
7	Top Cover	01253443	1
		01473014 ①②	1
8	protection grill nets	01473023 ③	1
		33010743 ①②	
9	Capacitor	33000039 ③	1
	Electric Box 01395506 01395542 ④ 01395504 01395543 ④	01395506	$\overline{\Omega}$
10		01395504	
10		01395543 ④	2 1
		01395505	
		01395549 ④	3
11	Isolation Washer C	70410523	1
12	4 V-1 C-:1	430004022 ①	1
12	4-way Valve Coil	430004032 ②③	1
13	Wire Clamp	71010103	1
		04635715 ①	
14	discharge pipe	04635713 ②	1
14		04635714 ③	
	pressure switch	4602001544 ④	1
15	Right Side Plate	0130200401	1
16	Handle	26233433	1
17	Liquid Volvo	07100003 ①②	1
17	Liquid Valve	07100004 ③	
18	Valve Support	01713041	1
	Compressor ASG108CV-B7AT	00120145 ①	
19	Compressor ASL145SV-C7LU	00120139 ②	1
	Compressor ASH232SV-C8LU	00103702 ③	
20	inner cover	01233381	1


MAINTENANCE

21	chassis	01213429	1
22	Temp sensor	3900012121	1
23	Main PCB WZ4C352	3022403301	1
23	Main PCB ZS401D	30224211 ④	1
24	Transformer 57X25D	4311024001	1
25	Terminal Board	420111531	1
26	AC Contactor CJX9B-25S/D	44010245	1
27	Terminal Board 2-8	42011103	1
28	Accessory of 4-way Valve Coil	430004002	1
29	Consoitor of motor	33010026 ①	1
29	Capacitor of motor	33010027 ②③	1
30	Gas Valve	07100005 ①	1
30	Uas vaive	07100006 ②③	1

Note:

- ① only is part of ASGE-09A Model.
- ② only is part of ASGE-12A Model.
- ③ only is part of ASGE-18A Model.
- $\textcircled{4}\ \ \,$ only is part of $\ \,$ ASGE-09A $\ \,$ ASGE-12A and ASGE-18A with low ambient kit.

2) Model: ASGE-24A; Exploded Views

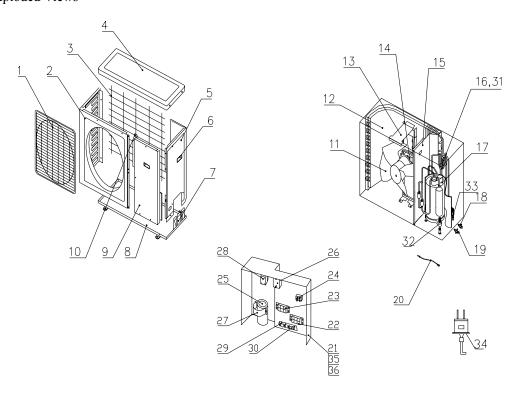


List			
No.	Name of part	Part code	Quantity
1	Front Panel Grill	22414102	1
2	Front Plate	01433017P	1
3	Protection Grill	01473028	1
4	Top Cover	01255262	1
5	Back Side Plate	01305036	1
6	Handle	26235253	2
7	Valve Support	01715001	1
8	Metal Base	01205201	1
9	Front Side Plate	01303023	1
10	Protection Grill Gasket	12123093	1
11	Axial Flow Fan	10335253	1
12	Condenser Assy	01125262	1
13	Motor Support	01705103	1
	Motor LW92H	150154512	
14	Motor LW92A	15015451①	1
15	Isolation Plate	01233024	1
16	4-way Valve	04145220	1
17	Compressor ATH290CV-C9LU	00103709	1
18	Gas Valve	07103030	1
19	Liquid Valve	07130209	1
20	Temperature Sensor 20K	3900012121	1
	Temperature Sensor15K	390002064	1
		01395524	
21	Electric Box	01395561①	1
22	Terminal Board	420111451	1
23	Terminal Board	42011103	3
24	PTC Heater	34060008	0
25	Capacitor CBB61 4μF/500V	33010013	1
26	Capacitor CBB65 60uF/450V	33000039	1
27	Capacitor Clamp	02141375	1
28	AC Contactor CJX9B-25S/01	44010222	1
29	Isolation WasherC	70410523	1
30	Wire Clamp	71010102	1
31	4-way Valve Coil	430004002	1
32	Compressor Gasket		0
	1	460200061	
34	pressure switch	46020007	1
		4602001544 ①	
	Transformer 57X25D	43110240	1
	Main PCB WZ4C352	3022403301	1
35	Main PCB ZS401D	30224211 ①	1
		2 - 2 - 2 - 1 - 2	•


Note:

1 only is part of ASGE-24A with low ambient kit.

3) Model: ASGE-36A Exploded Views

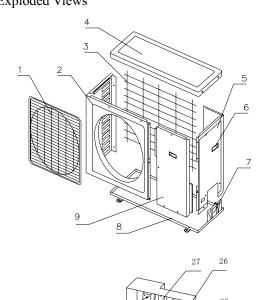

24 23 22

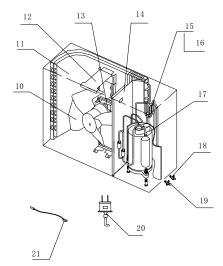


165

Quantity 1 1 1 1 1 1 1 1 1 1 1 1 1
1 1 1 1 2 1 1 1 1 1 1 1
1 1 2 1 1 1 1 1 1 1
1 1 2 1 1 1 1 1 1 1
1 2 1 1 1 1 1 1 1 1
2 1 1 1 1 1 1 1 1
1 1 1 1 1 1 1 1
1 1 1 1 1 1 1
1 1 1 1 1 1
1 1 1 1 1 1
1 1 1 1
1 1 1 1
1 1 1
1
1
1
1
1
1
1
1
1
1
1
1
1
2
1
1
1
$\frac{1}{1}$
2
1

Note:

- ② Only is part of ASGE-36A Model.
- $\ensuremath{\ensuremath{\ensuremath{\mbox{3}}}}$ Only is part of ASGE-36A with low ambient kit.

4) Model: ASGE-42A; Exploded Views

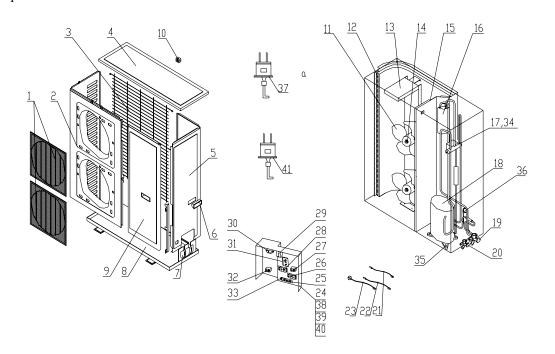

List			
No.	Name of part	Part code	Quantity
1	Front Grill	22414102	2
2	Front Plate	01435436	1
3	Protection Grill	01475432	1
4	Top Cover	01255262	1
5	Back Side Plate	01305434	1
6	Handle	26235253	3
7	Valve Support	01715001	1
8	Metal Base	01205433	1
9	Front Side Plate	01305431	1
10	Axial Flow Fan	10338731	2
11	Condenser Assy	01125246	1
12	Motor Support	01705431	1
13	Motor FW68G	15013110	2
14	Isolation Plate	01235440	1
15	Liquid-gas Support	07225011	1
16	4-way Valve	43000338	1
17	Compressor C-SBN373H8D	00129051	1
18	Gas Valve	07130212	1
19	Liquid Valve	071302392	1
20	Ambient Sensor(15K)	3900012126	1
21	Temperature Sensor (20K)	3900012121	1
22	Temperature Sensor (50K)	3900012129	1
		01395491	1
23	Electric Box	01395737①	
24	Wire Clamp	71010102	1
25	Terminal Board	42011044	1
26	Terminal Board	42011103	2
27	Terminal Board	420101851	1
28	Capacitor CBB61 3.5μF/450V	33010010	2
29	AC Contactor GC3-18/01KK/3TF421	44010226	1
	Overcurrent Prote	ector	
30	HD-13.2-22/UO-10-13	46020112	1
31	Phase Reverse Protector	46020052	1
32	Isolation Washer D	70410525	2
33	4-way Valve Coil	430004002	1
34	Compressor Gasket		0
35	Capillary Assy	04105242	1
	. , ,	460200061	
36	pressure switch	46020007	1
		4602001519 ①	
37	Transformer 57X25D	43110240	1
٠,		1.0210210	


38	Main PCB WZ4C352	3022403301	1
	Main PCB ZS401D	30224211 ①	1
39	pressure switch	46020007	1


Note:


① Only is part of ASGE-42A with low ambient kit

5) Model: ASGE-48A;

Exploded Views

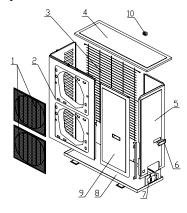

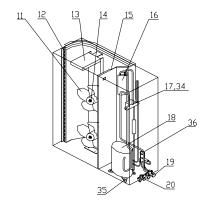

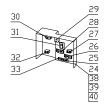





No.	Name of part	Part code	Quantity
1	Front Grill		0
2	Front Plate	01435436	1
3	Protection Grill	01475432	1
4	Top Cover	01255262	1
5	Back Side Plate	01305434	1
6	Handle	26235253	3
7	Valve Support	01715001	1
8	Metal Base	012054332	1
9	Front Side Plate	01305431	1
10	Protection Grill Gasket		0
11	Axial Flow Fan	10338731	2
12	Condenser Assy	01125257	1
13	Motor Support	01705431	1
14	Motor LW92A	15015451 ①	2
14	Motor LW92H	150154512	2
15	Isolation Plate	01235440	1
16	Liquid-gas Separator	07225011	1
17	4-way Valve	43000338	1
18	Compressor JT170G-P8Y1	00205222	1
19	Gas Valve	07130212	1
20	Liquid Valve	07130210	1
21	Ambient Sensor(15K)	3900012126	1
22	Temperature Sensor (20K)	3900012121	1
23	Temp. Limiter		0

24	Electric Box	01395736①	1
24	Electric Box	01395462	1
25	Wire Clamp	71010102	1
26	Terminal Board	42011044	1
27	Terminal Board	42011103	3
28	Terminal Board		0
29	Capacitor CBB61 4μF/500V	33010013	2
30	AC Contactor LC1D2501M7C	44010213	1
2.1	Overcurrent Protector		1
31	HD-13.2-22/UO-10-13	46020112	1
32	Phase Reverse Protector	46020052	1
33	Isolation Washer C	70410523	1
34	4-way Valve Coil	430004005	1
35	Compressor Gasket		0
36	Capillary Assy	04105255	1
		460200061	
37	pressure switch	46020007	1
		4602001519 ①	
38	Capacitor Clamp		0
39	Transformer 57X25D	43110240	1
40	Main PCB WZ4C352	3022403301	1
40	Main PCB ZS401D	30224211 ①	1

Note:


① Only is part of ASGE-48A with low ambient kit.

5.2 Indoor Unit

5.2.1 Duct Type

1) Model: ASDU-09A; ASDU-12A; ASDU-18A;

Exploded Views

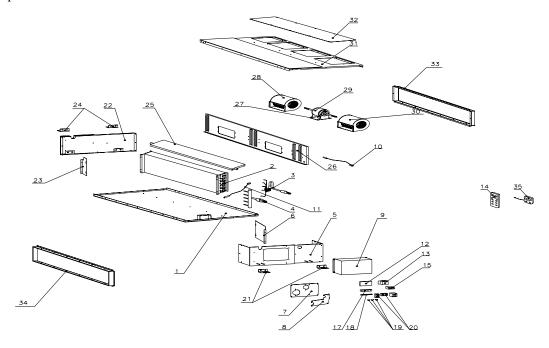

No.	Name of part	Part code	Quantity
1	Top Cover	01259051 ①②	1
1	Top Cover	01259064 ③	1
2		01039051 ①	
	Evaporator Assy	01039055 ②	1
		01038623 ③	
		032390521 ①	
3	Liquid Inlet Pipe	036324561 ②	1
		03239074 ③	
		03829073 ①	
4	Collecting Gas Pipe	036324551 ②	1
		03639072 ③	
_	I - G C: 1 - DI - 4 -	0130905101①②	1
5	Left Side Plate	0130866801③	1
(I	01079055 ①②	1
6	Left Support of Evaporator	01078629 ③	1
7	C 1 CL C C'1 DI	01499051 ①②	1
7	Seal of Left Side Plate	01498640 ③	1
0		01499054c	1
8	Seal of Connection Pipe	01498644 ③	1
9	Electric Box	01425703	1
10	Room Temp Sensor	3900012123	1
11	Tube Temp Sensor	390001921	1
12	Main Z8235	30228204	1
13	Transformer 54X25C	43110239	1
14	Remote controller	305050031	0
	Capacitor CBB611A 1uF/500V	33010089 ①	
15	Capacitor CBB611A 3uF/450V	33010027 ②	1
	Capacitor CBB611A 3.5uF/450V	33010010 ③	
17	Terminal Board	42010194	1
18	Isolation Washer C	70410523	1
19	Wire Clamp	71010102	1
20	Terminal Board 2-8	42011103	2
21	Hook	02112446	2
22	Right Side Plate	01309055	1
23	Left Support of Evaporator	01079056	1
24	Hook	02112446	2
25	W-4 T	01279051 ①②	1
25	Water Tray	01278633 ③	1
26	Ear Fired Dista	01339095 ①②	1
26	Fan Fixed Plate	01339058 ③	1

MAINTENANCE


27	Motor Support	01709058 ①②	_ 2
	Motor Support	01709056 ③	
28	Fan	22202030 ①②	_ 2
20	ran	15002401 ③	2
	Motor FG20C	15019053 ①	
29	Motor FG20E	15019522 ②	1
	Motor FG70B	15018322 ③	
30	Fan	22202029 ①②	2
31		01259086 ①②	1
31	Bottom Cover	01265296 ③	1
32	Bottom Cover Assy	01259054 ①②	1
33		01259056 ①②	1
33	Cover of Air-in	01258650 ③	1
34		01499055 ①②	1
34	Side Plate of Air intake	01499061 ③	1
35	Display Board Z4B351	30294213	1

Note:

- ① only is part of ASDU-09A Model.
- ② only is part of ASDU-12A Model.
- ③ only is part of ASDU-18A Model

2) Model: ASDU-24A;


Exploded Views

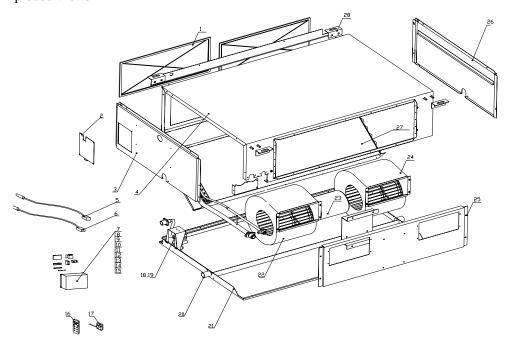

No.	Name of part	Part code	Quantity
1	air filter	11125303	2
2	Seal of Connection Pipe	01495302	1
3	Left Side Plate	01315328	1
4	Top Cover	01265301	1
5	temp.sensor (15K)	3900012123	1
6	temp.sensor (20K)	3900012121	1
7	Electric Box	01395490	1
8	Main PCB2 Z4B35	30228204	1
9	Transformer SC31	43110239	1
10	Capacitor CBB611A8uF/450V	33010014	1
12	Terminal Board 2-8	42011103	2
13	Terminal Board (5位)	42010194	1
14	Isolation Washer C	70410523	1
15	Wire Clamp	71010102	1
16	Remote controller	305050031	0
17	Display board Z4B351	30294213	1
20	Water Tray	01285301	1
21	Bottom Cover	01265304	1
22	Fan (right) SYP-160/200J	15012458	1
23	Motor FG500A	15705301	1
24	Fan (left) SYP-160/200J	15012454	1
25	Fan Fixed Plate	01325301	1
26	Right Side Plate	01315304	1
27	Evaporator Assy	01025301	1
28	Hook	02112446	4

3) Model: ASDU-36A; ASDU-42A; ASDU-48A;

Exploded Views

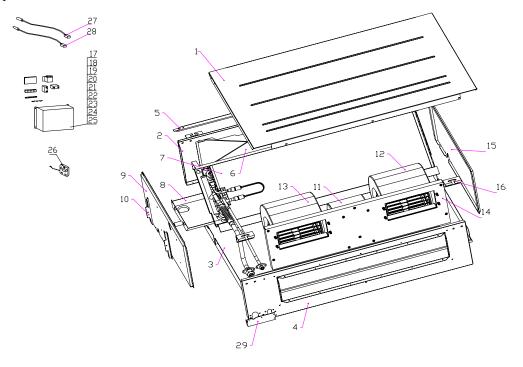


No.	Name of part	Part code	Quantity
1	Top Cover 3	01265240	1
2	Top Cover 2	01265242	1
3	Bottom Cover	15265302	1
4	Top Cover 1	01265239	1
5	end plate of air intake door	01375301	1
6	air filter	111253031	2
7	E A	01025249 ①②	
/	Evaporator Assy	01025274 ③	1
8	Water Tray Panel	01285306	1
9	Right Side Plate	01315311	1
10	Electric support	01729160	2
11	Motor FG500A	15019063	1
12	Fan (left) SYP-200/190J-1	15018603	1
13	Fan (right) SYP-200/190J-1	15018604	1
14	Fan Fixed Plate	01325220	1
15	Left Side Plate	01315308	1
16	Hook	02112466	4
17	Electric Box	01399152	1
18	Main PCB Z8235	30228204	1
19	Transformer 54X25C	43110239	1
20	Capacitor CBB611A 12uF/450V	33010734.	1
21	Electric Box cover	01425226	1
22	Terminal Board 2-8	42011103	3
23	Terminal Board (5)	42010194	1
24	Isolation Washer C	70410523	1
25	Wire Clamp	71010102	2
26	Display board Z4B351	30294213	1
27	temp.sensor (15K)	3900012123	1
28	temp.sensor (20K)	390001921	1
29	Seal of Connection Pipe(Valve)	01495305	1

- ① only is part of ASDU-36A Model.
- ② only is part of ASDU-42A Model.
- ③ only is part of ASDU-48A Model.


5.2.2 Cassette Type

1) Model: ASCU-12A; ASCU-18A;

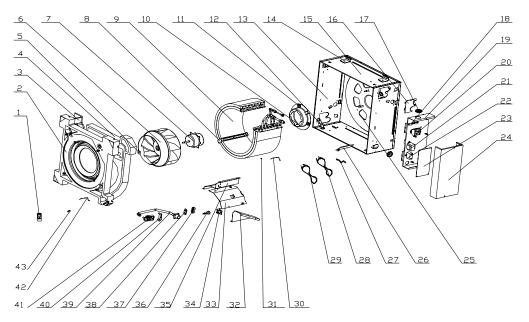

No.	Name of part	Part code	Quantity
1	Remote Controller Y512	305125063	0
2	Water Tray	20182703	1
3	Water Tray Foam for Fresh Air Intaking	12312702	1
4	Water Tray Foam	12312703	1
5	Fan Fixer	76712709	1
6	Centifugal Fan	10312702	1
7	Motor FN11T	15012707	1
8	Evap Support	01072714	1
9	Evaporator Assy	01029608	1
10	Motor Support	01702702	1
11	Motor Gasket	76712705	3
12	Water Tray support	01332706	4
13	Front Side Plate	01302741	2
14	Body Fixer	01332705	4
15	Right Side Plate	01302743	2
16	Tube-exit plate	01382719	1
17	Cable-cross Loop	76515202	2
18	Wire Clamp	71010103	1
19	Electric Box Assy	0140270501	1
20	Terminal Board	42010258	1
21	Transformer 48X26G	43110233	1
22	Capacitor CBB61 2.5uF/450VAC	33010026	1
23	Main PCB Z71351D	30227110	1
24	Electric Box Cover	01412723	1
25	Base Plate	01222712	1
26	Cord Baffle Plate	01362701	1
27	Connecting Wire	40030232	1
28	Connecting Cable		0
29	Connecting Cable		0
30	Tube Sensor	390000592	1
31	Sensor Insert B	42020063	1
32	Left Baffle Plate	01362703	1
33	Evap Connection	01072713	1
34	Water Level Switch Support	24212705	1
35	Right Baffle Plate	01362702	1
36	Water Level Switch	450127011	1
37	Pump Gasket 1	76712707	1
38	Pump Gasket 2	76712708	1
39	Pump Drainage	05232722	1
40	Pump Support	01332707	1
41	Water Pump PSB-7	43130320	1
42	Room Sensor	39000191	1
43	Wire Clamp	71010105	1

2) Model: ASCU-24A; ASCU-36A; ASCU-42A; ASCU-48A; Exploded Views

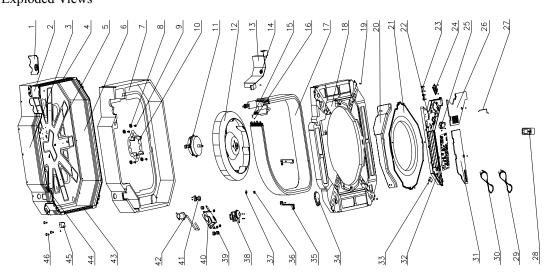

List	N. C	D 4 1	0 ::
No.	Name of part	Part code	Quantity
1	Tube Exit Plate	01382715	1
2	Body Fixed Plate	01332701	4
3	Front Side Plate	01302713	1
4	Left Side Plate	01302711	1
5	Base Plate	01222701	1
6	Rear Side Plate	01302709	1
7	Bottom Foam	52012721	1
8	Motor Gasket	76712711	4
9	Bolt	70212701	3
10	Motor Support	01702701	1
11	Motor FN35B	15012706	1
12	Centifugal Fan	10310101	1
13	Evaporator Linkage	01072732	1
14	Cable-cross Loop	76512702	1
15	Tube sensor	390001921	1
16	sensor insert B	42020063	1
		010027101 ①	1
1.7			
17	Evaporator Assy		
		01029409 ④	
18	Water Tray Assy	20182701	1
19	Rubber Stem		0
20	Electric Base Plate	01412721	1
21	Flow-guide Loop	10372722	1
22	Electric Box	01399621	1
23	Wire Clamp	71010102	1
24	Terminal Board (5位)	42010258	1
25	Transformer	43110233	1
26	Electric Box Cover I	20102702	1
27	Room Sensor	390001911	1
28	Remote Controller Y512	305125063	0
29	Signal Cable	-	0
30	Signal Cable		0
31	Electric Box Cover II	20102703	1
32	Mainboard Z71351E	30227111	1
33	Capacitor CBB61 3.5uF/450V	33010012	1
34	Drainage Plastic	05230025	1
35	Evap Support	01072707	2
36	Nut with Washer M6	70310012	7
37	Fan Fixer	10312701	1
38	Water Pump	43130324	1
20	water rump	75150524	1


MAINTENANCE

39	Pump Gasket	76712702	3
40	Pump Support	01332721	1
41	Water Level Switch	45010201	1
42	Pump Drainpipe	05230026	1
43	Right Side Plate	01302712	1
44	Cable-cross Block		0
45	Pump Cover Plate	01252713	1
46	Bolt		0

- 1 only is part of ASCU-24A Model.
- 4 only is part of ASCU-48A Model.

5.2.3 Ceiling Type

1) Model: ASFU-09A; ASFU-12A; ASFU-18A;

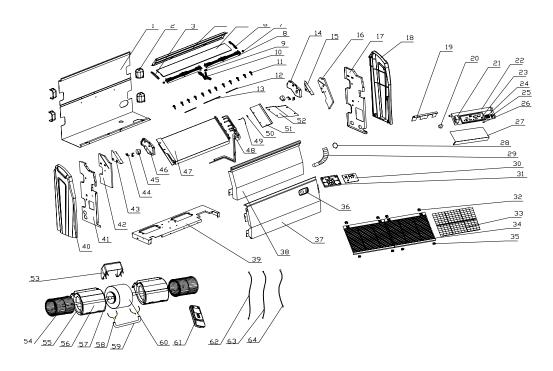


JIST			
No.	Name of part	Part code	Quantity
1	Rear Side Plate	01302013	1
2	Handle	26232001	4
3	Left Decoration Plate	261124152	1
4	Rear Side Plate of Air Outlet	0130201501	1
5	Louver	1051953202	1
6	Right Decoration Plate	261124162	1
7	Shaft of Louver II	10512026	2
8	Louver Support	24212019	2
9	Shaft of Louver I	10512025	1
10	Louver Fixer	24212018	1
11	Swing Louver	10512027	12
12	Connecting Lever	10582009	1
13	Connecting Lever	10582008	2
14	Right Swing Motor Fixer	26152006	1
15	Right Fixing Plate of Evaporator	01072411	1
16	Foam of Right Side Plate	12312404	1
17	Right Fixing Plate	01332404	1
18	Right Decoration Panel	26112027	1
19	Pipe Clamp Plate	0107243701	1
	Capacitor CBB611A 1uF/450	33010089 ①	
20	Capacitor CBB611A 1.5uF/450V	33010020 ②	1
	Capacitor CBB611A 3uF/450V	33010027 ③	
21	Transformer 57X25C	43110237	1
22	Electric Des	01402407 ①	1
22	Electric Box	0140240701 ②③	1
23	Main PCB Z7A251B	30227021	1
24	Terminal Board	42011159	1
25	Wire Base	24253001	1
25	Wire Clamp	24253002	1
26	Fuse 5A 250VAC	46010013 ②③	1
27	Cover of Electric Box	01412408	1
28	Pipe Clip	70812001	1
29	Drainage Pipe	05235433	1
30	Display Board 5T52	30545654	1
31	Electric Box	20102138	1
32	Front Grill Clip 1	26252002	2
33	Filter	11122013	1
34	Front Grill	22412010	1
35	Front Grill Clip 2	26252003	2
36	Buttons Panel	201620041	1
37	Front Panel	01532001 ①	1

		01532001P ②③	
20	W. T. D. I	01272205 ①	
38	Water Tray Panel	01272205P ②③	1
39	Motor Support	01709532	1
40	Left Decoration Panel	26112028	1
41	Left Fixing Plate	01332405	1
42	Left Side Foam	12312403	1
43	Left Fixing Plate of Evaporator	01072410	1
44	Motor Clamp	26112026	4
45	Step Motor MP35CA	15212402	2
46	Left Swing Motor Fixer	26152005	1
		01032466 ①	
47	Evaporator Assy	01032467 ②	1
		01032468 ③	
		03222465 ①	
	Liquid-intake Pipe Components	03222519 ②	1
48		03222520 ③	
48	Air Collecting Pipe Components	03533200 ①	
		03533425 ②	1
		03533428 ③	
49	Temp Sensor (20K)	39000194	1
50	Temp Sensor Insert	42020063	1
51	Water Lead Panel	01362001	1
52	Cover of Evaporator	01072409	1
53	Fixed Mount	01708763	1
54	Centrifugal Fan	10312401	2
55	Rear Snail Shell	22202032	2
56	Front Snail Shell	22202031	2
57	Axes Connector		0
58	Bar Clasp	70819522	4
59	Ноор	70819521	1
60	Motor PG10H	15707302 ①②	
	Motor PG40F	157073024 ③	1
61	Remote Controller Y512	305125063	0
62	Connecting Cable		0
63	Connecting Cable		0
64	Signal Cable	4001023214	1

- ① only is part of ASFU-09A Model.
- 2 only is part of ASFU-12A Model.
- ③ only is part of ASFU-18A Model.

2) Model: ASFU-24A;

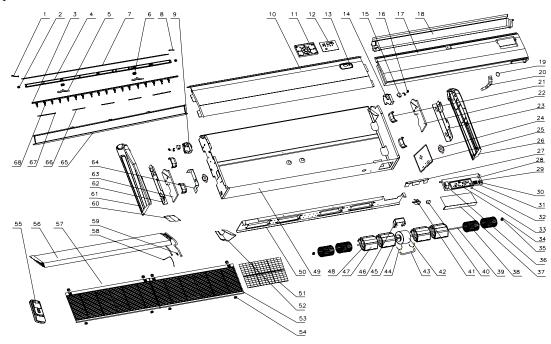


No.	Name of part	Part code	Quantity
1	Left Decoration Plate	261124172	1
2	Shaft of Louver I	10512025	2
3	Swing Louver Fixer	013324232	1
4	Louver Support	24212020	3
5	Louver Fixer	24222016	4
6	Louver	105124042	1
7	Shaft of Louver II	10512026	2
8	Right Decoration Plate	261124212	1
9	Left Swing Motor Fixer	26152007	1
10	Front Panel	01532414	1
11	Electric Box	20102138	1
12	Display Board 6152BJ	30545654	1
13	Buttons Panel	20162004	1
14	Right Swing Motor Fixer	26152408	1
15	Step Motor MP35CA	15212402	2
16	Motor Clamp	26112026	4
17	Water Tray	01272412	1
18	Auxiliary Water Tray	01272413	1
19	Pipe Clip	70812001	1
20	Drainage Pipe	05235433	1
21	Handle	26232001	4
22	Foam of Right Side Plate	12312408	1
23	Right Fixing Palte	01332404	1
24	Support of Motor Bearing	01792408	2
25	Fixer of Motor Support	01792409	1
26	Right Decoration Panel	26112033	1
27	Pipe Clamp	01072424	1
28	Electric Box	0140240701	1
29	Wire Base	24253001	1
30	Wire Clamp	24253002	1
31	Terminal Board RS9413G	42011159	1
32	Fuse 5A 250VAC		0
33	Main PCB Z7A251B	`30227021	1
34	Ring of Bearing	76512404	2
35	Fan Bearing	76512210	2
36	Transformer 57X25C	43110237	1
37	Cover of Electric Box	01412408	1
38	Centrifugal Fan	10312401	4
39	Rotary Axis	73012401	2
40	Capacitor CBB61 3uF/450V	33010027	1

MAINTENANCE

41	Capacitor Fixer		0
42	Motor FN100B	`15012406	1
43	Motor Fixer	01722409	1
44	Motor Clamp	01702405	3
45	Axes Connector	73012403	2
46	Motor Fixing Plate	01332426	1
47	Front Snail Shell	22202031	4
48	Rear Snail Shell	22202032	4
49	Rear Side Plate	01302430	1
50	Motor Support	01702410	1
51	Filter	11122012	1
52	Water Lead Plate	01362401	1
53	Front Grill	22412011	1
54	Front Grill Clip 2	26252003	2
55	Remote Controller Y512	305125063	0
56	Evaporator Assy	010024052	1
57	Front Grill Clip 1	26252002	2
58	Temp Sensor	390001215	1
59	Temp Sensor Insert	42020063	1
60	Cover of Evaporator	01072417	1
61	Left Decoration Panel	26112032	1
62	Left Fixing Plate	01332405	1
63	Left Side Foam	12312405	1
64	Bearing Fixing Plate	01332407	1
65	Rear Side Plate of Air Outlet	01302405	1
66	Connecting Lever	10582008	3
67	Connecting Lever	10582009	2
68	Swing Louver	10512028	22

3)Model: ASFU-36A; ASFU-42A; ASFU-48A;

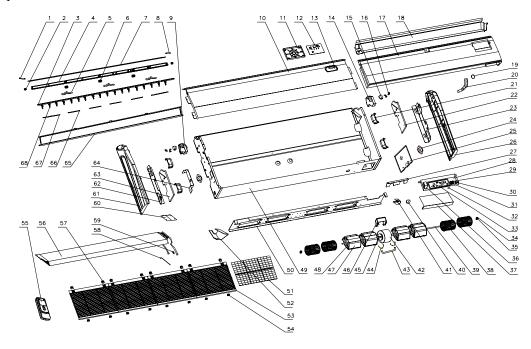

1 Left Decoration Plate 261124151 ① 1 2 Shaft of Louver I 10512025 3 3 Swing Louver Fixer 0133241801 ① 1 4 Louver Support 24212019 4 5 Louver Fixer 24212018 3 6 Shaft of Louver II 10512026 2 7 Louver 105124081 ① 1 8 Right Decoration Plate 261124161 ① 1 9 Left Swing Motor Fixer 26152005 1 10 Front Panel 015324091 1 11 Display Box 20102138 1 12 Display Board 5T52 30545654 1 13 Buttons Panel 01544106 ① 1 14 Right Swing Motor Fixer 26152006 1	
261124152 ②③ 3 3 3 3 3 3 3 3 3	
3 Swing Louver Fixer 0133241801 ① 0133241802 ②③ 1 4 Louver Support 24212019 4 5 Louver Fixer 24212018 3 6 Shaft of Louver II 10512026 2 7 Louver 105124081 ① 105124081 ① 105124082 ②③ 1 8 Right Decoration Plate 261124161 ① 261124162 ②③ 1 9 Left Swing Motor Fixer 26152005 1 10 Front Panel 015324091 1 11 Display Box 20102138 1 12 Display Board 5T52 30545654 1 13 Buttons Panel 01544106 ① 20162003 ②③ 1	
1 1 1 2 2 2 3 3 4 2 3 3 4 4 2 2 3 4 4 5 2 4 2 2 2 3 4 5 5 2 2 2 2 2 3 5 2 2 2 5 2 2 5 2 5 2 5 2 5 2 5 2 5 2 5 2 5 5	
1	
5 Louver Fixer 24212018 3 6 Shaft of Louver II 10512026 2 7 Louver 105124081 ① 1 8 Right Decoration Plate 261124161 ① 1 9 Left Swing Motor Fixer 26152005 1 10 Front Panel 015324091 1 11 Display Box 20102138 1 12 Display Board 5T52 30545654 1 13 Buttons Panel 01544106 ① 1 13 Buttons Panel 0162003 ②3 1	
6 Shaft of Louver II 10512026 2 7 Louver 105124081 ① 1 8 Right Decoration Plate 261124161 ① 1 9 Left Swing Motor Fixer 26152005 1 10 Front Panel 015324091 1 11 Display Box 20102138 1 12 Display Board 5T52 30545654 1 13 Buttons Panel 01544106 ① 1 13 Buttons Panel 1	
7 Louver 105124081 ① 105124082 ②③ 1 8 Right Decoration Plate 261124161 ① 261124162 ②③ 1 9 Left Swing Motor Fixer 26152005 1 10 Front Panel 015324091 1 11 Display Box 20102138 1 12 Display Board 5T52 30545654 1 13 Buttons Panel 01544106 ① 20162003 ②③ 1	
7 Louver 1 8 Right Decoration Plate 261124161 ① 9 Left Swing Motor Fixer 26152005 10 Front Panel 015324091 11 Display Box 20102138 12 Display Board 5T52 30545654 13 Buttons Panel 01544106 ① 13 Buttons Panel 1	
Right Decoration Plate 261124161 ①	
8 Right Decoration Plate 261124162 ②③ 1 9 Left Swing Motor Fixer 26152005 1 10 Front Panel 015324091 1 11 Display Box 20102138 1 12 Display Board 5T52 30545654 1 13 Buttons Panel 01544106 ① 1 13 Buttons Panel 1	
261124162 ②3	
10 Front Panel 015324091 1 11 Display Box 20102138 1 12 Display Board 5T52 30545654 1 13 Buttons Panel 01544106 ① 1 20162003 ②③ 1	
11 Display Box 20102138 1 12 Display Board 5T52 30545654 1 13 Buttons Panel 01544106 ① 20162003 ②③ 1	
12 Display Board 5T52 30545654 1 13 Buttons Panel 01544106 ① 20162003 ②③ 1	
13 Buttons Panel 01544106 ① 1 20162003 ②③	
13 Buttons Panel 20162003 ②③	
20162003 ②③	
14 Pight Swing Motor Fiver 26152006	
14 Right Swing Motor Fixer 26152006 1	
15 Step Motor MP35CA 15212402 1	
16 Motor Clamp 26112026 4	
17 Water Tray 01272410 1	
18 Auxiliary Water Tray 01272409 1	
19 Pipe Clip 70812001 1	
20 Drainage Pipe 05235433 1	
21 Handle 26232001 4	
22 Foam of Right Side Plate 12312402 1	
23 Right Fixing Palte 01332404 1	
24 Support of Motor Bearing 01792408 2	
25 Fixer of Motor Support 01792407 1	
26 Right Decoration Panel 26112027 1	
27 Pipe Clamp 01072425 1	
01402407 ①	
28 Electric Box 0140240701 ②③	
29 Wire Base 24253001 1	
30 Wire Clamp 24253002 1	
31 Terminal Board 42011159 1	
32 Fuse 5A 250VAC 0	
33 Main PCB Z7A251B 30227021 1	
34 Ring of Bearing 76512404 2	

MAINTENANCE

35	Fan Bearing	76512210	2
36	Transformer 57×25C	43110237	1
37	Cover of Electric Box	01412408	1
38	Centrifugal Fan	10319051	4
39	Rotary Axis	73012402	2
40	Capacitor CBB611A 6uF/500V	33010037	1
41	Capacitor Fixer		0
42	Motor FN150A	15012405	1
43	Motor Fixer	01722410	1
44	Motor Clamp	01702409 ①②	2
	Motor Clamp	01702405 ③	2
45	Axes Connector	73012403	2
46	Motor Fixing Plate	01332425	1
47	Front Snail Shell	22202030	4
48	Rear Snail Shell	22202029	4
49	Rear Side Plate	01302431	1
50	Motor Support	01702411	1
51	Filter	11122013	1
52	Water Lead Plate	01362407	1
53	Front Grill	22412010	4
54	Front Grill Clip 2	26252003	2
55	Remote Controller Y512	305125063	0
		01029610 ①	
56	Evaporator Assy	01029612 ②	1
		01029613 ③	
57	Front Grill Clip 1	26252002	2
58	Temp Sensor	39000194	1
59	Temp Sensor Insert	42020063	1
60	Cover of Evaporator	01072409	1
61	Left Decoration Panel	26112028	1
62	Left Fixing Plate	01332405	1
63	Left Side Foam	12312401	1
64	Bearing Fixing Plate	01332406	1
65	Rear Side Plate of Air Outlet	01302416	1
66	Connecting Lever	10582008	2
67	Connecting Lever	10582009	4
68	Swing Louver	10512027	26

- ④ only is part of ASFU-36A Model.
- ⑤ only is part of ASFU-42A Model.
- ⑥ only is part of ASFU-48A Model.